



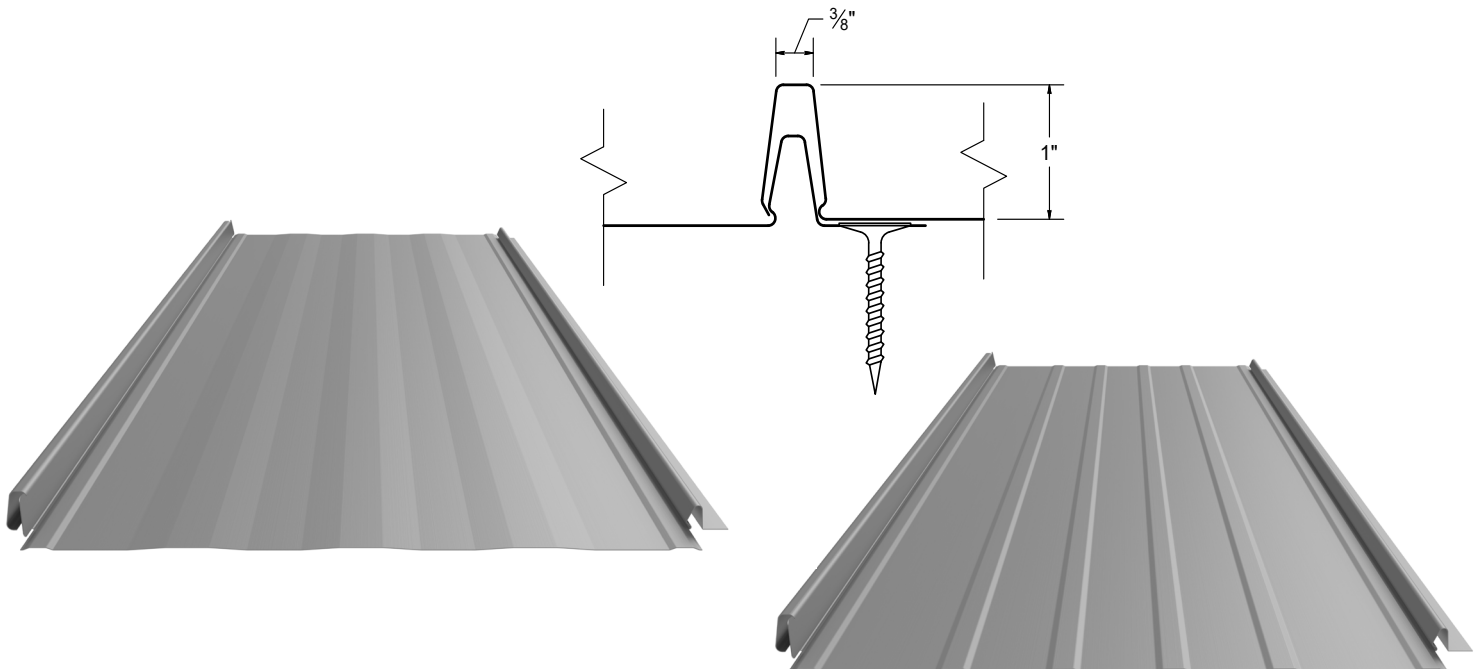


Easy-Lock™ Installation Guide

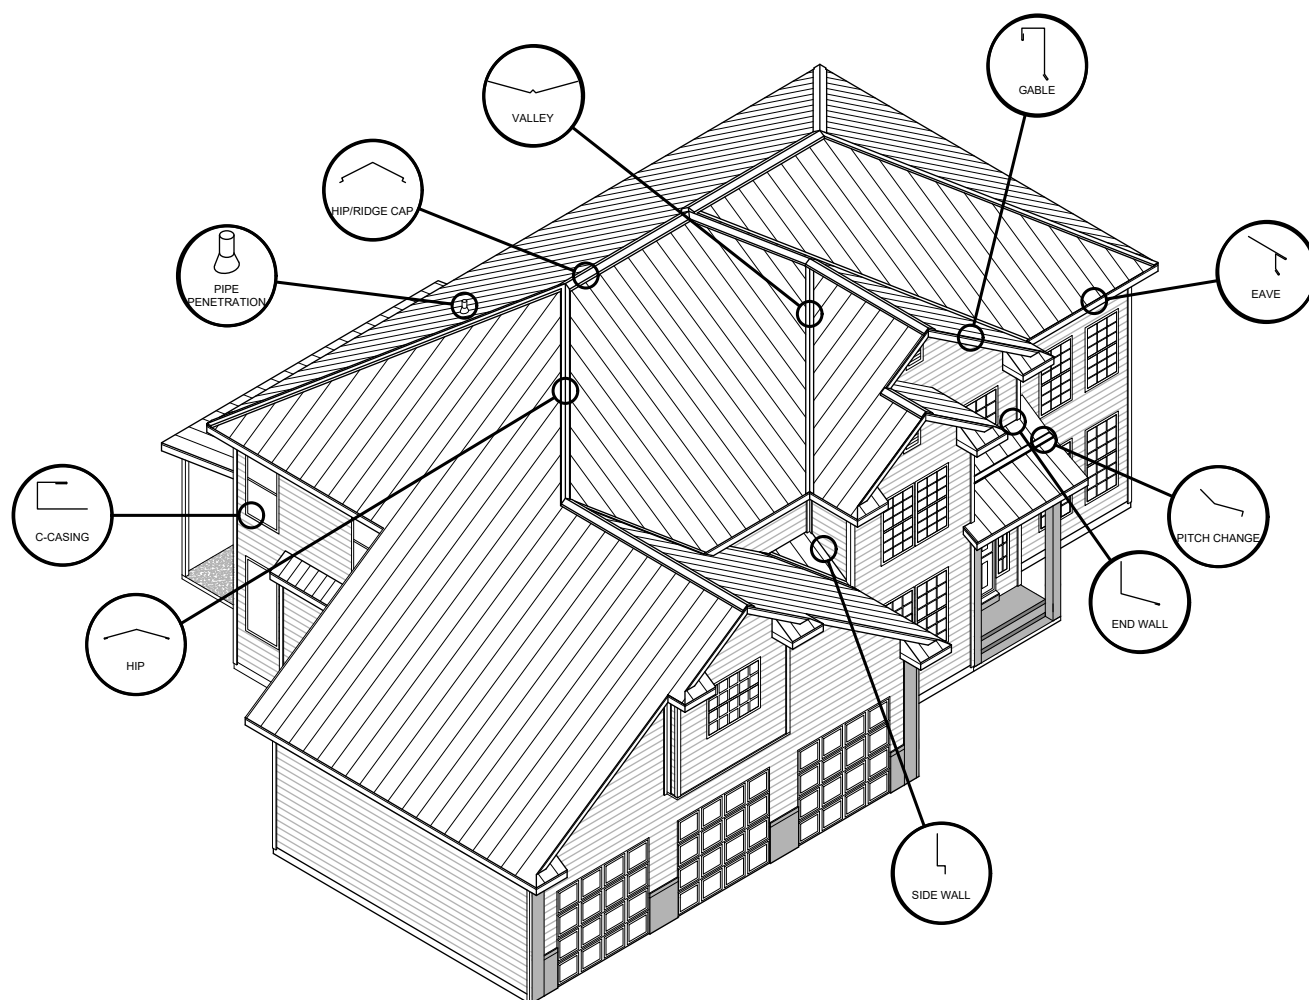

● Panel Specifications.....	4-5	● WT Vented Ridge Detail.....	23
● Introduction.....	6	● Valley - High Pitch Detail.....	24
● Handling & Storage.....	7	● Valley - Low Pitch Detail.....	25
● Taylor Delivery Fleet.....	8	● Box Gable Detail.....	26
● Delivery & Will Call/Loading.....	9	● Prow Detail.....	27
● Tools & Equipment.....	10	● Sidewall Detail.....	28
● Fasteners.....	11	● Peak Flashing Detail (R.E.C).....	29
● Roof Preparation.....	12	● WT Peak Flashing Detail (R.E.C).....	30
● Roof Layout.....	13-14	● Pitch Change Detail.....	31
● Reversing Strip.....	15	● Hemmed Endwall Detail.....	32
● Panel Preparation.....	16	● Vented / EW17 Endwall Detail.....	33
● Panel Installation.....	17	● WT Vented Endwall Detail.....	34
● Low Pitch Eave Detail.....	18	● End Dam Detail.....	35
● Hook Eave Detail.....	19	● Eave to Gable Transition.....	36-38
● Hook Eave with Gutter Detail.....	20	● Skylight/Chimney.....	39-41
● Hip/Ridge Detail.....	21	● Pipe Penetration Applications.....	42-45
● Vented Ridge Detail.....	22	● Standard Flashings.....	46-52
		● Order Form.....	53




12" & 16" coverage options

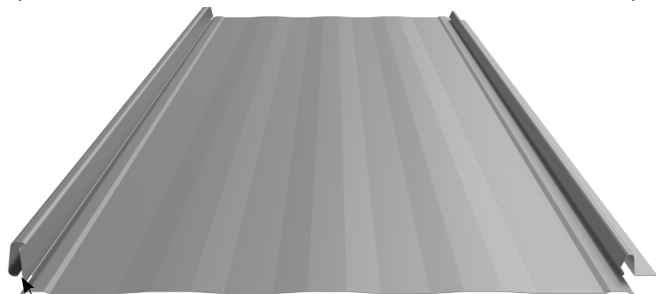


STRIATIONS WITH SCREW CONCEALER

Best choice to help mitigate oil canning

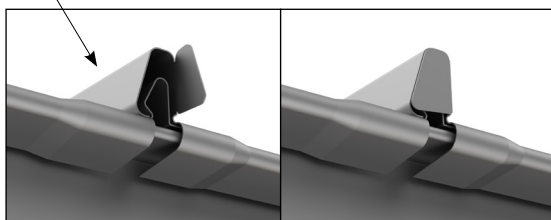


Tabbing feature can help minimize debris from entering in between seams, and gives a more finished appearance.

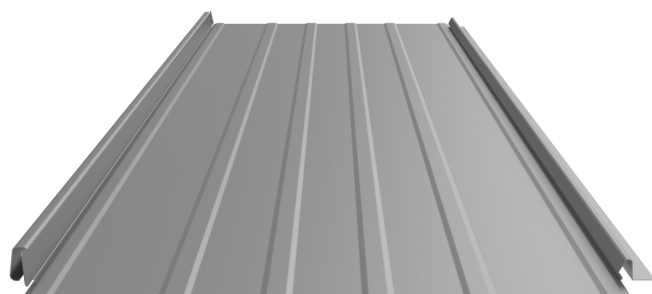


ACCENT RIBS WITH SCREW CONCEALER

3 Accent ribs for 12" panel
4 Accent ribs for 16" panel
(16" panel shown)

LOCK SEAM DETAIL

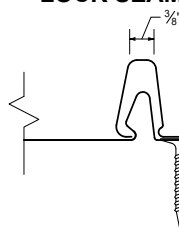

REVERSE LAP DETAIL

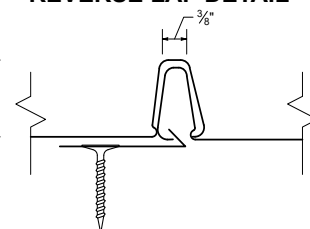

KEY FEATURES

- Manufactured in Salem, OR, Auburn, WA, Sacramento, CA and Riverside, CA
- 12" & 16" coverage options
- 1" rib height with 3/8" flat top for ease of flashing attachment
- 26, 24 & 22 Tru-Gauge™ steel and .032" aluminum
- Aluminum recommended within 1000 ft of salt water (*not required*)
- 16 & 20 oz. Copper (*Inquire for availability & price*)
- 3' to 35' panel lengths (*Inquire for longer lengths*)
- Panel options: Striations, Accent Ribs, and Flat Pan
- 3:12 minimum pitch recommended (*Inquire for lower pitches*)
- Factory-notched and tabbed panels available
- Vertical interlocking application: allows installation from both directions starting at any location
- Patented no-siphon lock seam
- Concealed fasteners: fasteners cannot leak
- Pre-slotted fastener flange: allows expansion & contraction of panel (high wind clips available for panel lengths over 35')

Taylor Metal Products has improved our Kynar 500® PVDF resin based coating warranties! With decades of time-tested performance, Kynar 500® resins deliver long-term durability against harsh climates, shielding projects against harsh sun and UV rays and resisting fading, chalking, and cracking much longer than standard coatings.



FINISHES

- Limited Lifetime residential paint warranty
- 40 year commercial paint warranty
- 21 Standard Colors, 5 Metallic Colors and 4 Specialized Materials
- Kynar 500® (PVDF) Paint System - the ultimate in exterior durability and color retention
- "Cool" color pigments are specially designed to reflect infrared light, reducing heat gain to dwelling, and conform with ENERGY STAR® criteria
- Superior quality, two coat, 70% resin finish, applied at a 1 mil. thickness
- "Oil Canning" is an inherent characteristic of roof and wall products, and not a defect, which is not a cause for panel rejection


MATERIAL SPECIFICATIONS

- 26, 24 & ▲ 22 Tru-gauge™ Kynar 500® (PVDF) Painted Steel G-90 Galvanized or AZ-50
- ♦ .032" Kynar 500® (PVDF) Painted Aluminum
- 24 & 22 gauge bare ZINCALUME® Plus AZ-55
(No finish warranty – 25 yr. perforation warranty)
- 22 gauge Rusteel Plus™ (A606)
- 16 & 20 oz. Copper (Inquire for availability & price)
- Kynar 500® (PVDF) and substrate testing data available (See website)
- PVDF is a fluoropolymer that is manufactured under the trademarked names Kynar 500® and Duranar® (PPG). Paint finishes containing a minimum 70% PVDF resin meet the high-performance weathering criteria established by the American Architectural Manufacturing Association and are allowed to carry the Kynar 500® trademarked name. ZINCALUME® & ZINCALUME® Plus are registered trademarks of Bluescope Ltd. Galvalume® is a registered trademark of BIEC International, Inc. Vintage® is a registered trademark of Steelscape, Inc. Kynar® and Kynar 500® is a registered trademarks of Arkema, Inc.


TESTING

-  Code compliance UL Evaluation Report
UL ER #25913-01
- UL Construction No. 529
- UL 580 Class 90 - Wind Uplift
- UL 790 Class A (ASTM E108) - Fire rated
- UL 2218 Class 4 - Impact (hail) rated
- ASTM A653/A924 - G-90 Galvanized
- ASTM A792 - ZINCALUME®/Galvalume® AZ-50/55
- ASTM B209 - Aluminum Substrate
- ASTM D6578 - Anti-Graffiti
- ASTM E2886 - Ember Resistant ridge/endwall/peak flashings available

STANDARD COOL KYNAR 500® COLORS

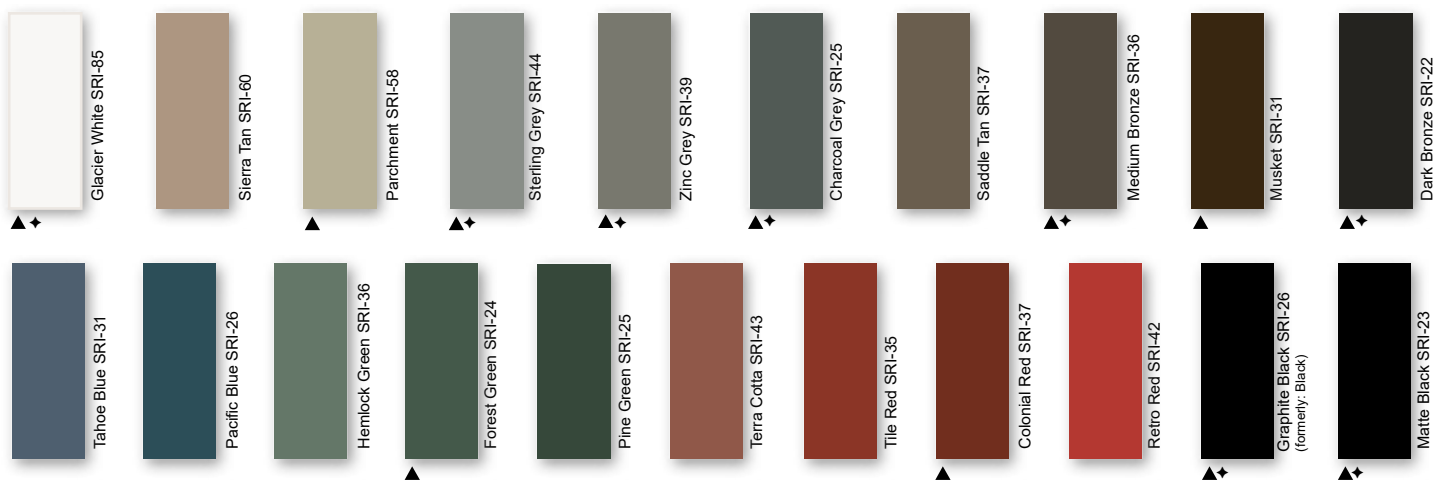

PREMIUM METALLIC COOL KYNAR® COLORS

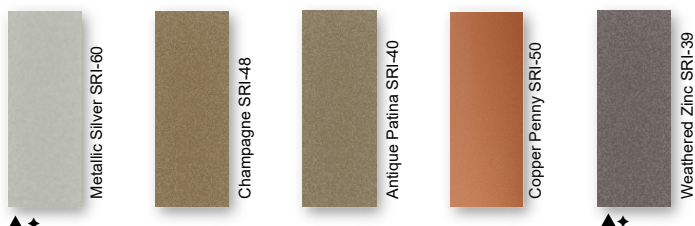

SPECIALIZED MATERIAL



These printed chips provide a close representation of the colors.

Metal samples are available upon request. Coatings are low gloss 10-15% sheen.
SRI = Solar Reflectance Index. SRI values listed above are in accordance with ASTM E 1980 and are based on actual testing. ***Oil canning is not a cause for material rejection***



Taylor Metal Products, Easy-Lock™ Standing Seam roofing product is designed for residential and light commercial applications, however it is not limited to these uses.

The Easy-Lock™ Standing Seam concealed fastener roofing system is an architectural roofing system and is designed to be weather tight, attractive, easy to install and to provide long life.

These installation instructions are intended to offer suggested application procedures for common building construction. No attempt is made to provide installation details for every application or possible use.

Please contact Taylor Metal Products for use of custom flashing details as they pertain to specific conditions or to discuss a specific project.

Conformity to local building codes, details for specific applications, and use of safety and health procedures is the sole responsibility of the installer.

Taylor Metal Products, assumes no liability for the improper installation of the Easy-Lock™ panel nor for any personal injury or property damage that may occur with the product's use.

Flashing weight calculations are based on 24-gauge material.

***Oil Canning** - All light gauge metals can display waviness often referred to as "oil canning." This is caused by steel mill tolerances, substrate variation and relative reflectivity. "Oil canning" is an inherent characteristic of steel products, not a defect, and is not a cause for material rejection.

Handling

Handle materials with care when off loading or moving materials to avoid damage to panels or flashings. Long panels may require two or more pick-up points, properly spaced to avoid damaging panels. Plan ahead. Contact Taylor Metal Products for recommendations on handling/hoisting long panels.

Wear clean cotton gloves when handling copper or unpainted ZINCALUME® to avoid leaving fingerprints and smudges. While finger-prints or smudges will not harm the material, they will temporarily leave markings on the material until the material weathers.

Wear clean, soft-soled shoes when walking on roofing panels to avoid damage to the painted finish. Take care that sand, gravel, dirt etc. sticking to your shoes is not carried onto the roof, scratching or otherwise damaging the finish on the roofing material.

Walking on asphalt impregnated felt paper, especially on a hot day, can cause the asphalt to stick to your shoes and be tracked onto the roofing material. Do not walk on major ribs of panels. Do not walk on panels that have not been completely installed.

Take care when painting to avoid getting over spray on the roofing material. Remember that wind can carry paint particles some distance. Over spray can cause the finish of the roofing material to look dull and may void your warranty.

Do not allow panels to contact preservative-treated lumber. Water and ice shield material is effective in preventing a corrosive reaction between steel products and pressure-treated lumber.

Storage

Store the panels, flashings, and accessories in a dry, well ventilated area, on level ground. Slightly elevate one end of bundles to allow drainage of wet materials. Support panels with blocks throughout escalation in elevation to prevent permanent deformation. If covering, allow ventilation around the panels.

Protect panels against standing water and condensation between adjacent surfaces. If panels become wet, immediately separate sheets, wipe dry with clean cloth, and keep sheets separate for air-drying.

Painted metal roofing panels will have a clear plastic film applied to the lower rib of the panel to protect the seam during transportation and handling. Flashing and flat sheet may have a plastic film for protection. Remove this film prior to installation of the panels.

Products with film should not be stored in direct sunlight or under other UV source, and should not be left in extreme heat or cold for long periods.

Secure materials on the ground or roof to prevent winds from moving the materials, especially when leaving the site. Wind-blown materials may cause damage to the material, property or persons. Avoid installing panels in windy conditions.

Safety considerations are the responsibility of the installer and their crew. Be sure to **use common sense** and accepted industry standard safety practices when installing roofing materials. Always use proper safety equipment and attire to minimize risk of cuts or other injuries.

Taylor Delivery Fleet



Delivery Fleet

Taylor Metal Products prides itself with quick lead times delivered with our fleet of semi trucks. Our fleet of trucks are owned and operated by TMP. All of our drivers are Taylor Metal Products employees, so when your truck rolls in to deliver, you are dealing with Taylor Metal Products.

Expect consistent and exceptional service with short lead times. The inhouse fleet allows for efficient and cost-effective delivery.



Mounted on the rear of our semitrailer, the trailer-mounted "piggy-back" forklift will accompany you right to your place of use, opening up unprecedented possibilities in terms of transportation. It can travel sideways, carrying panels up to 40' long, allowing delivery in locations that would typically be considered impossible to reach.

Save time and effort while avoiding potential loading and transport issues; have experienced TMP personnel deliver and unload your order.



Delivery

We will make every attempt to deliver material to the desired location. We may be unable to gain access on tight corners or steep terrain. If the site is deemed inaccessible by our driver, the customer may choose an alternate delivery site within a reasonable proximity. If we are unable to make the alternate delivery, additional charges may be assessed.

The customer is responsible for:

- Determining adequate access for delivery ahead of time.
- Meeting the delivery at the agreed upon time.
- Providing adequate resources (1-4 people as needed) for off loading materials.
A charge of \$100 per hour may be added for deliveries that go beyond their allotted time.
- Checking the shipment at the time of delivery.
- Verifying material quantities against the shipping/packing list.
- Noting any damage or discrepancies upon the paper work at the time of delivery and notifying Taylor Metal Products within 48 hours of delivery.

Delivery times are usually scheduled one day in advance. Taylor Metal Products will make every effort to make the delivery at the scheduled time. Please be aware that there may be conditions beyond our control such as traffic, mechanical failures, road closures, etc. which may affect our schedule. If a delay is expected, you will be notified in advance of delivery.

Will Call/Loading

Flatbed trailers and trucks are best suited to transport metal roofing materials. These can be loaded from the side with a forklift and tied down in a safe and secure manner.

We are not able to load materials onto vehicles and/or trailers which are not suitable or may be hazardous to load. Please be aware that if we find a vehicle to be inappropriate, we reserve the right to refuse to load your order.

Unacceptable examples include: boat trailers, vans, buses, motor homes, campers and box trailers. Pickup racks which do not have sufficient supports for the weight or are not long enough to support bundles are also unacceptable.

Taylor Metal Products is **not** responsible to tie down loads nor do we provide any tie down materials. Please bring tie downs to secure your load (string or twine are **not** acceptable for this purpose).

Consider having your order delivered on one of our trucks with a piggy back forklift.



The following tools/safety equipment may be used for proper installation:

- Screw Gun: Clutch type, variable torque, cordless screw guns will give the best results.
 - Extra batteries
 - Bit holder - magnetic
 - #2 square drive bits or philips drive bits (for panel screws)
 - 1/4" Hex head - magnetic - bit driver (for woodfast flashing screws)
 - 1/8" drill bit (for rivets & pre-drilling fastener holes)
 - Belt & holster (keeps all the above tools safely on your hip)
- Cutting Tools:
 - Cutters/Offset (curved jaw) left & right (for precision cutting, long cuts)
 - Snips (straight jaw) left & right (for short cuts & circular cuts)
 - Electric Shears (aids in long panel rips)

CAUTION: POWER SAWS MAY CAUSE PANEL DAMAGE!

TMP recommends cutting panels and flashings with tin snips or shears.

 
 
We do NOT recommend the use of saw blades or abrasive wheels - use may void warranties and reduce longevity, especially in marine environments.

Other Tools:

- DeBurring Tool
- Hole Punch (for pre-punching holes in metal)
- Rubber Mallet - SoftType (for adjusting panels & flashings)
- Quick Square, Framing Square & Bevel Square (aids in squaring flashings & panels)
- Duck Bill Vise Grips/Pliers (for various bending)
- Upender Tools (used for panel-prep, available at TMP)
- Edge Rolling Tool (used to turn up cut panel edges at sidewall and gables)
- Tape Measures
- Rivet Tool (for riveting flashings)
- Marking pen or grease pencil
- Chalk Line (for marking long panel rips and to align panels)
- Protective gloves to protect hands
- Cotton gloves for working with copper (to protect against fingerprints on finish)
- Ear plugs
- Safety harness kit

WARNING : Filings, debris and metal chips must be wiped off panels each day to avoid corroding the panels and causing rust specks or stains. Water can cause non-finished metal shavings to bind to panels after rust develops damaging panels. Failure to properly install panels and remove debris may void the warranty.

TMP recommends the following fasteners:

FASTENER	DESCRIPTION	USE
	Pancake Head, Sharp point #10 x 1" #2 Phillips Head	The pancake head screw is recommended for panel attachment and is a concealed fastener.
	Waferhead Srew, Sharp point #9-16 x 1" #2 Phillips/Square Drive #9-16 x 1-1/2" #2 Square Drive	Waferhead screws are used for attaching the panels to a wood deck or substrate. They are concealed fasteners.
	Lath Head Screw, Sharp Point #8 x 9/16"	While generally not recommended for most applications, this concealed fastener is useful for areas where a longer fastener will penetrate the substrate and exhibit an objectionable appearance, such as exposed overhangs. The pull out rating for this fastener is less than the waferhead, so these fasteners need to be placed more often.
	Woodfast Screw, Sharp Point #9-16 x 1" 1/4" Hex Drive- Color Match #9-16 x 1/2" 1/4"	Woodfast screws are recommended for attaching metal to wood in some cases metal to metal.
	Stitch Screw, Sharp Point #12 x 3/4" 1/4" Hex Drive-Color Match	Stitch Screws are used to attach metal to metal such as lap joints in flashing. They can be used interchangeably with rivets.
	Lap Tek Stitch #14 x 7/8" Hex Drive-Color Match	Stitch screws are used to attach metal to metal such as lap joints, trim to trim, trim to panel, and side lap attachment. They can be used interchangeably with rivets.
	Rivets #43 (1/8" x 1/8") Stainless Steel rivet Color Match or non-painted.	Rivets are used to attach metal to metal such as lap joints in flashing.

Roof Preparation



New Construction

Taylor Metal Products Easy-Lock™ Standing Seam roofing products can be installed for either new or re-roofing applications.

We recommend installing the Easy-Lock™ Standing Seam over a rigid continuous substrate such as plywood sheathing or decking. We recommend that the plywood be 15/32" or thicker or 22 ga. steel deck. For best results the substrate should be smooth, flat and free of debris.

Cover the entire roof area with 30 lb. ASTM rated felt paper. Apply the felt by rolling it out horizontally across the roof starting at the eave. Allow a 3" overlap for each course.

Lap end joints 6". Maintain the rule of keeping uphill courses lapped on top of downhill courses of felt. Tears and cuts should be replaced with new felt or repaired with roofing lap cement.

To prevent bonding between the copper and roofing felt, a layer of synthetic building paper should be laid over the felt before installing the copper roofing.

Re-Roofing

The Easy-Lock™ Standing Seam can be installed with felt over most existing asphalt, composition, fiberglass shingles or rolled roofing. Tile, gravel, wood shingles/shake, metal or any other type of roofing material should be removed to the bare sheathing. Inspect the substrate for damage or rot and replace sheathing as necessary. Apply the underlayment as described above.

Consider the following when installing the metal roofing over existing roofing materials:

- **Building Codes:** Local building codes will typically limit the number of layers of roofing allowed. Check with your agency.
- **Solid Fastening:** Check the condition of the substrate. Damaged or rotted plywood or decking will not provide for secure fastening. Repair or replace damaged or rotted substrates.
- **Appearance:** Irregular substrates may affect the overall appearance of the metal roofing product. Panel deformation may occur, however, product integrity will not be affected.

- **Roof surface:** Any warped or loose shingles must be nailed down along with any protruding nail heads. Remove all moss and other debris, including existing starter strips. Cut off all overhanging shingles and remove hip and ridge caps.
- **Ventilation:** Trapped moisture can cause premature failure of the metal roofing product as well as substrate, insulation etc. Provide adequate ventilation and appropriate moisture protection.

Ventilation

Proper ventilation is necessary for full roof life. Check local codes for venting requirements.

To provide for ridge and/or hip ventilation, remove (for retrofit) or leave out (for new construction) 2" of sheathing on both sides of the ridge center. Cover opening with flyscreen and secure the flyscreen with staples. Apply felt paper up to the edge of opening as explained in "Underlayment" section.

Taylor Metal Products recommends allowing ventilation between the outer roof deck and the insulation. Lack of ventilation may trap moisture. The rib of the panel is not a source of ventilation for the area beneath the roofing panels.

Insulation

Check with your design professional or insulation consultant for applications or design details. Also check local building codes to ensure compliance.

Touch-Up Paint

Most of the time touch-up paint is supplied in spray cans. Spray cans are useful for painting large areas such as downspouts, pipe flashings, and other pre-existing areas.

Scratches and scuffs in the finish should be touched-up but not sprayed. The paint should be well mixed and sprayed into a small container, then applied to scratches with a very fine brush or toothpick, just filling in the scratch. If the area is sprayed over, the differences in the chemical makeup will likely cause the touch-up paint to fade differently than the baked-on finish and cause a blotchy appearance over time.


Paint pens are offered in most Kynar® colors and work best for covering minor scratches, please inquire for color options. Paint pens not available for ArmorTech™ panels.

It is important to get the roofing panels installed straight and you can't always depend on the gable/rake edge to be straight. After the underlayment has been applied you must now lay out an alignment line at the gable edge to align your first panel. You can use either of the following methods to check the gable edge to ensure the first panel gets started straight.


Method #1: 3-4-5 Triangle

The first method utilizes the 3-4-5 triangle method. After the underlayment has been applied, you must now lay out a grid line along the gable edge to align your first panel. Here we are using a 3-4-5 triangle in increments of 9'-12'-15' (e.g. $3 \times 3 = 9$, $3 \times 4 = 12$, $3 \times 5 = 15$). For longer panels use larger multipliers ($5 \times 3 = 15$, $5 \times 4 = 20$, $5 \times 5 = 25$).


Step 1: Snap an alignment line 2 feet from the eave.

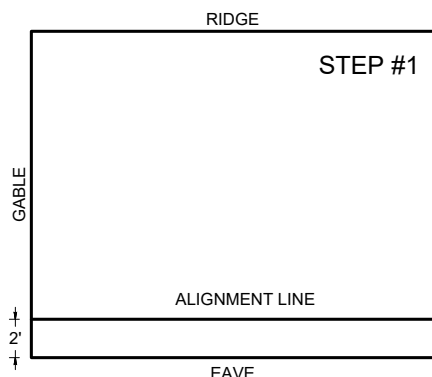


Step 2: Start from a point (datum) on the alignment line 1/4" to 1/2" from the left (or right depending on which edge you're starting from). Establish a 12' arc from datum point.

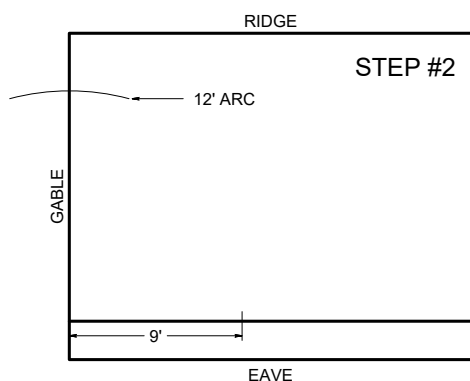


Step 3: Measure 9 feet from the datum point along the alignment line and establish a reference point there.

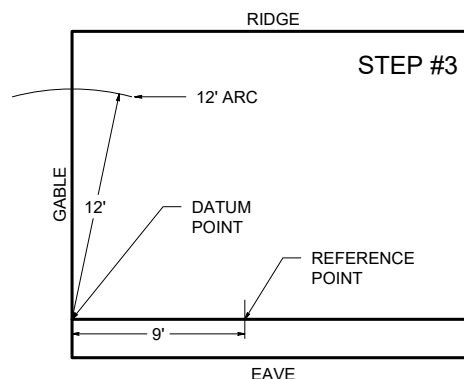

Step 4: From the reference point make a 15-foot arc to intersect the 12-foot arc. Snap a chalk line from the intersection point to the datum point. You now have a straight edge to align your first panel along the gable.

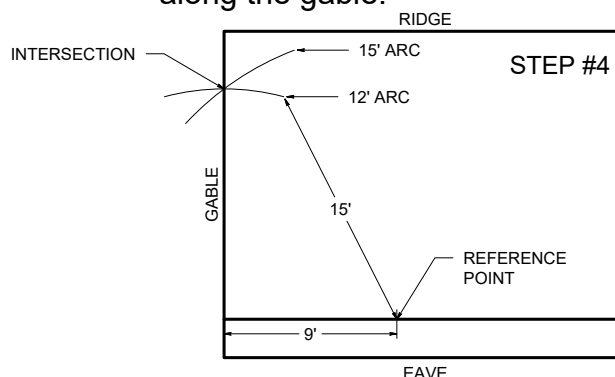

Step 5: If you have valleys: Since your underlayment will cover the true center line of your valleys, snap lines at these areas for aligning valley flashings.

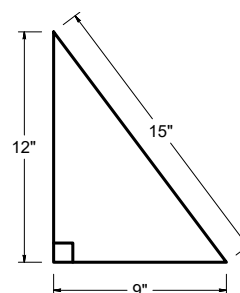

Method #2: Framing Square

The second method utilizes a framing square. Begin by stretching a string line from corner to corner at the eave edge. After the eave flashings are installed, lay down your first panel and square it at the eave using a framing square along the screw flange edge of the panel and squaring to the string line. Once square, secure alignment panel by putting one panel screw in at the bottom and at the top.

If a gable roof, check for the gable side of the pan to be no more than $\frac{3}{8}$ " off square. The standard gable flashing will compensate up to $\frac{3}{8}$ ". If more than $\frac{3}{8}$ ", a compensating gable flashing will need to be used.

Another method is to rip the first panel at the correct angle and to up-end the ripped edge 1" at 90 degrees and use the standard gable flashing. It may be required to rip the last panel. For extreme out of square conditions, consider using a Prow Flashing.


Prow Roofs

For a prow roof, use the same procedure above to square the first panel. Go to the top and measure the distance from the prow side of the first full panel to the top of the prow edge. (The prow flashing should be installed first; allow for 2" between the prow pan up-leg and the rib of the first full panel).

For example, if your measurement was 3' - make a pencil mark on the framing square for this measurement.

It is critical to maintain and square with the eave. Snap a chalk line from the top mark to the bottom mark. This will be the actual line you will set your first prow panel on. Also, it will give you the angle required to rip your first, second and third prow panels.

Install the first two prow panels and remove the first full-length panel before installing the third prow panel. If you're accurate on your squaring, cuts and alignment, your first full-length panel will be square to the eave line. (See (a) Dotted line is 2" gap.)

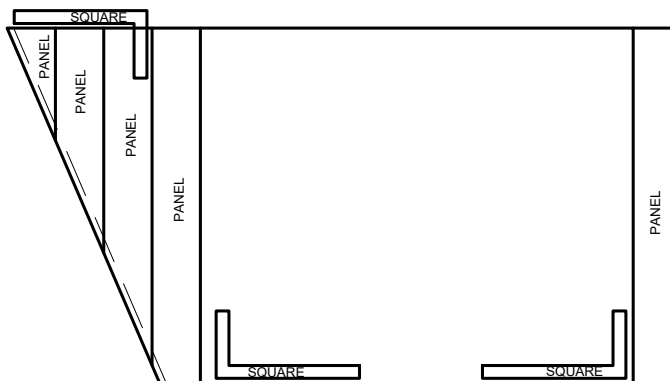


Hip Roofs

Hip roofs present some challenges to panel alignment. The easiest method of aligning panels on a hip roof is to start in the center of the roof area and use the "Reversing Strip" (see page 13) to install the panels starting at center and installing panels in both directions (left & right).


Use either method of panel alignment to be sure the panels are straight and centered. Position the reversing strip at the center point and fasten into place. Then install the panels as indicated. Incidentally, you can also start the panels at center on a gable roof and work both directions.

Alternately you can align panels on a hip roof by starting with a longer panel (5' to 7') in length. Place the panel in the appropriate spot (usually 5' to 7') from the left or the right and use either method of aligning the panels to get a straight line to work from. Install this panel, and then work back to install the shorter panels and then the rest of the panels as usual.

***Reversing Strip suitable for use with Easy-Lock & StreamLine™ panels ONLY.**

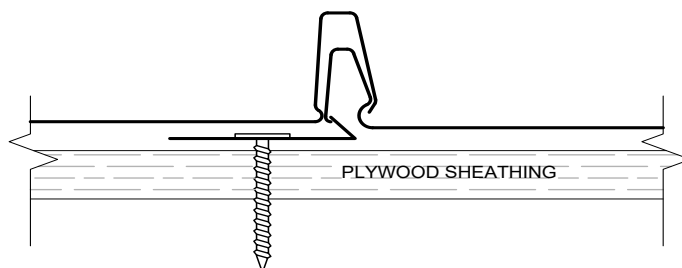

 
The reversing strip allows the Easy-Lock panels to be installed working both left and right. The reversing strip is most commonly used on hip roof applications although it can be used on other roof style




Reversing Strip Application

Step 1: Locate the center of the roof section you are working on. Use 3-4-5 Triangle or Framing Square Method. See (a)

Snap a straight line on the mark perpendicular to the eave line. It is important that the line is straight, so that the panels will be straight.

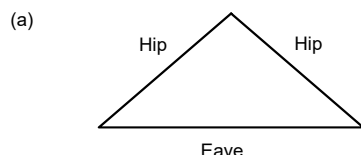


Position the turned edge of the reversing strip along the center-line and fasten to the sheathing every 18" to 24" with a waferhead screw. It won't matter which direction the strip faces.

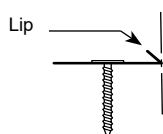


Step 2: Place a panel of the appropriate length on the roof and hook the lock lip of the panel (located on the upper/female rib) to the lip of the reversing strip. See (b)

Pull the panel so it fits tightly into reversing strip and fasten the panel to the sheathing with waferhead screws.

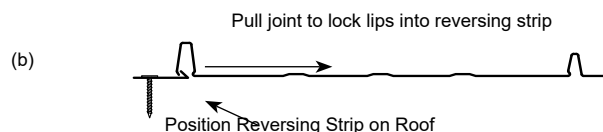

Step 3: Position the next panel so that the female rib is over the female rib of the previous panel laying the opposite direction. Press down until the panel is locked onto the previous panel. Fasten that panel in place.

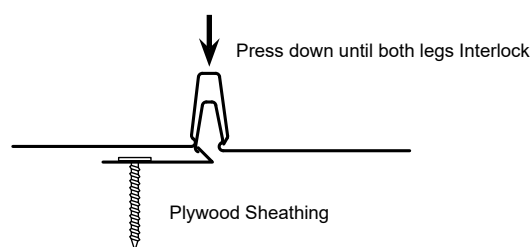

Caution: We do not recommend reversing panels on the same pitch when using metallic colors (i.e. weathered zinc or copper penny) or ZINCALUME®. The paint/coating will reflect differently when the panels are reversed and could look like a different color.

Panel Preparation

Top of Panel - Upend

To up-end panels, snip the pan $7/8$ " beside the female rib, and $7/8$ " at $1/4$ " from the inside of the male leg. The up-end tool makes an accurate marking template. After snipping $7/8$ " cuts, place up-end tool into pan and bend up to just over 90 degrees. The up-end acts as a baffle. The $1/4$ " gap at the screw flange allows for clearance to snap in the next panel. You will need to fill the gap at each side of the upended panel with sealant. (Figure 1)

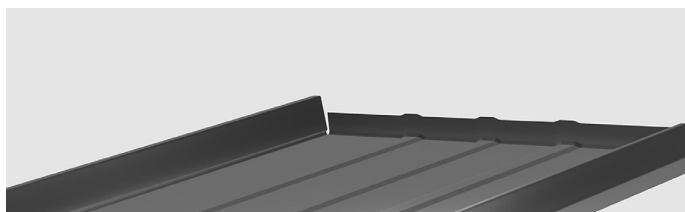
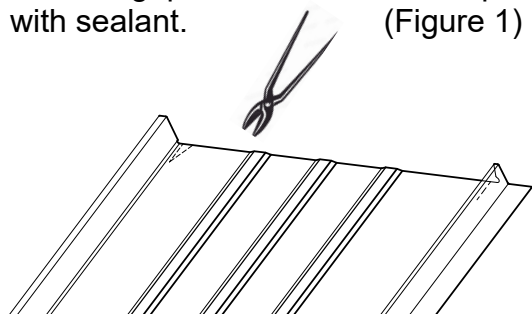


Figure 1

Bottom of Panel

Snip off the corner of the fastening flange approximately 45° for appearance. (Figure 2)


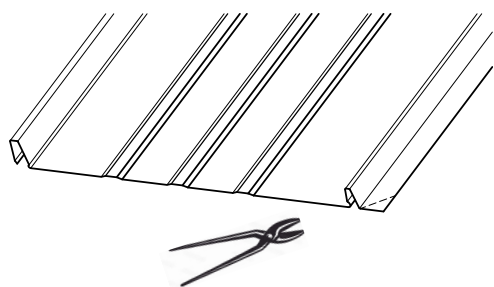




Figure 2

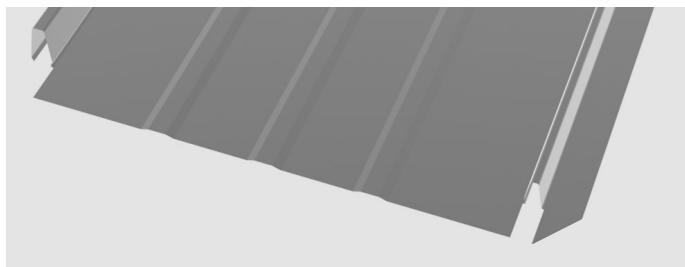

Low Pitch Applications

Alternate 1



On pitches of less than $3/12$, place up-end tool into pan, bend down and under to form an open hem under the pan. This step brings the pan edge below the eave flashing edge which stops any potential wicking or siphoning. (Figure 3) If using this method, allow for an additional $1/2$ " of panel length.

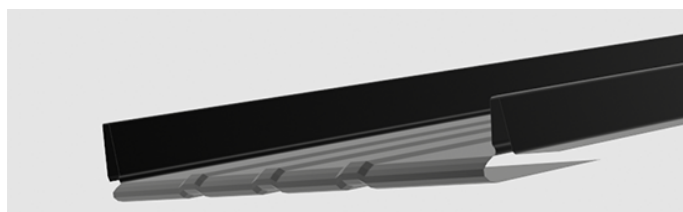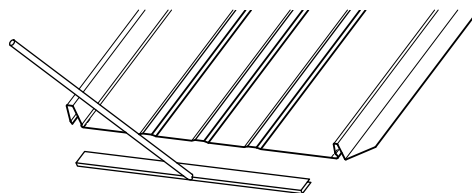

Alternate #2

On pitches of less than $3/12$, use a $1/2$ " bending tool or other bending tool and make a 30° bend (down) to form a drip edge on the pan of the panel. (Figure 4)

On projects less than $3/12$, contact a Taylor Metal Products sales representative with project specifics.

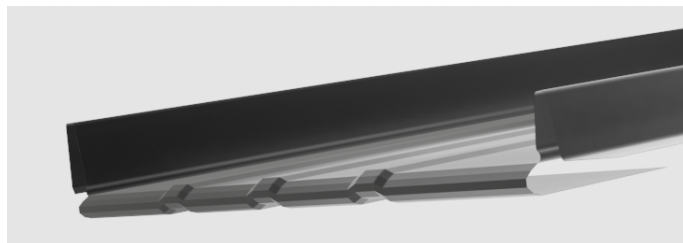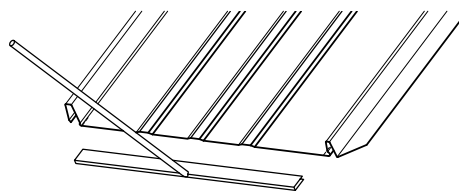

Note: Taylor Metal Products minimum slope recommendation is $3/12$ pitch.

Prior to Panel Installation:

Before you can install the panels you need to install Underlayment (i.e. Felt Paper), Flyscreen, Eave Flashing, Valley Flashing, Prow Gable Flashing, and other flashings as conditions apply.

Consider the following before ordering and/or installing roofing panels or flashing.

The roof area will rarely come out to the even foot. If working on a gable roof and the incremental distance from gable end to gable end is 4" or less (i.e. 48' 4") consider using the compensating gable flashing. This flashing is used to compensate up to 2" on either one or both ends of the roof. The beginning panel can be started 2" in for the edge and end 2" for the opposite edge.

Although to maintain a visually consistent appearance on each gable end, TMP recommends using compensation gable on both ends, rather than standard gable on one end and compensating gable on the other. Using the compensation gable flashing will keep you from having to cut a narrow panel for one end of the roof and will produce a more appealing visual appearance.

Compensating gable flashing is also useful if the roof is out of square and can take up 2" of top to bottom differential.

In the rare case that you should experience difficulty installing a panel due to a factory defect **stop immediately** and contact Taylor Metal Products. Roof longevity may be compromised and warranty voided by knowingly installing faulty panels. TMP will not be responsible for panels installed with defects. TMP reserves the right to correct the issue before providing replacement panels.

First Panel Installation:

You may install the panels working from left to right or right to left. It is a matter of choice and convenience. Determine which direction the panels are to be installed before preparing the panel.

Align the upper (female) leg of the panels along the alignment line you made along the gable edge. Allow the panel to overhang at the eave edge 1" to 1-1/4". Apply double row of Non-skinning/curing sealant along the eave flashing, position the panel and fasten the panel into place using the waferhead screws. Be certain screw heads are level and flush to the screw flange or they may dent or show through the next panel.

Second and Successive Panels:

Apply the bead of Non-skinning/curing sealant on the eave flashing (see Eave Section, page 15) and place panels flush along the eave edge maintaining the overhang established on the first panel.

Position the female leg of the next panel over the male leg of the panel previously installed and lock the panels into place using light hand pressure, foot pressure or tap in place with a rubber mallet. Lock the panels from the bottom up. When the rib is locked into place and in the proper position, fasten the panel into place with waferhead screws.


Repeat for successive panels.

***Note*Flashings**


Flashing weight calculations are based on 24-gauge material.

Low Pitch Eave



LOW PITCH EAVE DETAIL

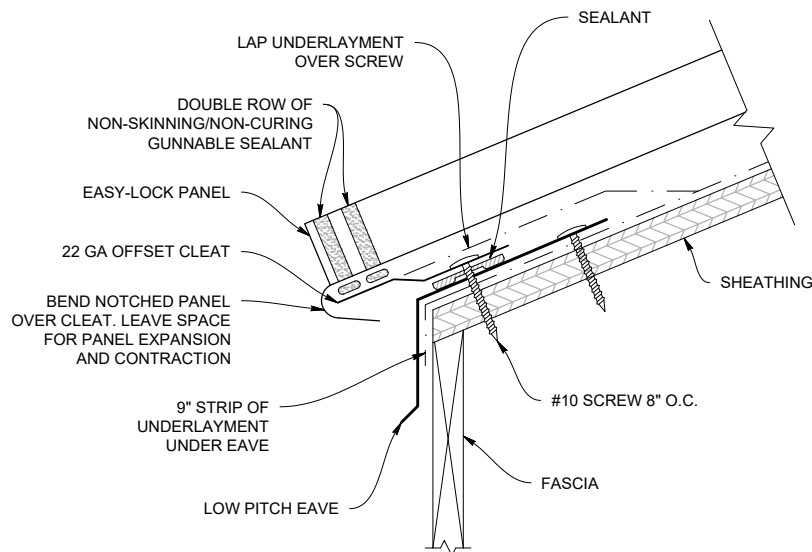

LOW PITCH EAVE FLASHING (ELELP)

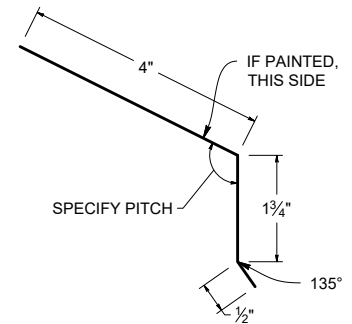


OFFSET CLEAT (ELOC)

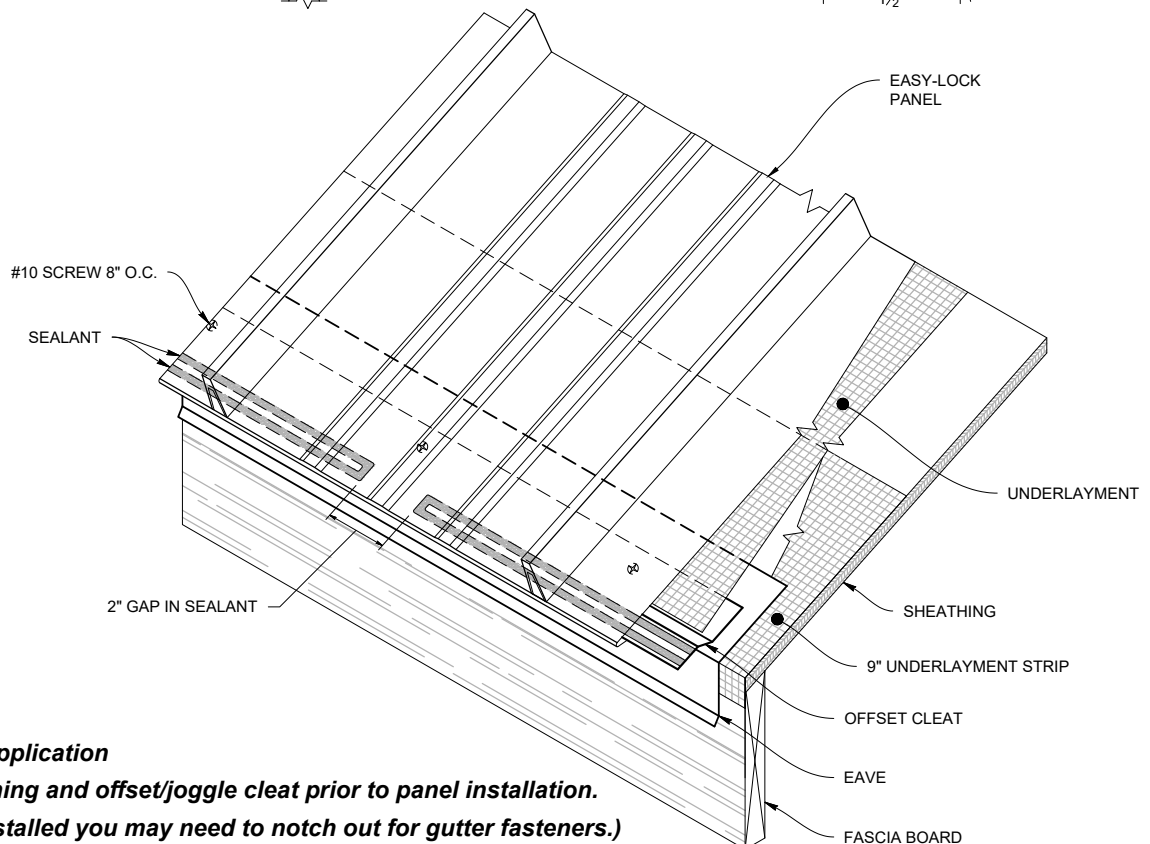 



Eave Flashing Application

- **Install eave flashing and offset/joggle cleat prior to panel installation.**
- **(If gutters are installed you may need to notch out for gutter fasteners.)**
- **Use Waferhead Screws and fasten to substrate 18" to 24" or as needed.**
- **Allow 4" lap and apply sealant to overlap.**
- **Seal the bottom of the offset/joggle cleat and set over the eave trim—fasten 8" oc**
- **Apply two 1/4" beads of non-skinning/curing sealant along top of leg of the cleat, 1" +/- from outside edge.**
- **Run underlayment down over the fasteners (seal fastener heads if not using this method).**
- **Turn down the panel end and back at an angle to form an open hem. Hook the panel over the cleat and secure panel screw flange to the substrate—above the eave trim flashing.**

HOOK EAVE DETAIL

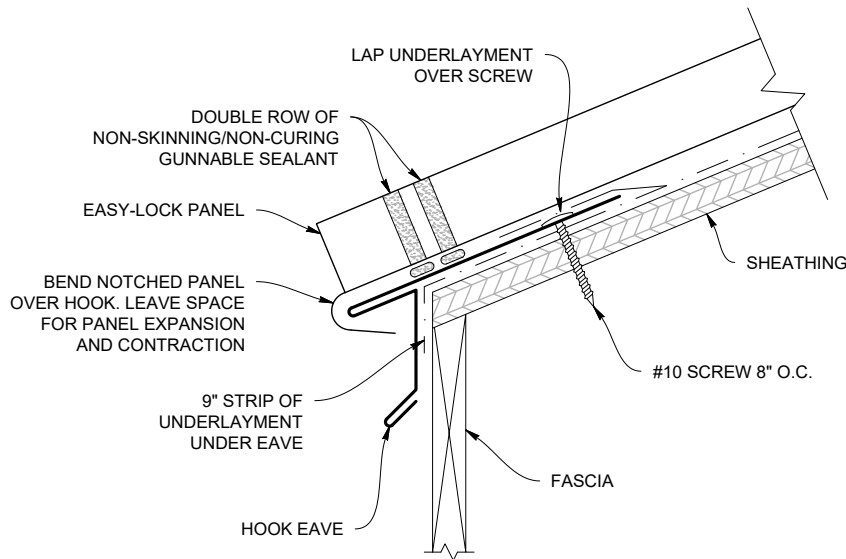


HOOK EAVE FLASHING (ELEH)

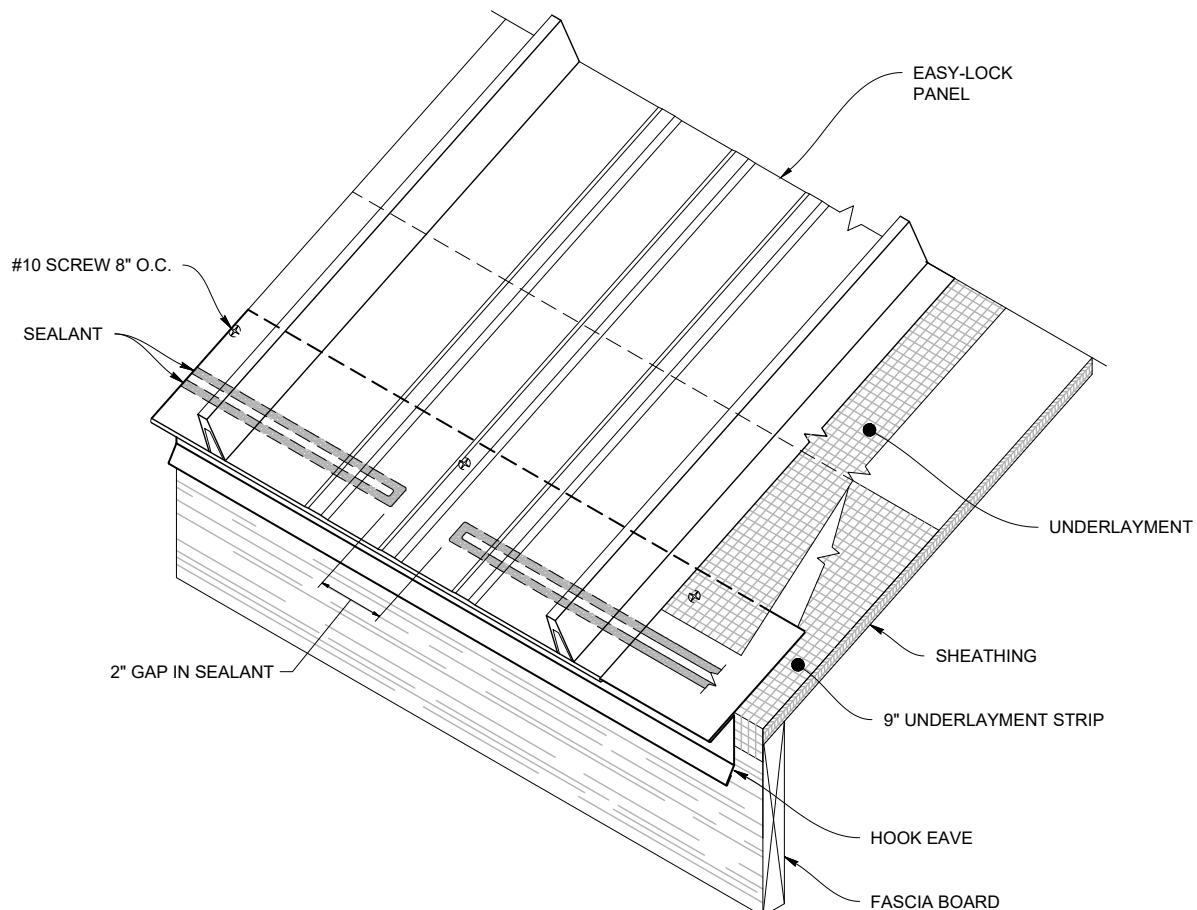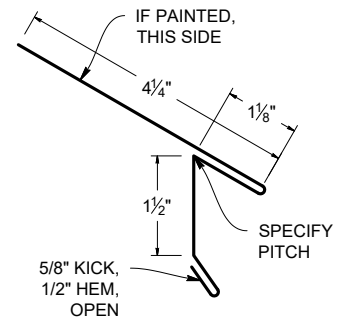


All flashing should be lapped at least 4" with sealant in the lap.

Hook Eave with Gutter


GUTTER HOOK EAVE DETAIL

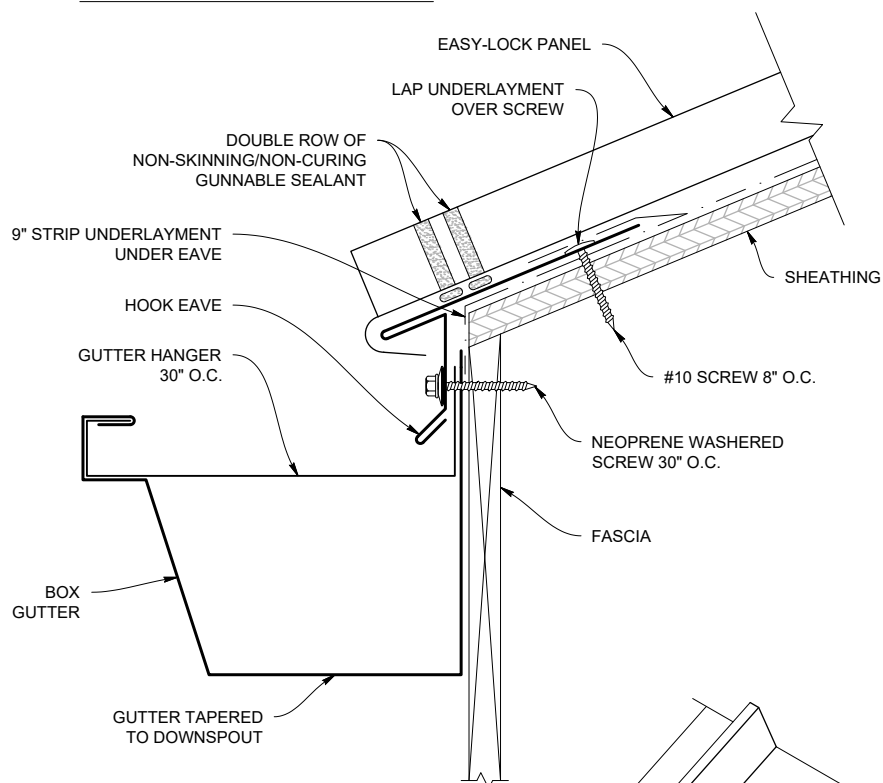



BOX GUTTER (EL65BG)

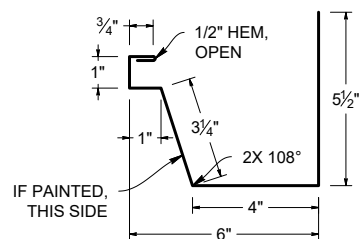


HOOK EAVE (ELEH)

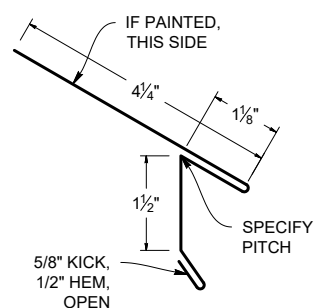

BOX GUTTER HANGER (AGH6)

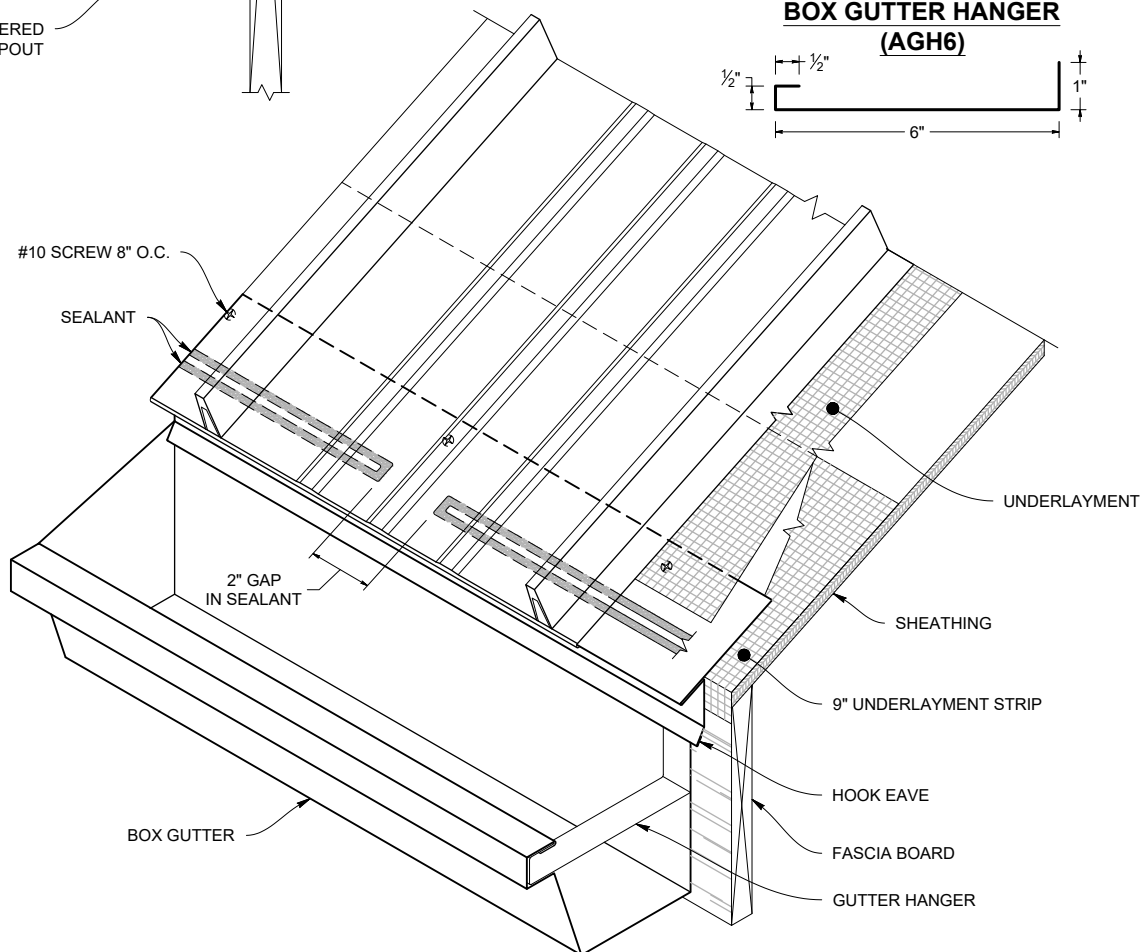 

HIP / RIDGE DETAIL

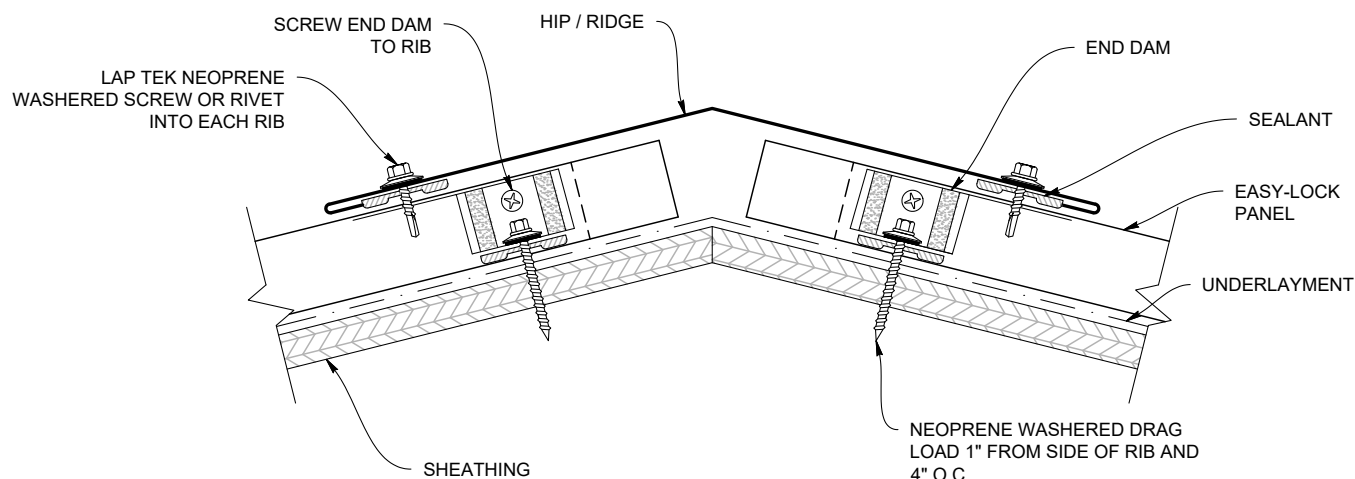


Hip / Ridge Application


- Cut standing seam panel to match angle of hip/ridge.
- Install panels and end dams (upend and caulk the corners if not using end dams).
- Seal tops of end dams and set cap. Fasten cap to end dams 12" oc (min.). If not using end dams, seal the tops of the standings seams where the lap tek screws will fasten. Use lap tek screws or rivets at every rib.
- Allow hip/ridge cap to overhang the bottom corner at least 1-1/2".
- Box in the lower end to match angle of corner.
- Overlap hip/ridge cap, top to bottom, 4" and caulk each lap.

Note: If ribs are over 24" apart on panel angles, use "Z" Strip for secure fastening.


HIP / RIDGE FLASHING (ELHR5.625)

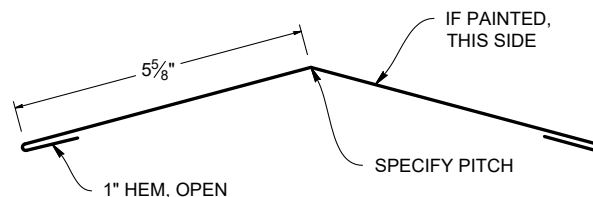

HIP / RIDGE FLASHING (ELHR7)

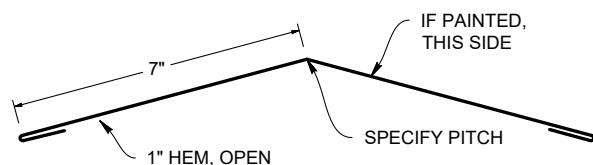


HIP / RIDGE LAP

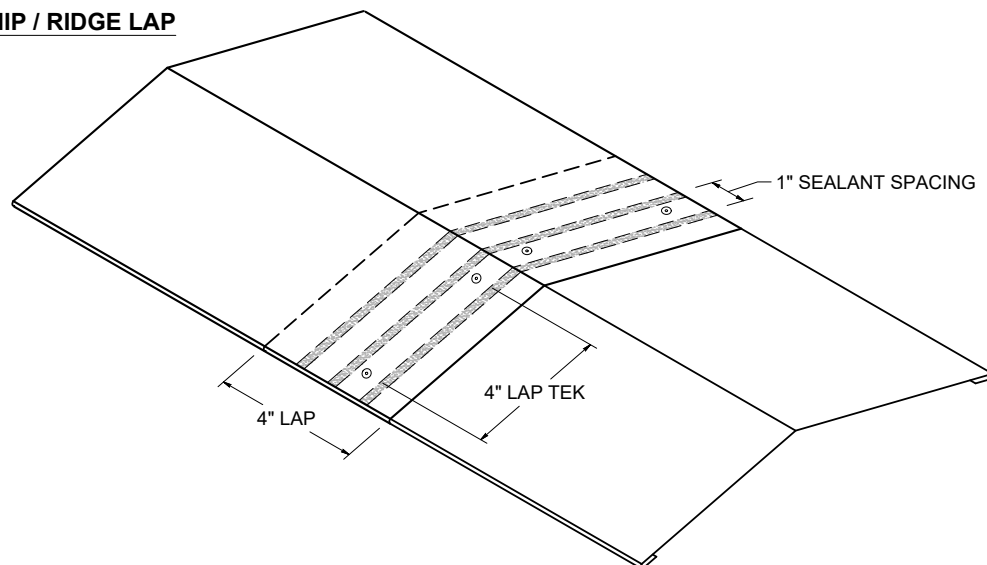


All flashing should be lapped at least 4" with sealant in the lap.

Vented Ridge


RIDGE W/ VENTED CLOSURE DETAIL

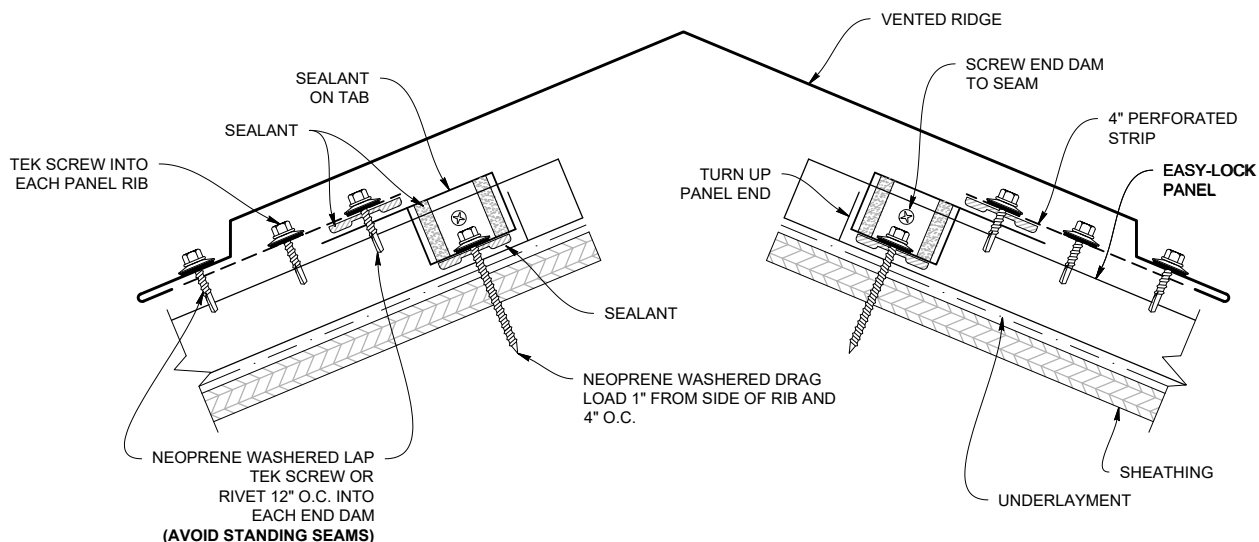


EASY-LOCK END DAM

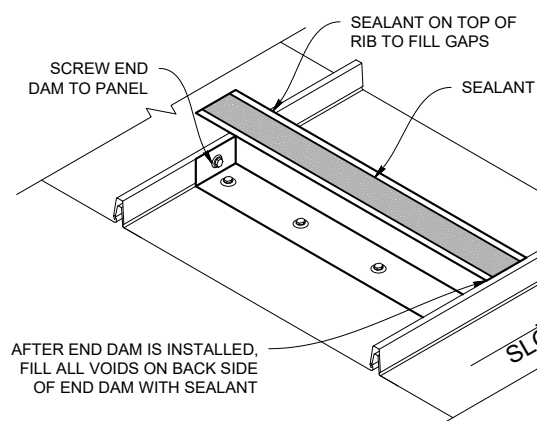


R17 RIDGE FLASHING (ELR17)

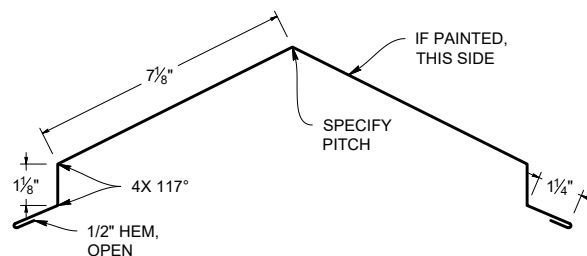


RIDGE LAP

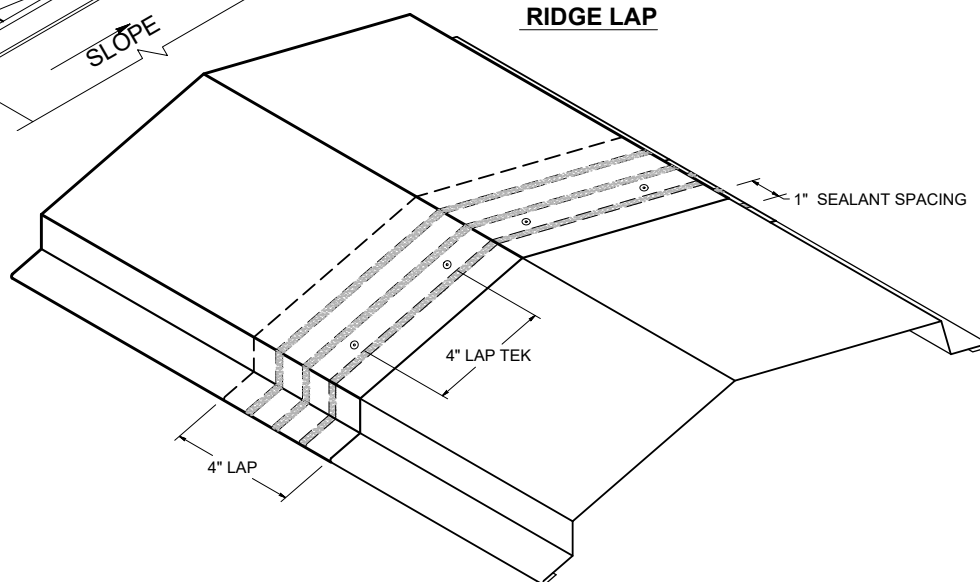


WT RIDGE VENTED DETAIL

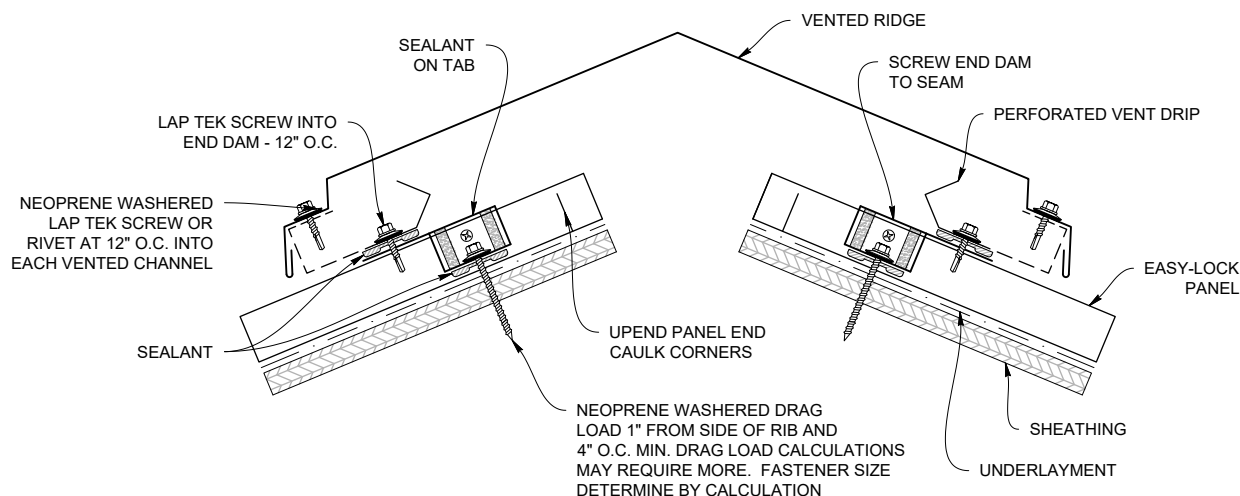

WT RIDGE FULL VENTED (WTRFV)

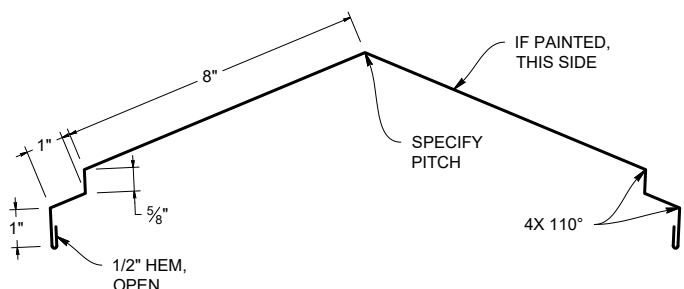


PERFORATED VENT DRIP: E2886 EMBER RESISTANT (PVD)

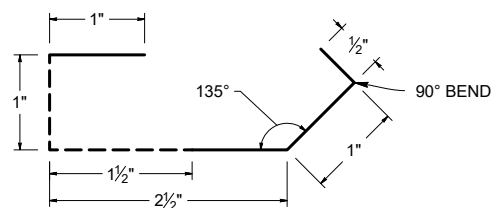

****NOTE: PERFORATED VENT DRIP IS COMPATIBLE WITH WT VENTED RIDGE ONLY****
****14.5" Free air per LFT for Ridge****

VENTED RIDGE LAP

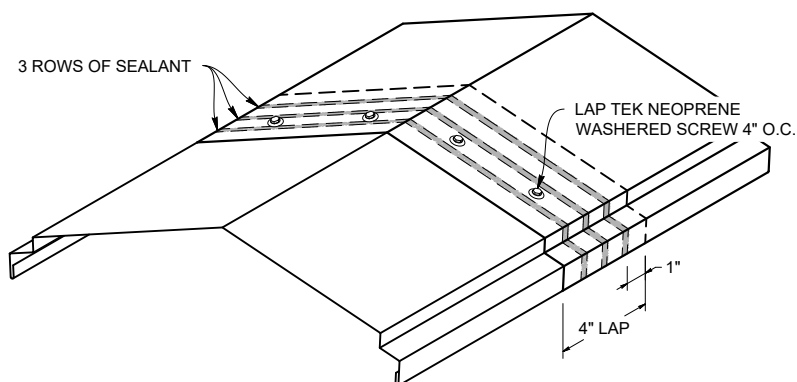


Note: All screws must be fastened into solid substrate.
 Flashing must be lapped 4" with 3 rows of sealant.

All flashing should be lapped at least 4" with sealant in the lap.


Valley

3:12 or Greater Slope


VALLEY DETAIL (3:12 or Greater Pitch)

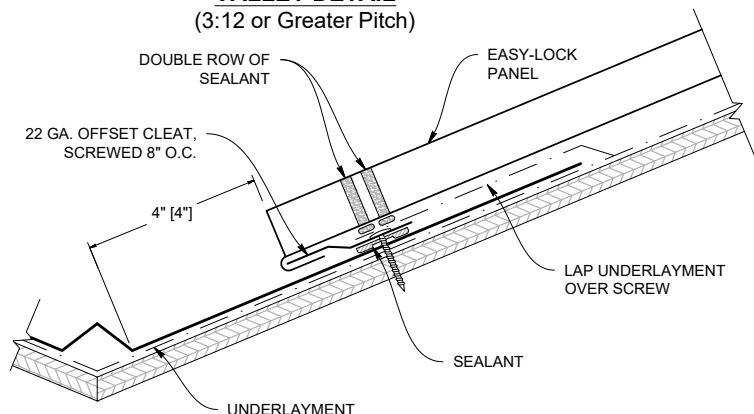


OFFSET CLEAT (ELOC)

 


VALLEY FLASHING (ELVF24)

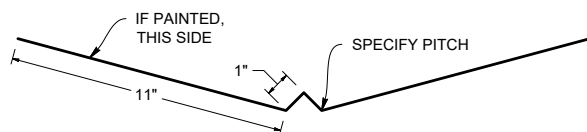

WIDE VALLEY FLASHING (ELVFW)

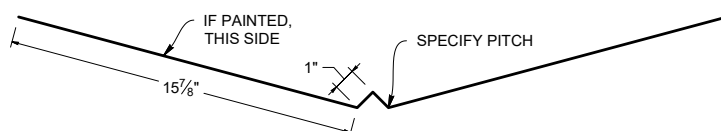


VALLEY LAP (3:12 or Greater Pitch)

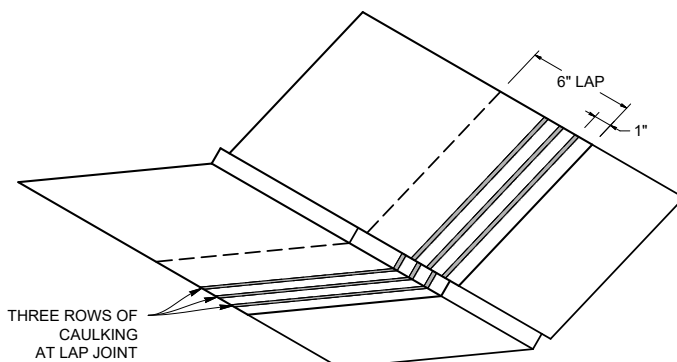


Valley Flashing Application

- **Install valley flashing by fastening through the pan as near to the outside edge every 18" to 24".**
- **Apply three 1/4" beads of caulking between the valley pans.**
- **Form valley flashing over the ridge as necessary.**
- **Trim panels for angle of valley 2" from the valley center point.**
Note: Be sure to remove any burrs from the cut edge of panels and use a damp cloth to wipe any filings from the panel.
- **Place sealant on the bottom leg of the offset/joggle cleat and set over the valley to allow 4" of clean out between the rib and roof panel cut edge. Fasten 8" oc and lay underlayment over fastener heads (seal fasteners if skipping underlayment lap). Trim panels to angle of prow, and turn the edge 1" under with upender/downturn tool.**
Note: Be sure to remove any burrs on the cut edge of the panel and use a damp cloth to wipe any filings from the panel.
- **Apply sealant to the top of the cleat and lock the hemmed edge of the panel into place. fasten the panel with a waferhead screw, upslope from prow flashing.**
- **If the panels crown (pan of panel raising up) backbend panel or use the 1/2" upending tool and either bend the panel end down 30 degrees or turn the 1/2" under, forming a hemmed edge.**
- **Install panels being sure to fasten panels through the fastening flange into substrate, upslope from the valley edge. Do not penetrate the valley flashing.**
- **Heavy snow conditions require a wider valley pan. Leave more space between the end of the valley panels and the valley center line.**
- **Consider using wide valley flashings for low pitch roofs. Taper panels from narrow to wide at the bottom of the valley to allow better cleanout in areas of heavy snow/ice.**


VALLEY FLASHING DETAIL (Less Than 3:12 Pitch - Not Recommended)

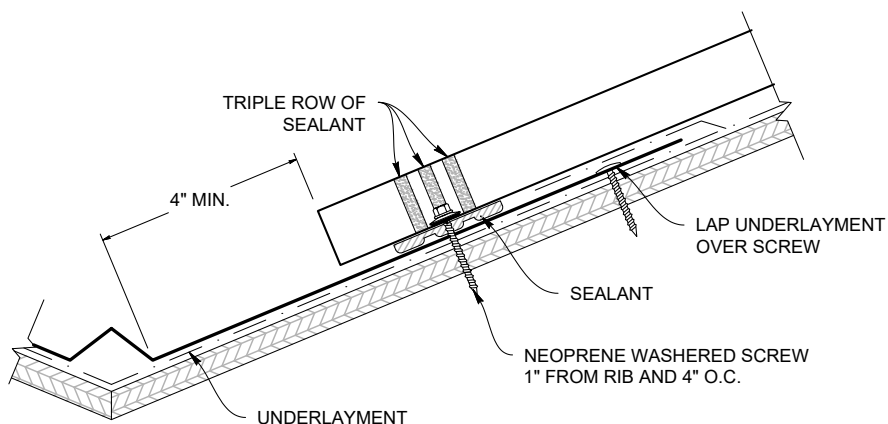

VALLEY FLASHING 24" (ELVF24)

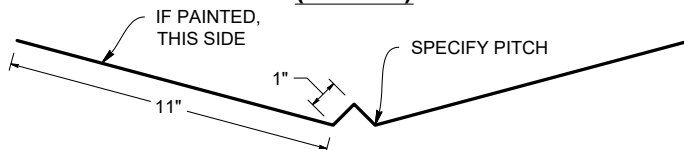


WIDE VALLEY FLASHING (ELVFW)

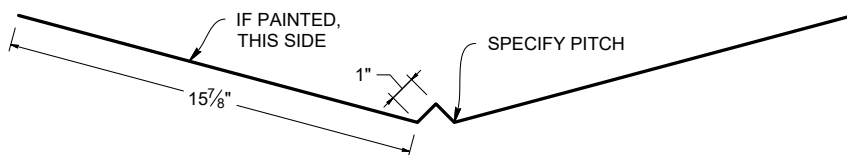

VALLEY LAP


(Less Than 3:12 Pitch - Not Recommended)

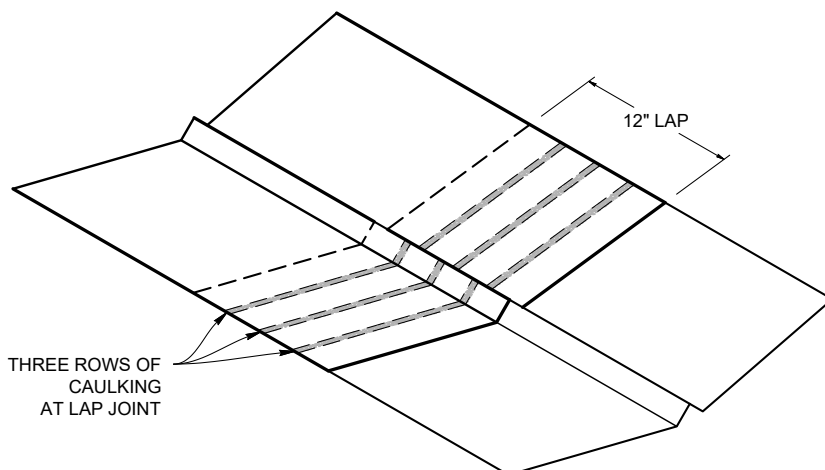


All flashing should be lapped at least 4" with sealant in the lap.

Box Gable



BOX GABLE DETAIL

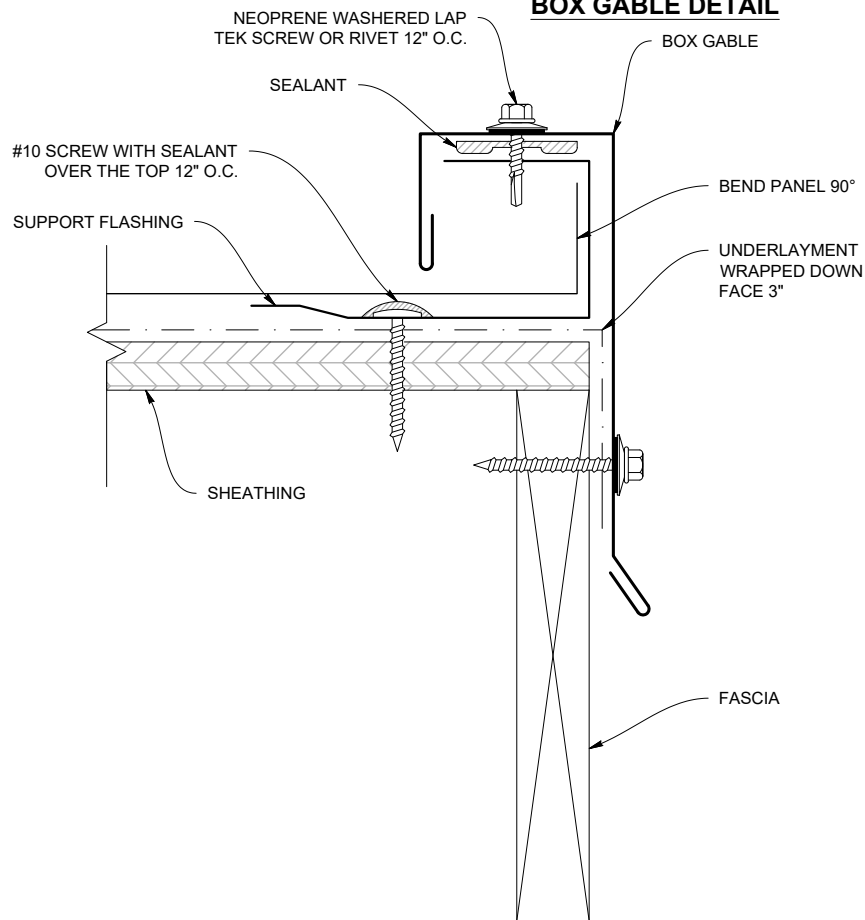

BOX GABLE FLASHING (ELGB)

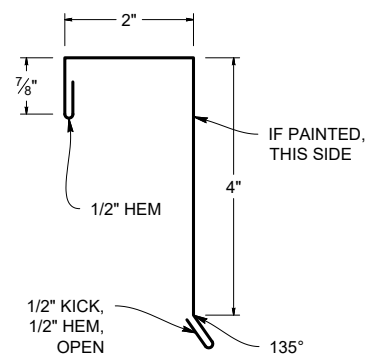


SUPPORT FLASHING (ELSF)

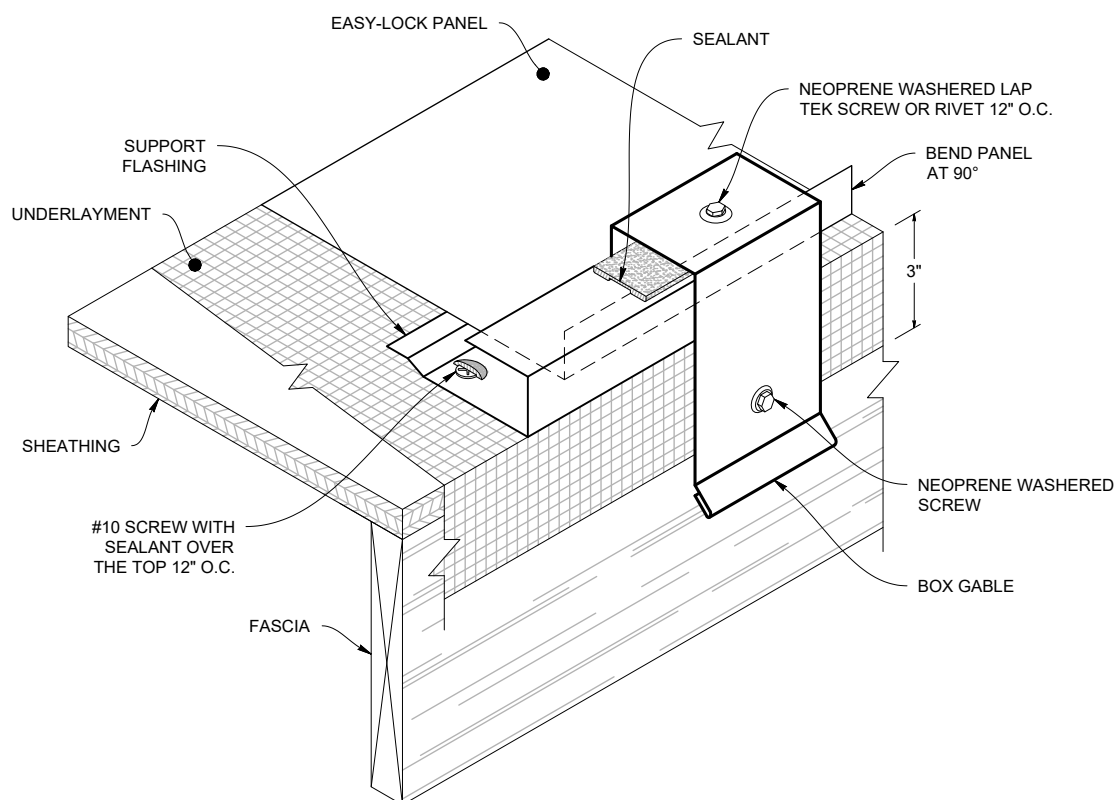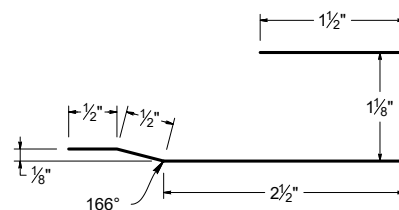


All flashing should be lapped at least 4" with sealant in the lap.


PROW DETAIL

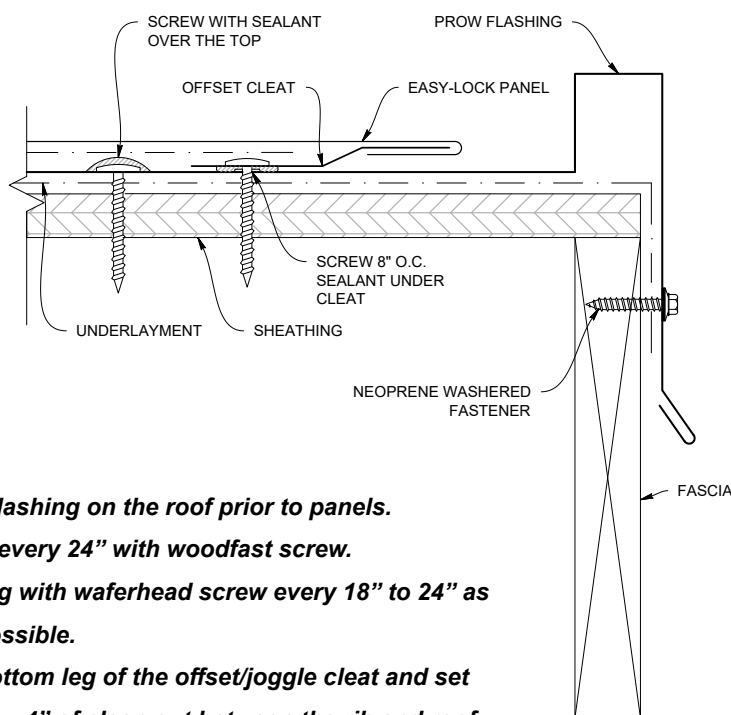

PROW FLASHING (ELPF)

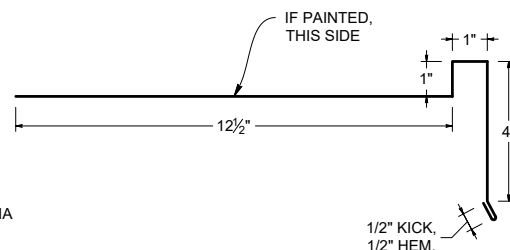


OFFSET CLEAT (ELOC)

 


Prow Application

- **Install the prow gable flashing on the roof prior to panels.**
- **Fasten to fascia board every 24" with woodfast screw.**
- **Fasten pan to sheathing with waferhead screw every 18" to 24" as close to the edge as possible.**
- **Place sealant on the bottom leg of the offset/joggle cleat and set over the flashing to allow 4" of clean out between the rib and roof panel cut edge. Fasten 8" oc and lay underlayment over fastener heads (seal fasteners if skipping underlayment lap). Trim panels to angle of prow, and turn the edge 1" under with upender/downturn tool.**
- **Note: Be sure to remove any burrs on the cut edge of the panel and use a damp cloth to wipe any filings from the panel.**
- **Apply sealant to the top of the cleat and lock the hemmed edge of the panel into place. fasten the panel with a waferhead screw, upslope from prow flashing**

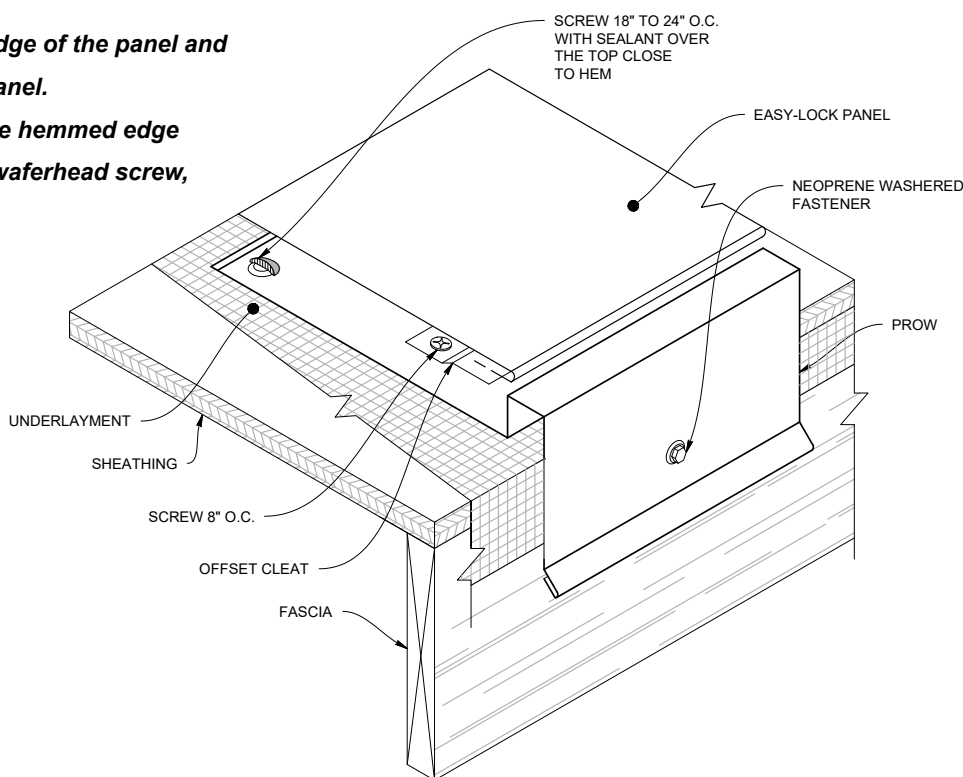


All flashing should be lapped at least 4" with sealant in the lap.


SIDEWALL DETAIL

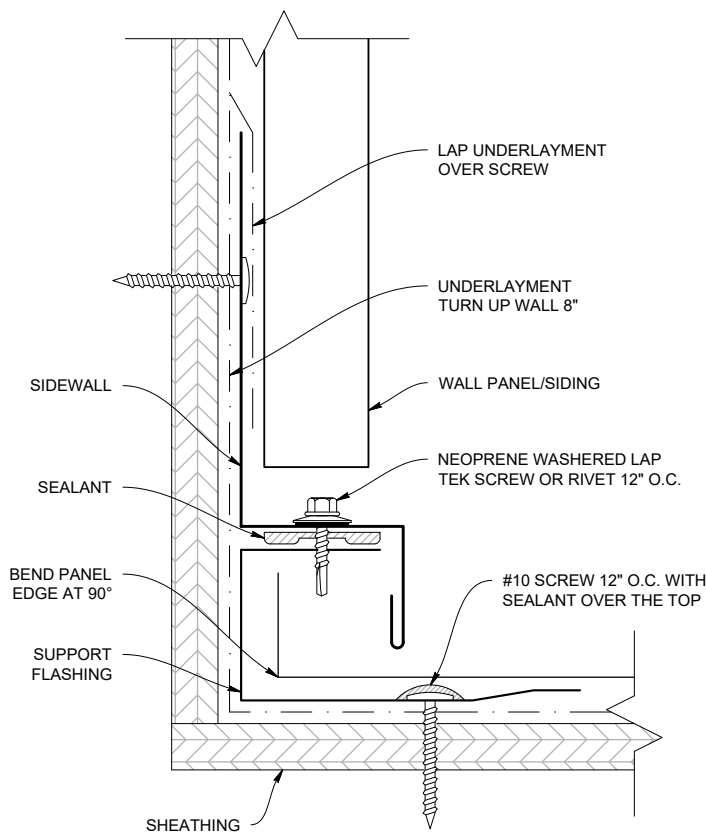

SIDEWALL & COMPENSATING SIDEWALL (ELSW) (ELSWC)

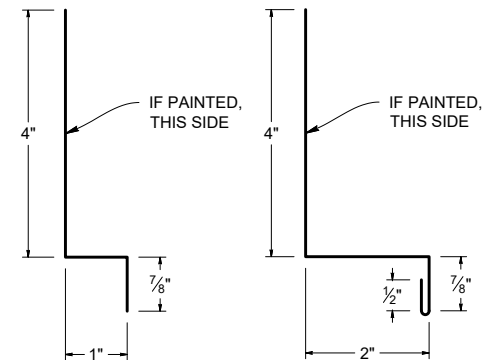


SUPPORT FLASHING (ELSF)

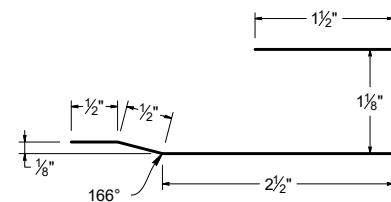


Sidewall Application

- Sidewall flashing is used where wall runs parallel with slope.
- Install support flashing and then roofing panel first (if not using support flashing, use female rib or turned up panel edge to transition flashing to sidewall).
- Install flashing under siding (pictured). Attach to wall with waferhead screw for this option.
- **OPTION:** Siding is cut 1/4" deep and lip is caulked into the cut seal. Attach to wall with woodfast screw every 24".
- **Note:** Specify with lip if using this method of installation.
- Seal the top of the support flashing and set sidewall flashing over the top.
- Overlap flashing end to end 4" and caulk at lap.
- Fasten sidewall flashing to support flashing 12" oc

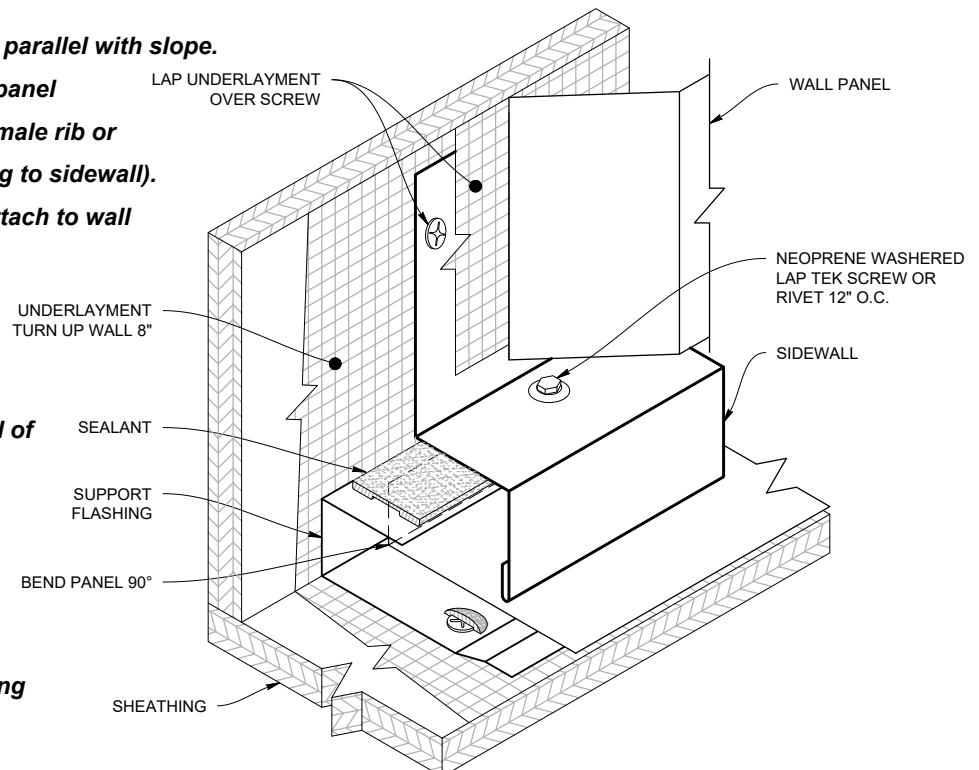

PEAK FLASHING DETAIL (Ridge End Cap)

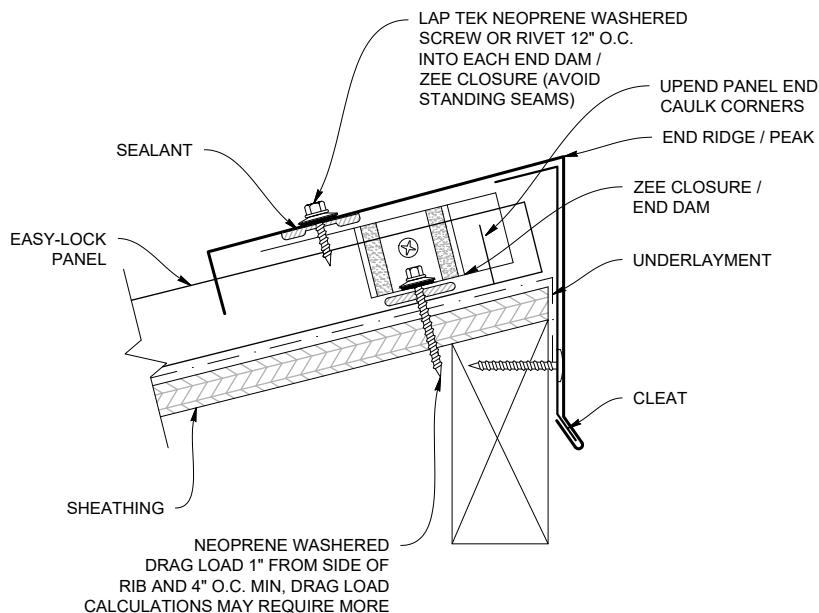


Peak Flashing Application (R. E. C.)


- Notch 1" leg to fit over rib of panel.
- Fasten through peak flashing into end dams every 12" with lap tek screw or rivet (if not using end dams, upend panel and seal corners. Fasten to every rib of panel and add sealant between flashing and standing seam).
- Fasten through 4-3/4" leg of peak flashing into fascia board every 24" with woodfast screw.
- Overlap flashing end to end 4". Place three 1/4" beads of caulk under lap.
- Fasten peak flashing at lap with neoprene washered lap tek screw (4" oc).

PEAK LAP



FIELD NOTCHED PEAK FLASHING (ELREC)

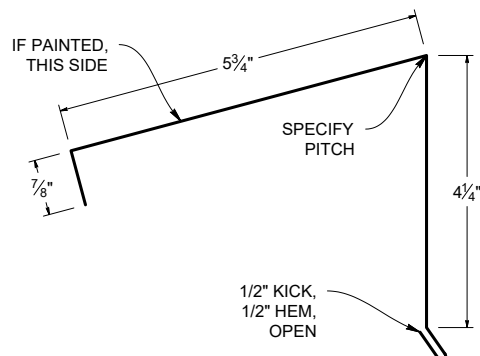

PEAK CLEAT (ELRECC)

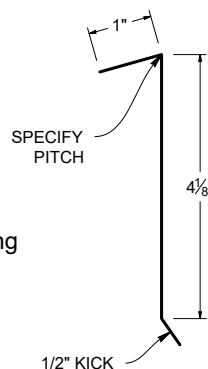

HEMMED PEAK FLASHING (ELRECH)

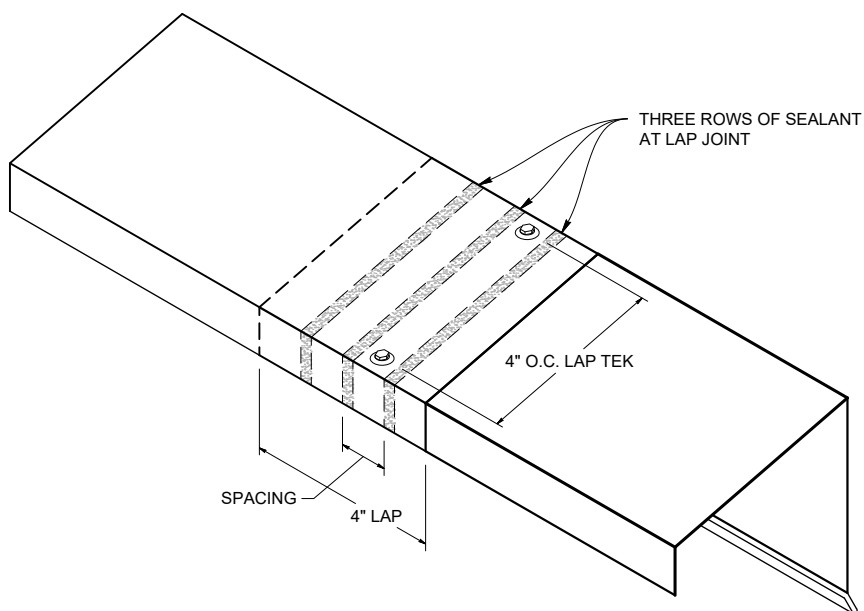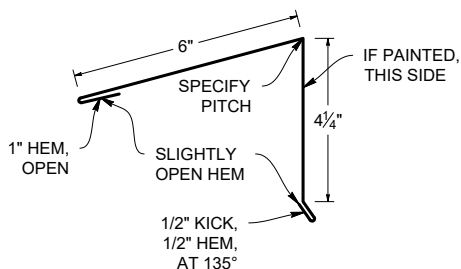


All flashing should be lapped at least 4" with sealant in the lap.

WT Vented Peak Flashing


(Ridge End Cap)




WT VENTED PEAK FLASHING DETAIL (Vented Ridge End Cap)

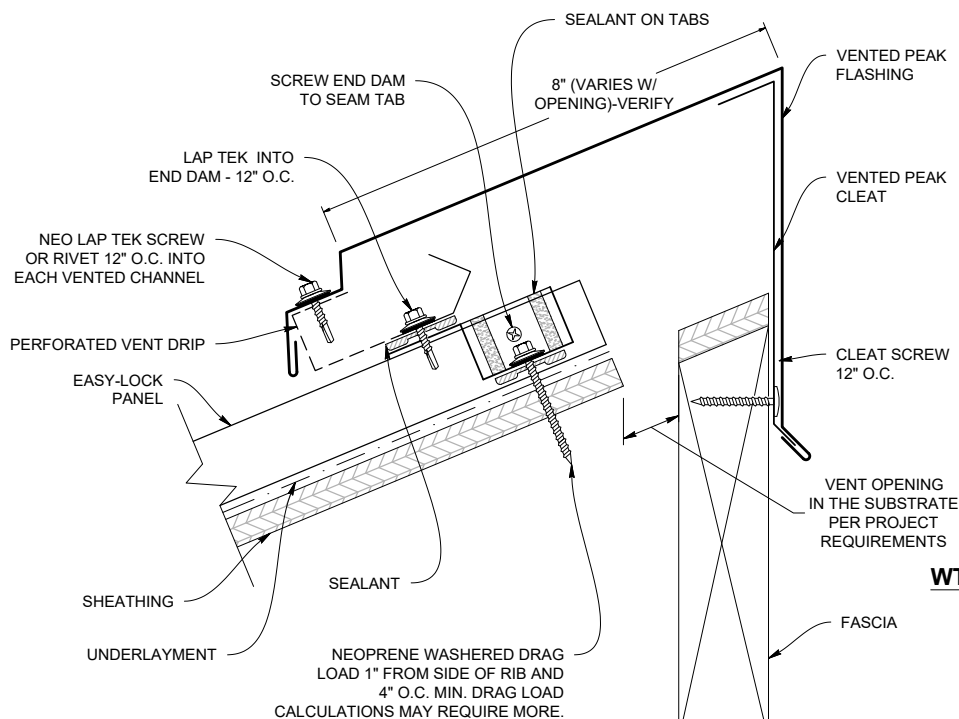


VENTED PEAK CLEAT (VRECC)

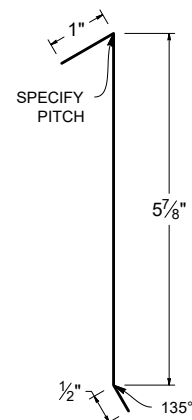


WT VENTED PEAK FLASHING (WTRECV)

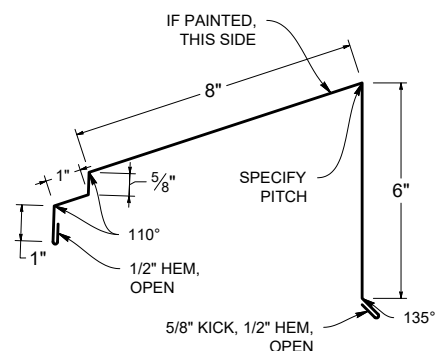

VENTED PEAK FLASHING LAP

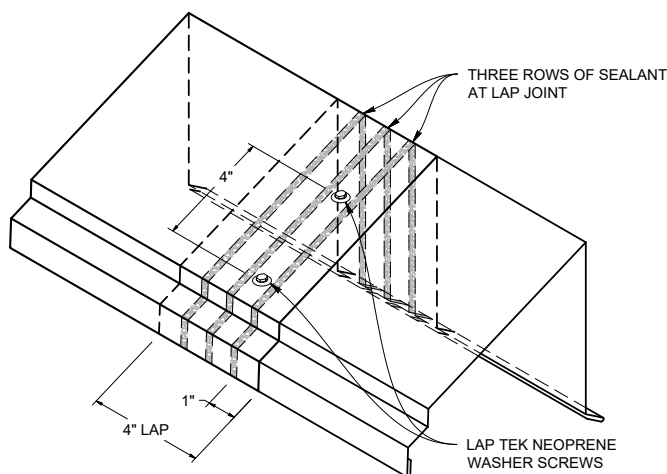

PERFORATED VENT DRIP : E2886 EMBER RESISTANT (PVD)

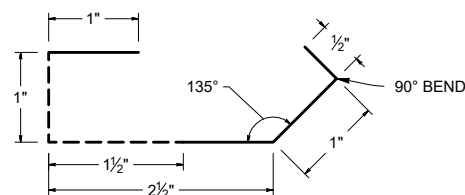


****NOTE: PERFORATED VENT DRIP IS COMPATIBLE WITH WT VENTED PEAK FLASHING ONLY****

****7.25" Free air per LFT for Ridge****


Note: All screws must be fastened into solid substrate. Flashing must be lapped 4" with 3 rows of sealant.

All flashing should be lapped at least 4" with sealant in the lap.

PITCH CHANGE DETAIL

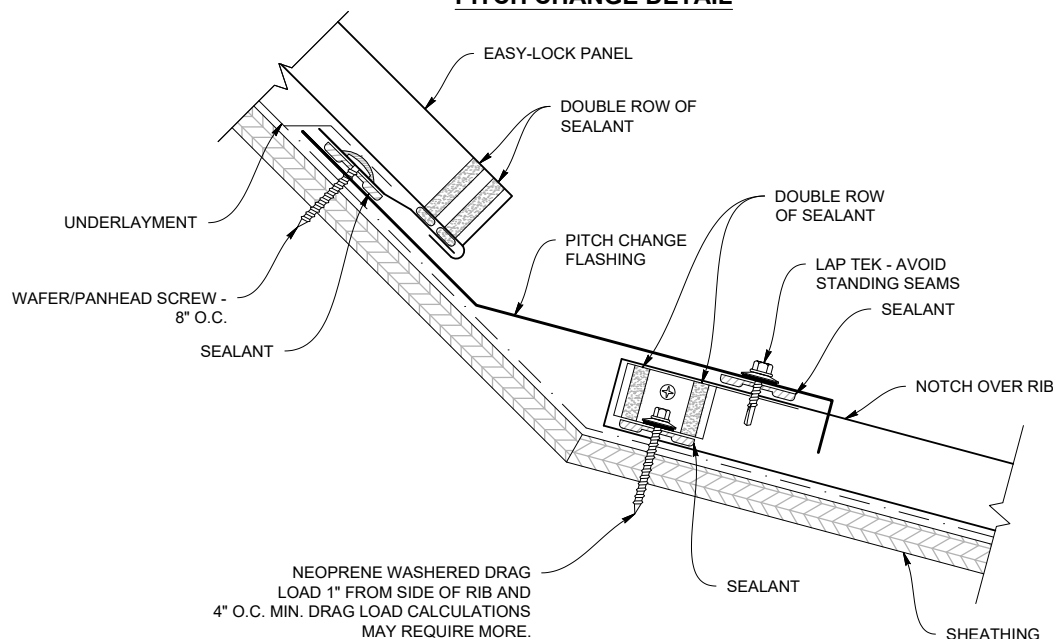

INSIDE PITCH CHANGE (ELPCIN)

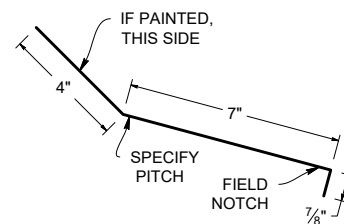


Pitch Change Inside Application

- Install lower panels, end dams, and all flashings associated with the lower roof (If not using end dams, upend panels, apply sealant to corners of up-ended pan).
- Notch 1\" leg of flashing to fit over rib of panels.
- Attach upper leg of flashing to sheathing with a waferhead screw on the upper leg every 18\" to 24\" or as needed. Run underlayment over fastener head.
- Allow 4\" overlap on flashing, apply three 1/4\" beads of sealant/caulking under lap.
- Install offset/joggle cleat over flashing set in sealant. Fasten 8\" oc. Underlayment should cover fasteners, or seal screw heads. Seal the top of the cleat before attaching the roof panel with hem into place.
- Attach lower leg of flashing to end dams 12\" oc (avoid standing seams). If not using end dams, fasten to every rib with a neoprene washered lap tek screw or rivet. Add sealant between flashing and standing seam before fastening to rib.
- Finally, install the upper panels with a hemmed edge to engage the offset cleat.

Note: Custom flashings may be required when pitches are close, e.g. 3:12 to 1:12. when pitches are close, e.g. 3:12 to 1:12.


PITCH CHANGE LAP

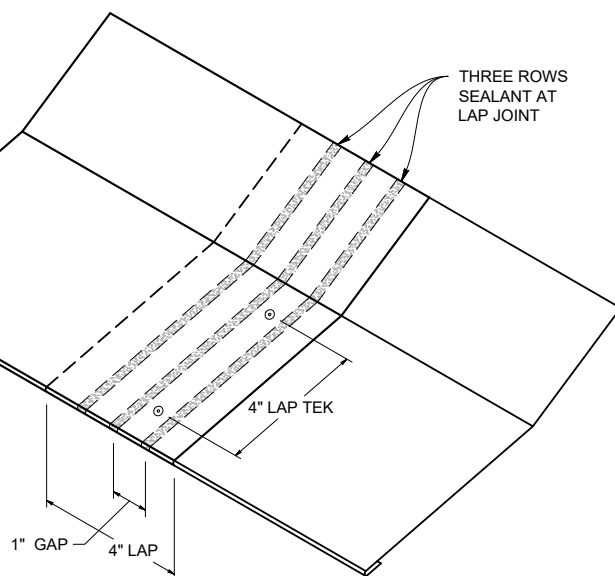


All flashing should be lapped at least 4\" with sealant in the lap.

Hemmed Endwall

HEMMED ENDWALL DETAIL

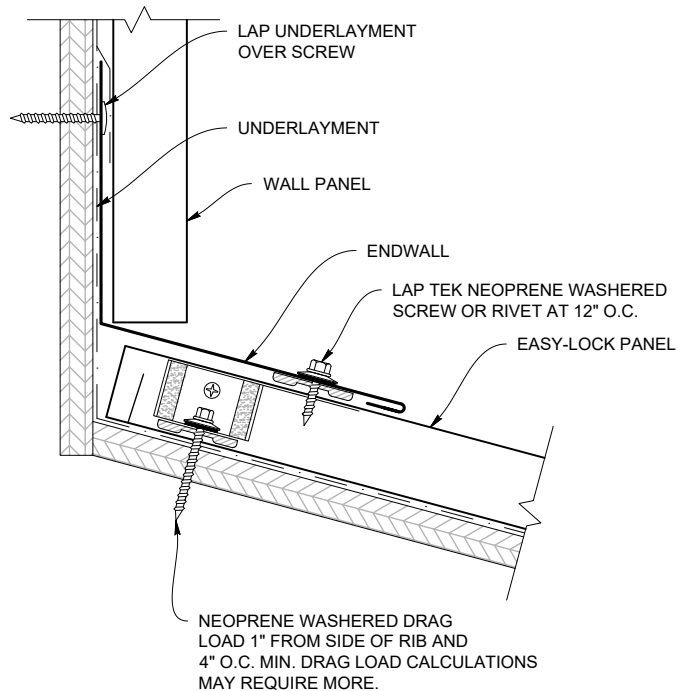


HEMMED ENDWALL FLASHING (ELEWH)

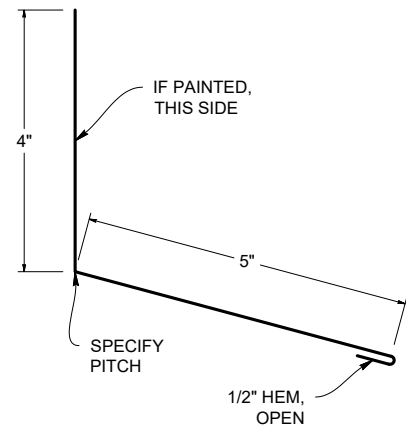


Hemmed Endwall Application

- **Endwall flashing is used where the roof slopes away from a wall (i.e., clerestory or shed roof.) Install panels and add end dams (Up-end top of panel and apply sealant/caulking if not using end dams).**
- **Notch 1" leg of endwall to fit over ribs of panels.**
- **Upper leg (2-1/2") is placed under siding.**
OPTION: Siding is cut 1/4" deep and the lip is caulked into the cut to seal.
Note: Specify with lip if using this method of installation.
- **Attach flashing to end dams (or every rib of panel when not using end dams) with rivet or neoprene washered lap tek screw.**
- **Overlap flashing end to end 4". Place three beads of 1/4" sealant/caulking under lap.**

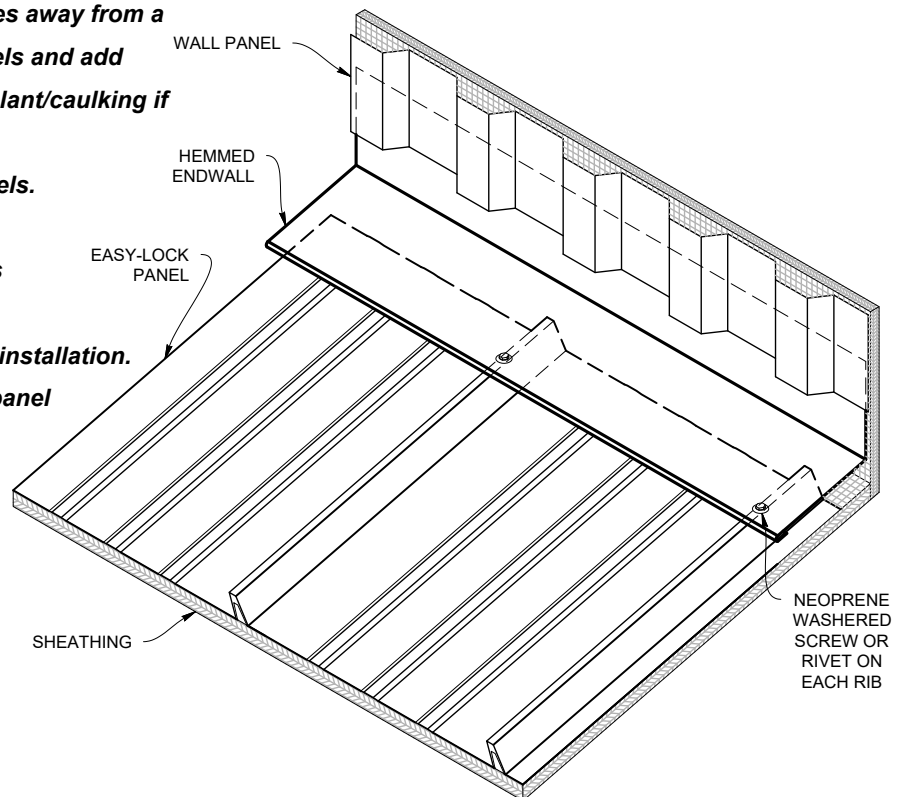


All flashing should be lapped at least 4" with sealant in the lap.


VENTED ENDWALL DETAIL

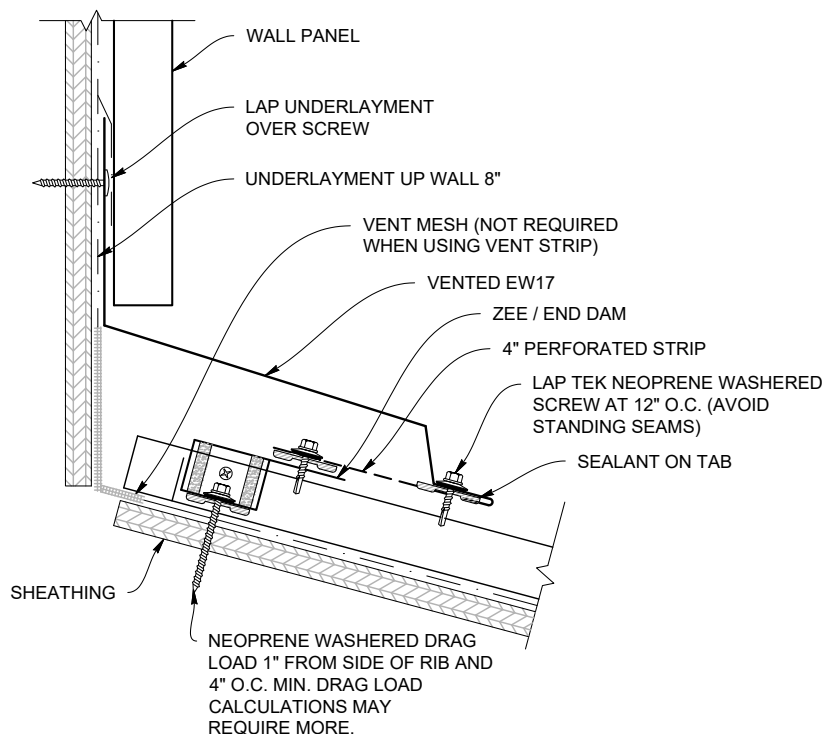

EW17 ENDWALL FLASHING (ELEW17)

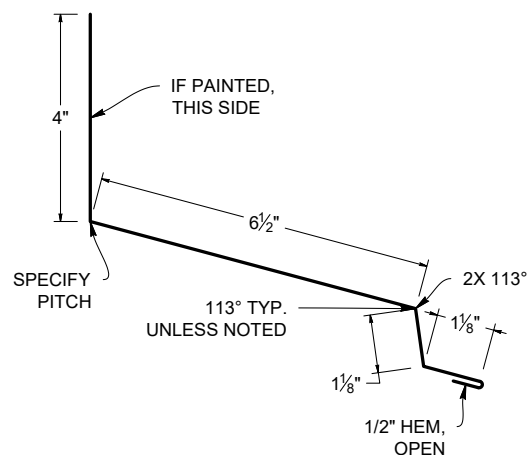

ENDWALL LAP

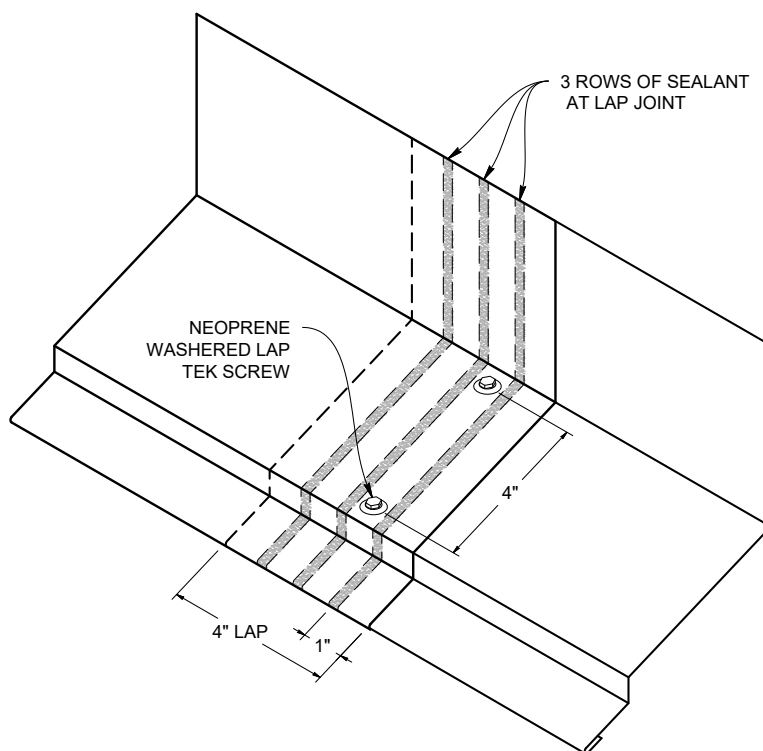


Vented Endwall Application

- Vented endwall flashing is used to provide ventilation at the wall. Cut out or leave the sheathing back 2" from the wall and cover with vent mesh/flyscreen.
- Install end dams.
- Upend top of panel and caulk the corners before installing the flashing (Not required when using end dams.)
- Place the vented endwall flashing on top of the ribs of the panels. The upper leg (2-1/2") is placed under the siding.
- **OPTION:** Siding is cut 1/4" deep and the lip is caulked into the cut to seal.
- **Note:** Specify with lip if using this method of installation (When using end dams, attach to end dams at 12" oc)
- Attach flashing to every other rib of panel with rivet, woodfast screw or stitch screw.
- Overlap flashing end to end 4". Place 1/4" bead of sealant/caulk under lap.


All flashing should be lapped at least 4" with sealant in the lap.

WT Vented Endwall


WT VENTED ENDWALL DETAIL

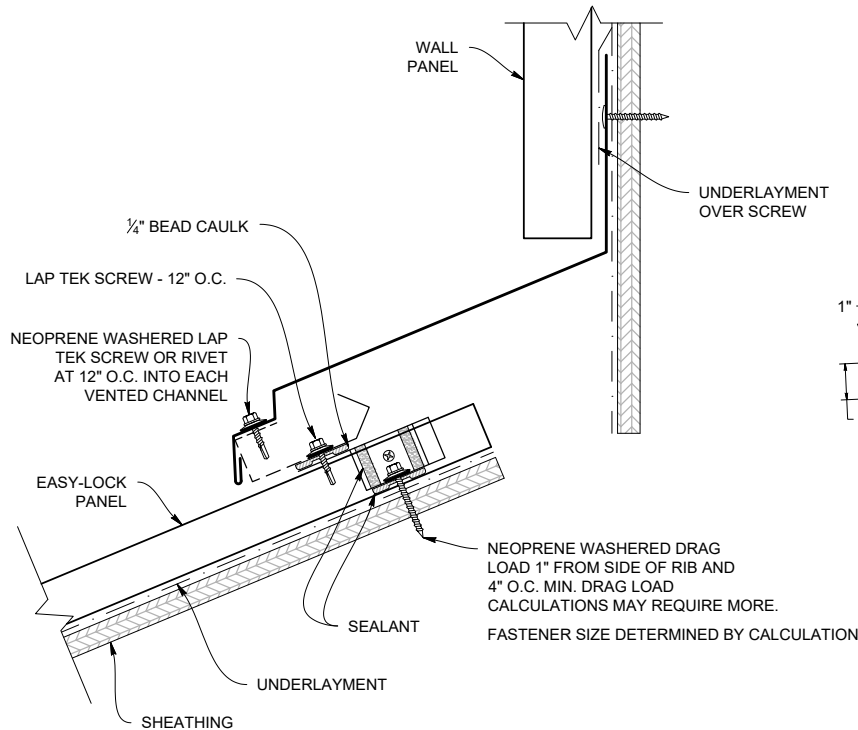


VENTED ENDWALL LAP

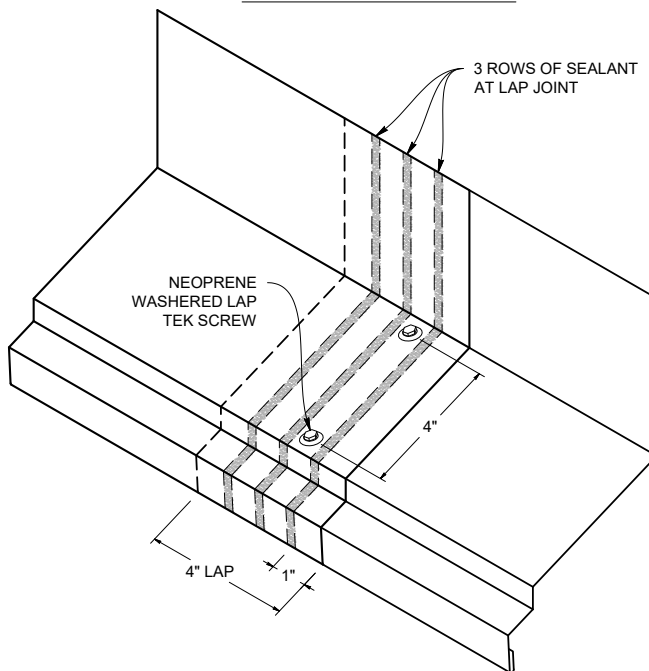

WT VENTED ENDWALL FLASHING (WTEWV)

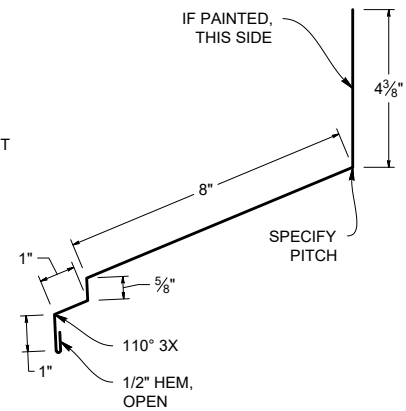

PERFORATED VENT DRIP: E2886 EMBER RESISTANT (PVD)

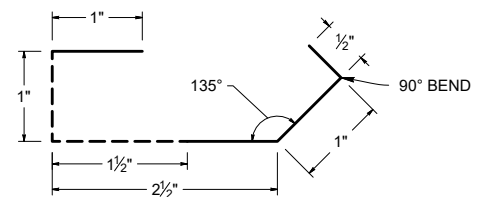


****NOTE: PERFORATED VENT DRIP IS COMPATIBLE WITH WT VENTED ENDWALL ONLY****

****7.25" Free air per LFT for Ridge****

Note: All screws must be fastened into solid substrate.
Flashing must be lapped 4" with 3 rows of gunnable sealant.

All flashing should be lapped at least 4" with sealant in the lap.


END DAM DETAIL

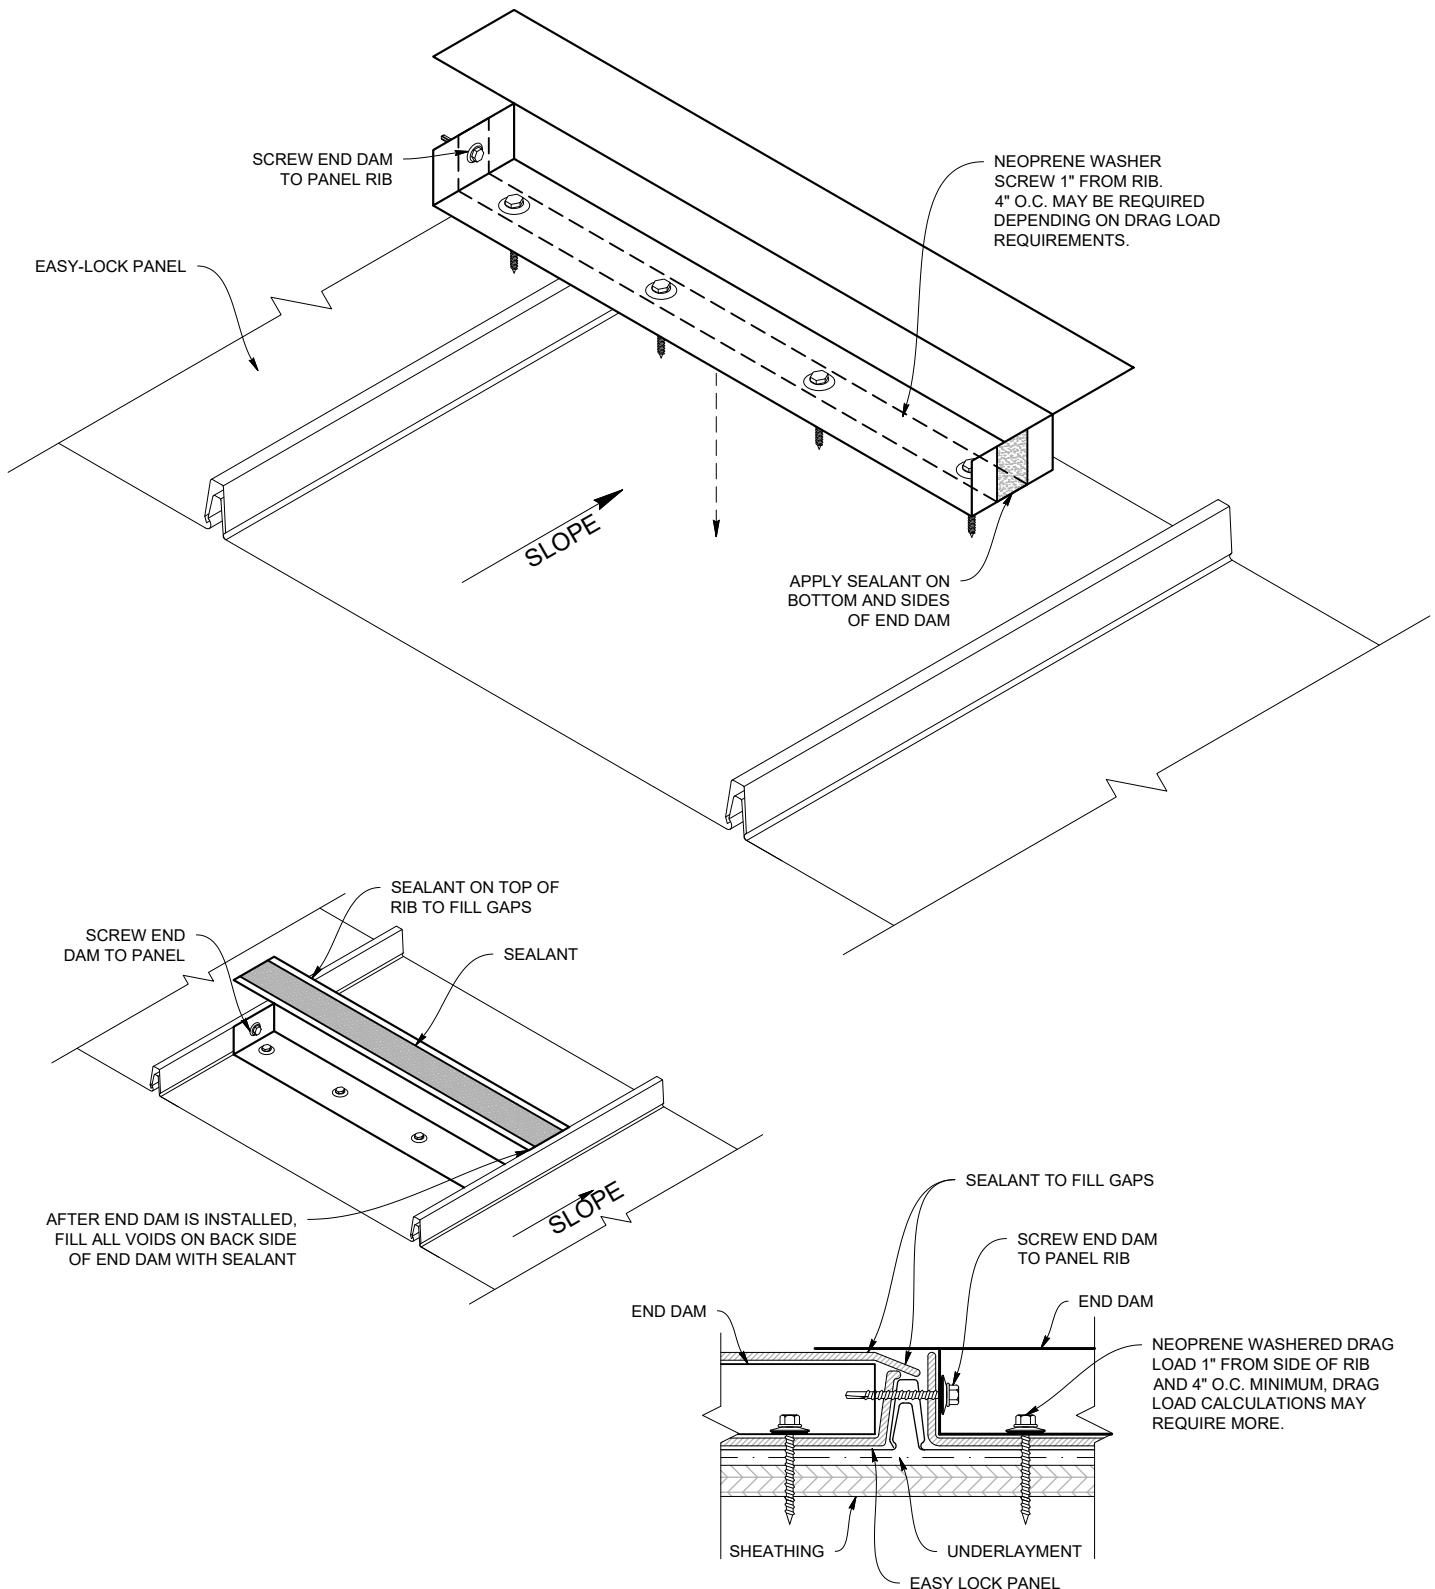


Eave to Gable Transition

Eave to Gable Transition

STEP 1

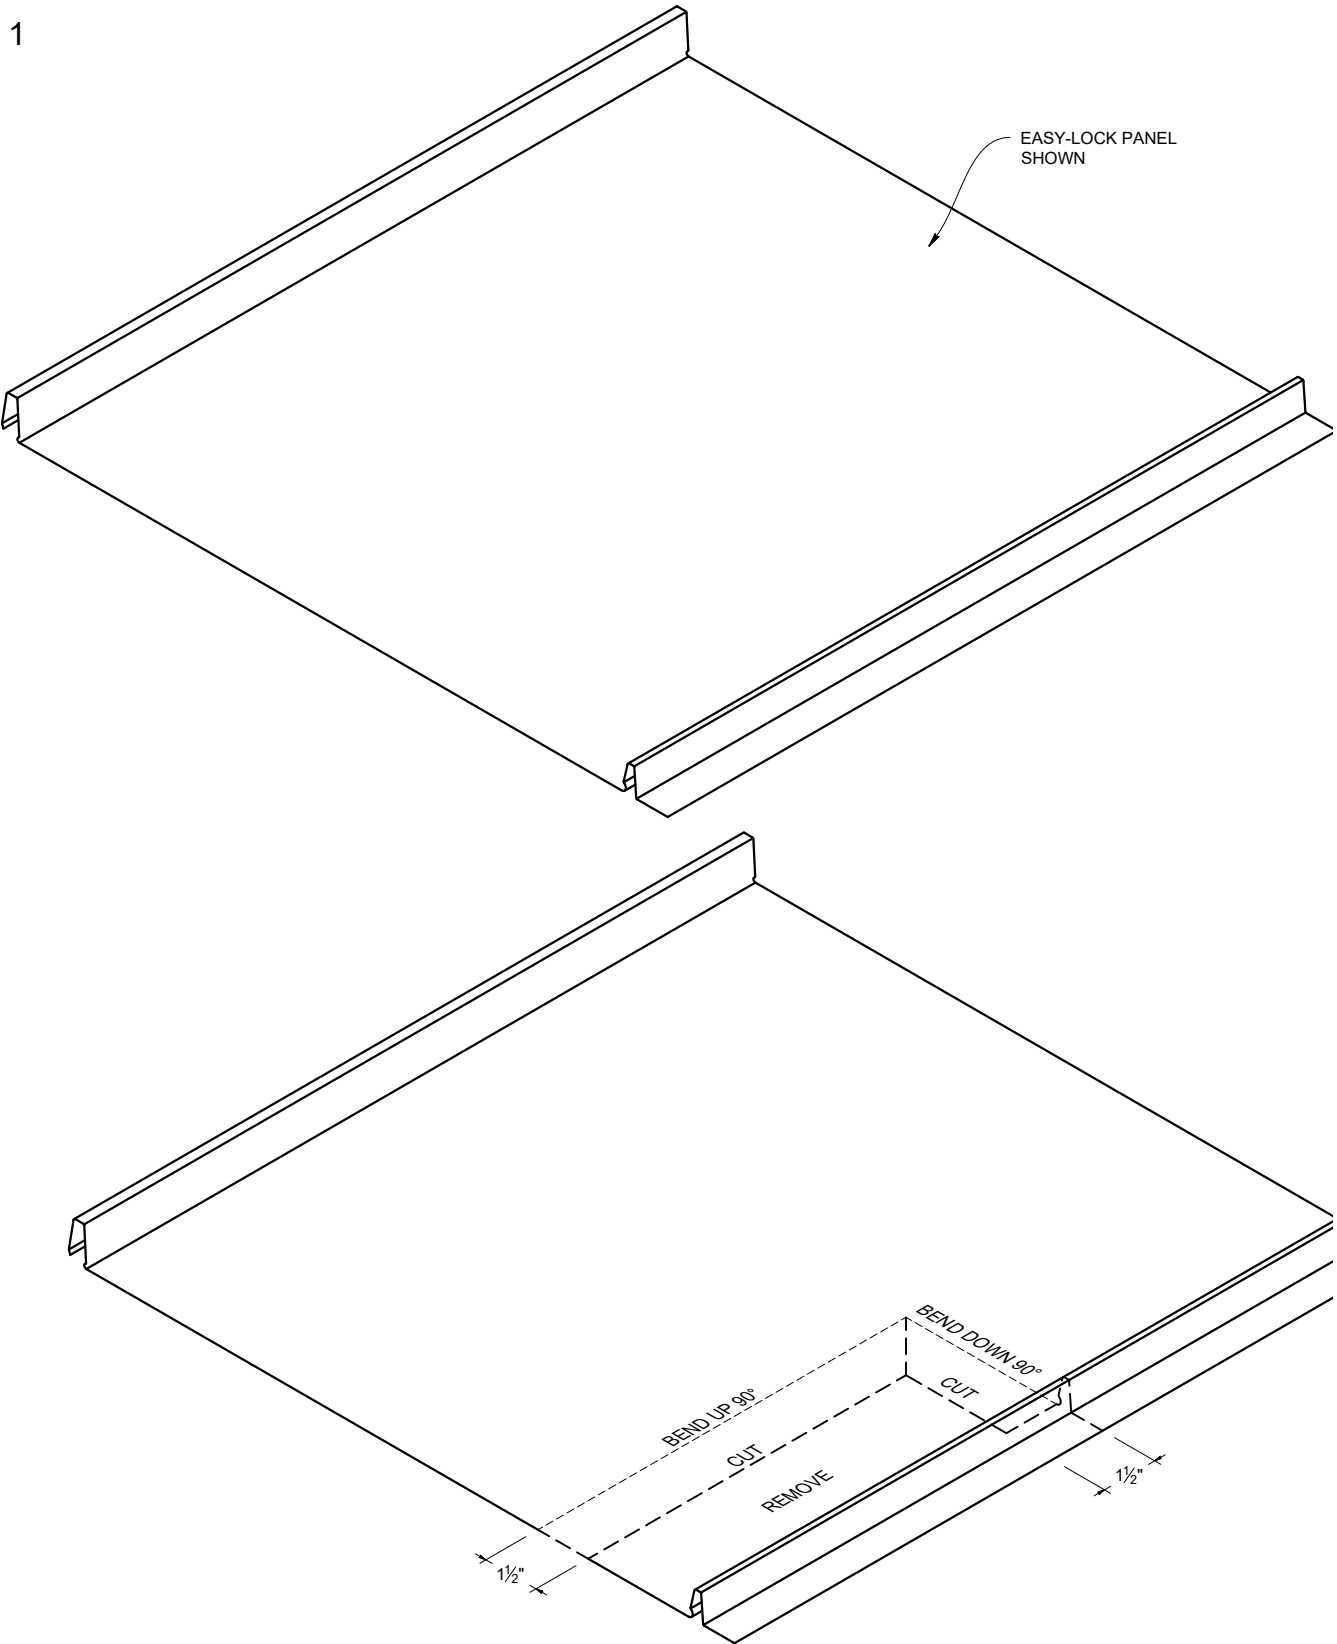


STEP 2

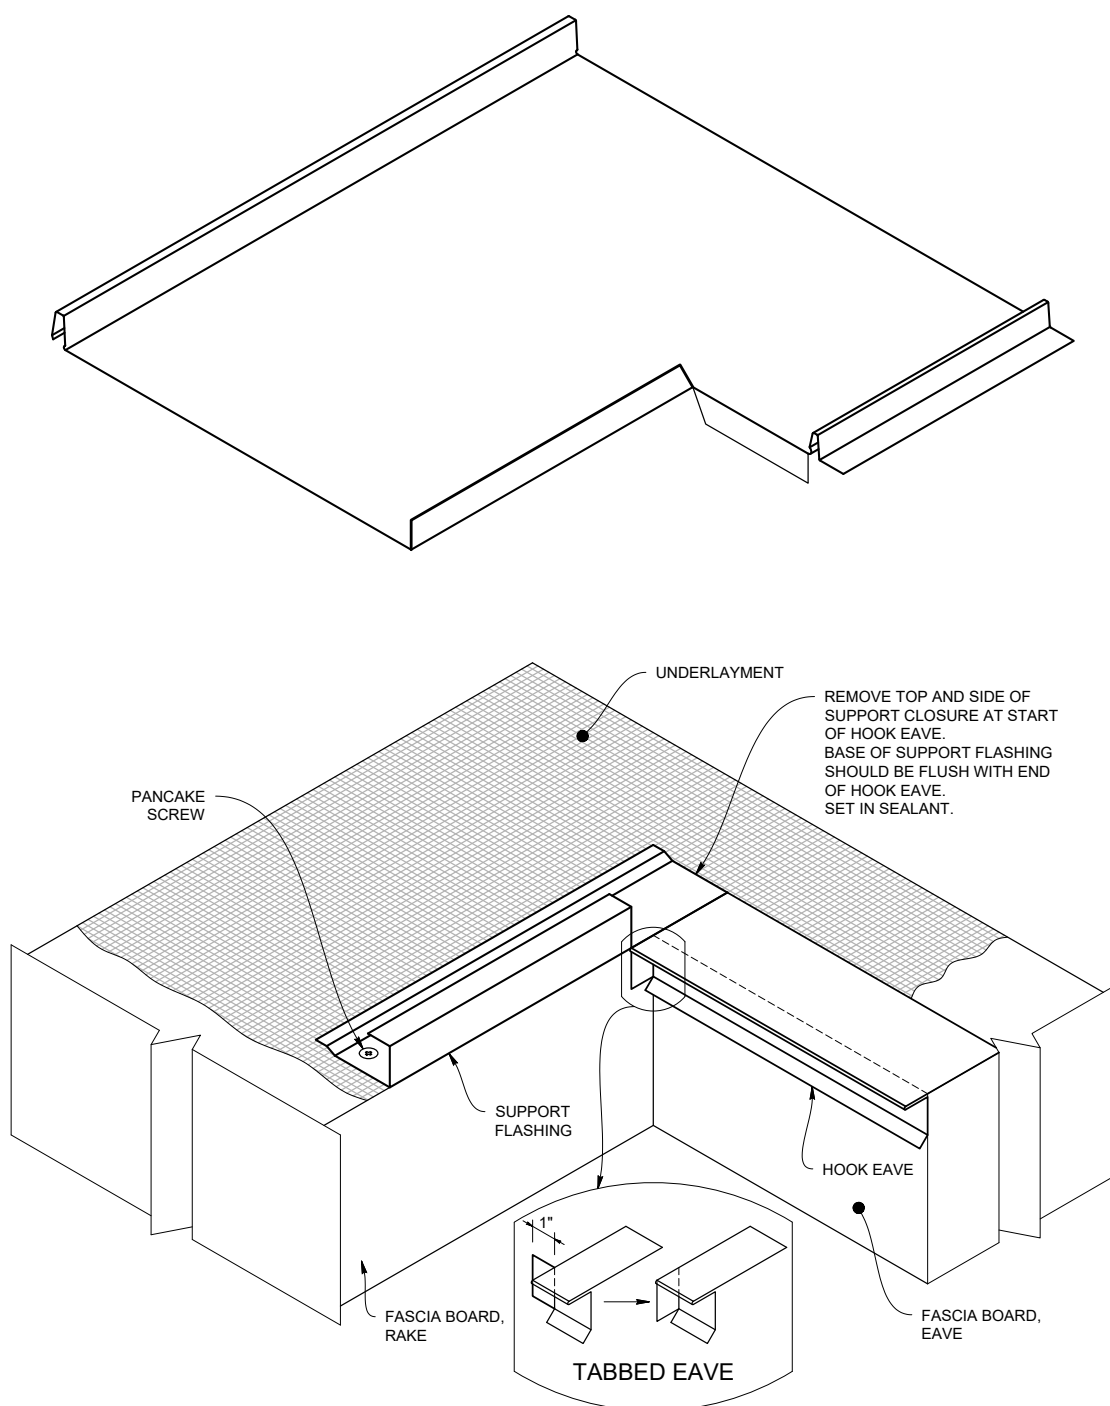


Eave to Gable Transition

STEP 3

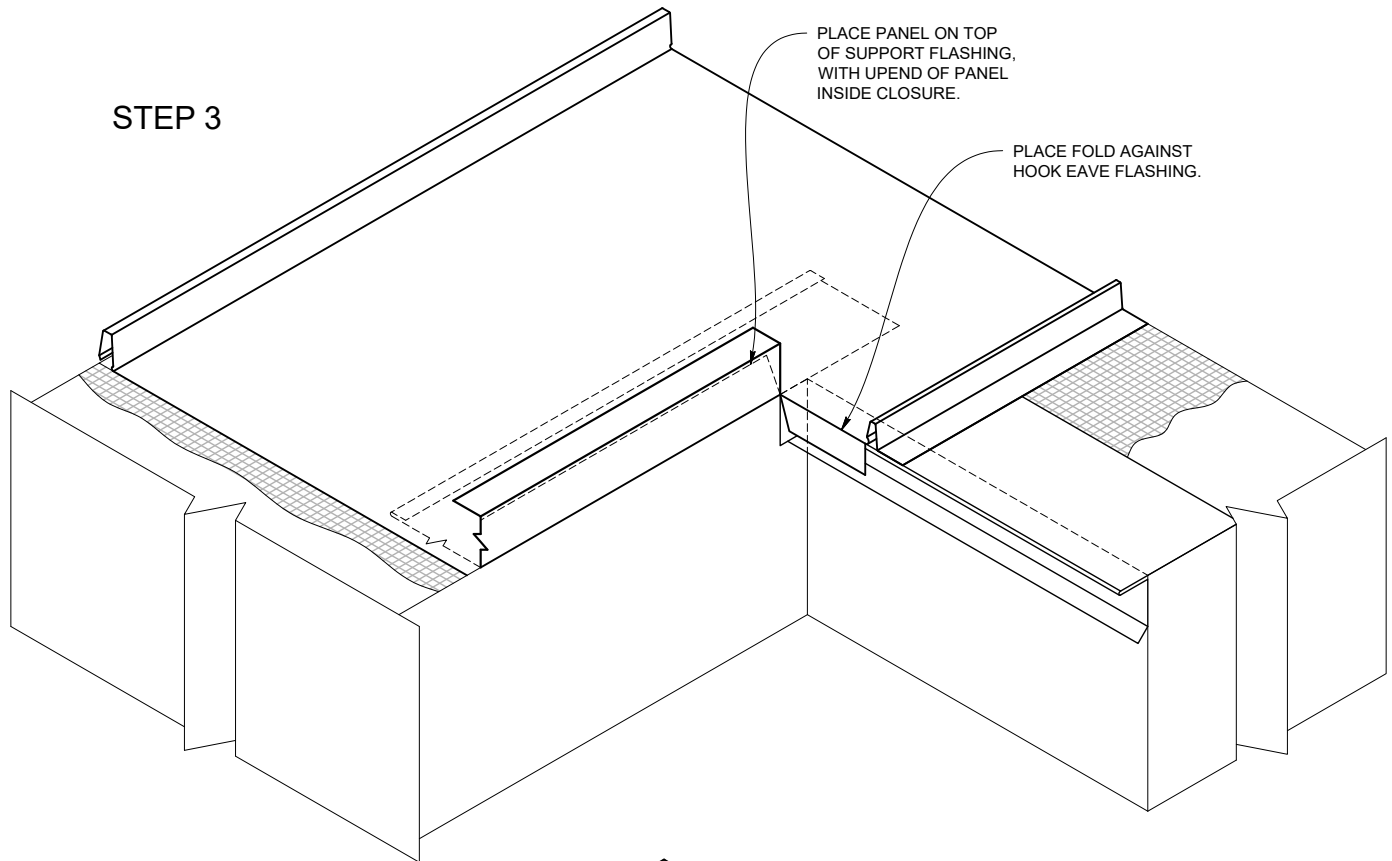


STEP 4

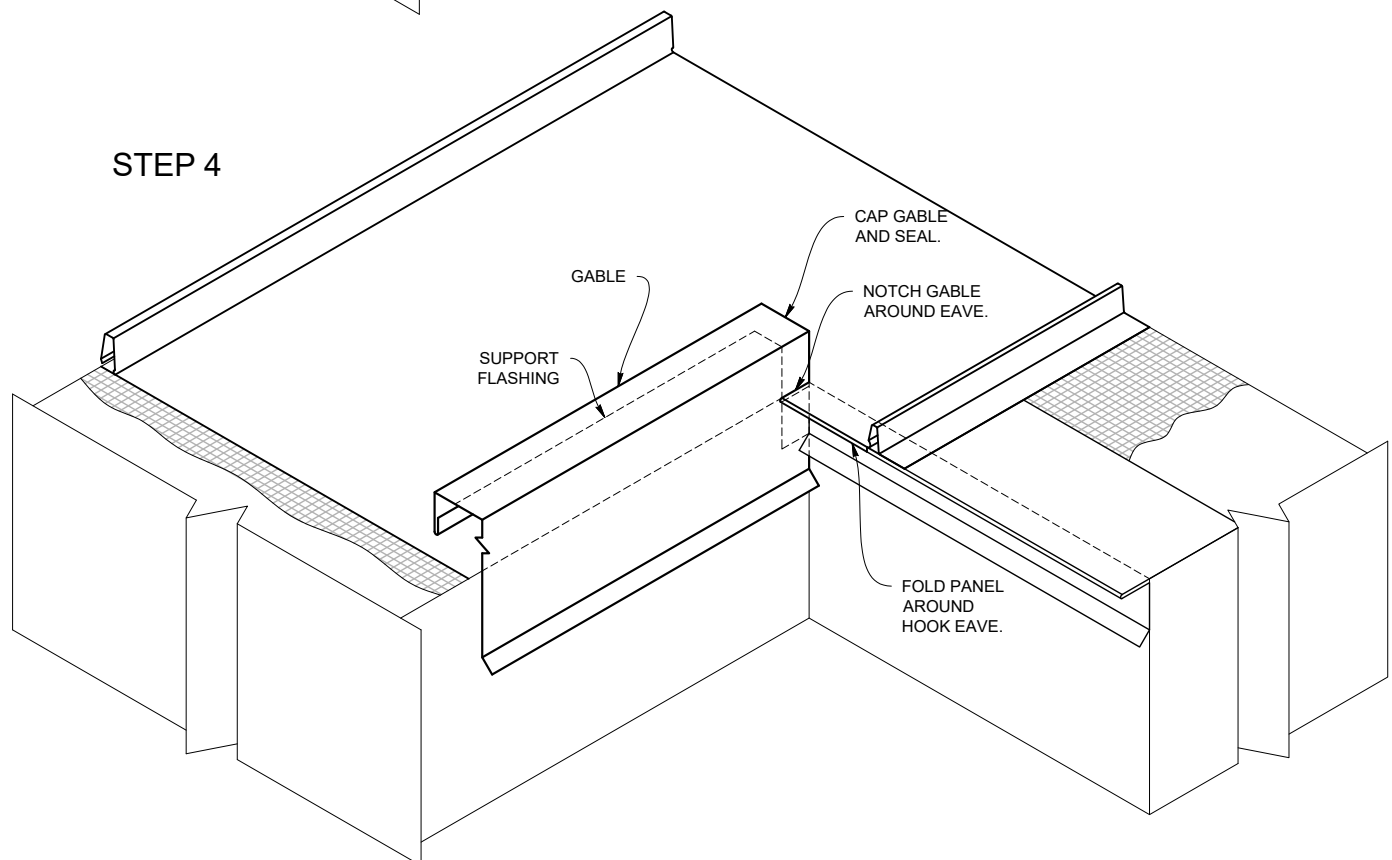


SKYLIGHT / CHIMNEY TRIM


For 2" X 4" Curbing

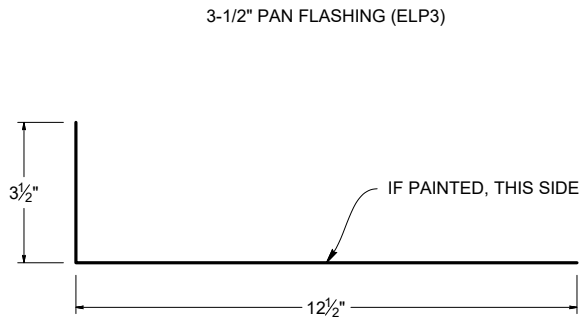


2-1/2" SIDE AND BOTTOM FLASHING (ELSB3)

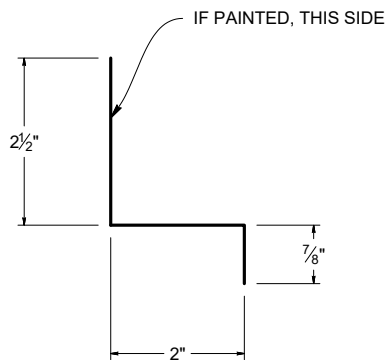

For 2" X 6" Curbing

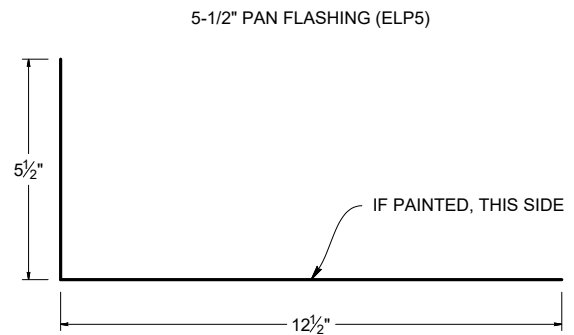

4-1/2" SIDE AND BOTTOM FLASHING (ELSB5)

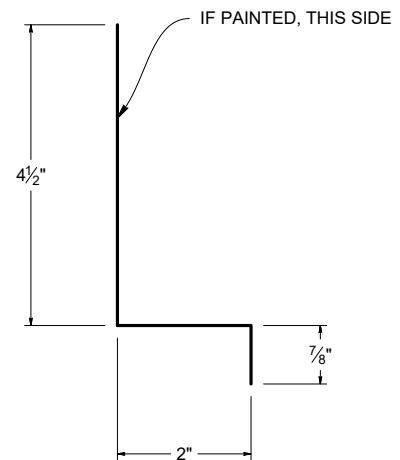

Apply parts as described on the following pages. Please note that the 12-inch leg of the pan flashing used on a chimney application will need to be bent to the pitch of the roof.


Skylight / Chimney



The following instructions are applicable to most typical skylight or chimney applications. However, your individual application may be unique and require custom flashing and/or special installation. Be sure to check with the skylight manufacturer to determine recommended flashing and whether deviation will result in nullifying your warranty. The use of a cricket is advised in some situations, especially where the drainage is into a curb that exceeds 2'6", or if the roof area will have a lot of debris falling on it. Crickets are specially made to fit the curb/chimney and are used in place of the head flashing. Installation information for the cricket and the head flashing is the same.

Skylight / Chimney Application

Dotted lines show where to cut.

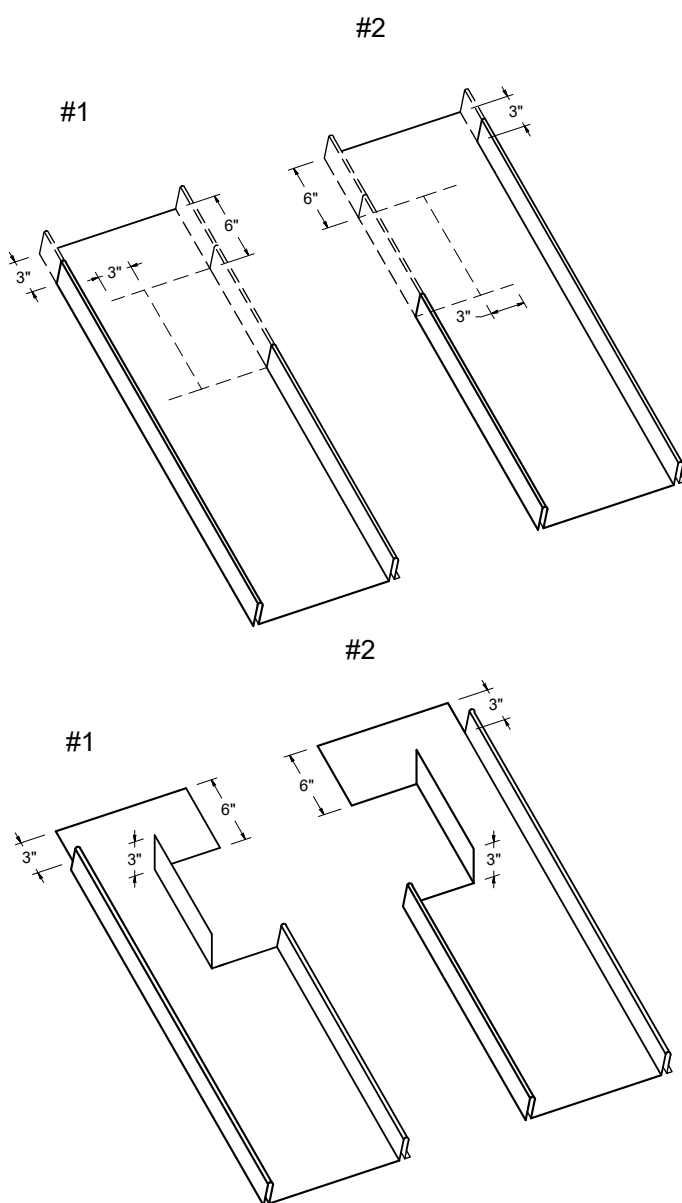


Parts shown after they have been cut and bent.

Step 1: Working from left to right, cut to fit, bend and install panel #1.

Step 2: Cut to fit, bend and install panel #2. *(Install additional panels as normal, between panels #1 and #2, as needed to cover width of skylight/chimney opening).*


Step 3: The next piece to install is the pan flashing #3. First place a bead of skinning butyl sealant on top of panel #1 and #2 to stop any water from siphoning at the joint. Next, cut and bend the pan flashing to fit. The artificial ribs should be 1/2" high. Set and fasten.

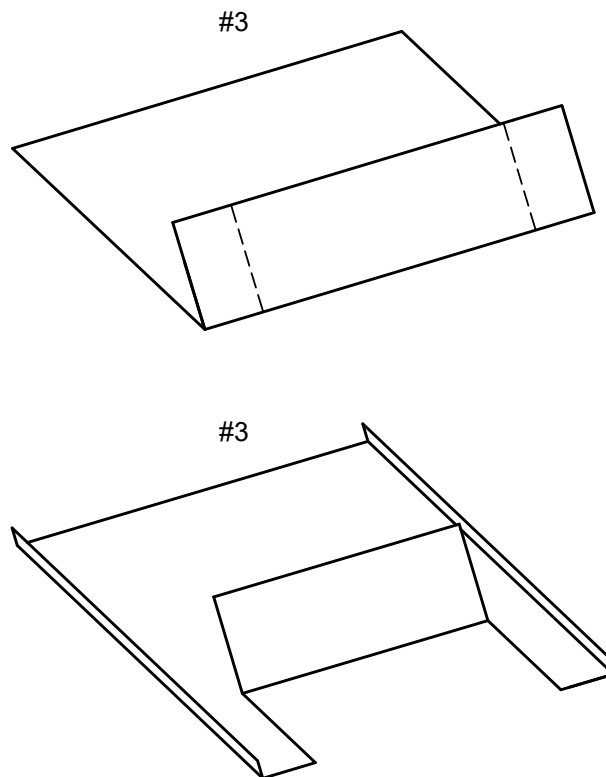


#3 is the Pan flashing. Order the proper size for the curb height of your skylight, 5-1/2" (ELP5) or 3-1/2" (ELP3).

Dotted lines show where to cut.

#5

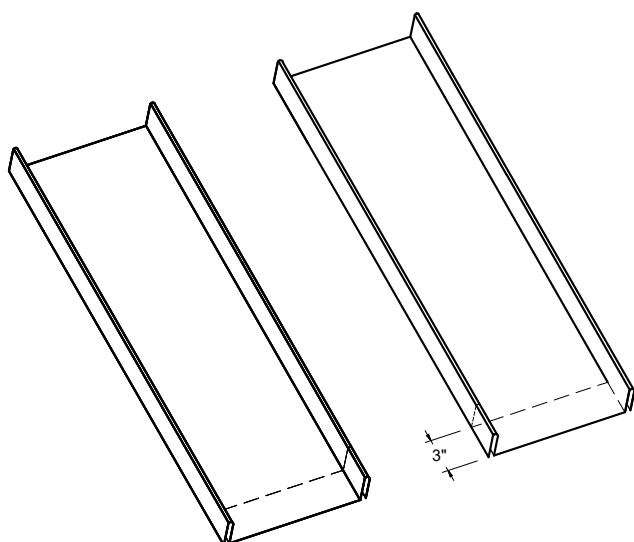

#5

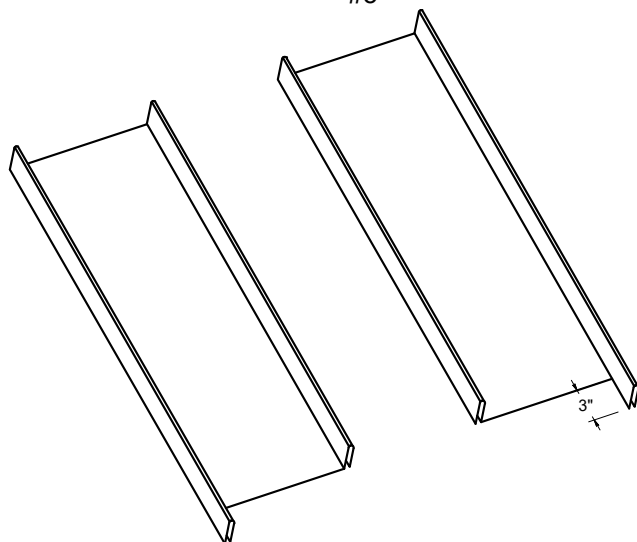

Parts shown after they have been cut.


Step 4: Working from left to right, cut and install panel #4, snapping it into place and continue fastening as usual.

Step 5: Cut and install panel #5. (Install additional panels as normal, between panels #1 and #2, as needed to cover width of skylight/chimney opening).

Step 6: Install the bottom flashing #6 as you would the standard endwall flashing. Next, apply sidewall flashing #7 and #8 finishing off around the curb of the skylight.

Parts #6, #7 and #8 are all the Sidewall flashing (ELSB5 or ELSB3). The only difference is the way they are cut and bent on the job. Again, order the proper size curb height of your skylight.

Dotted lines show where to cut

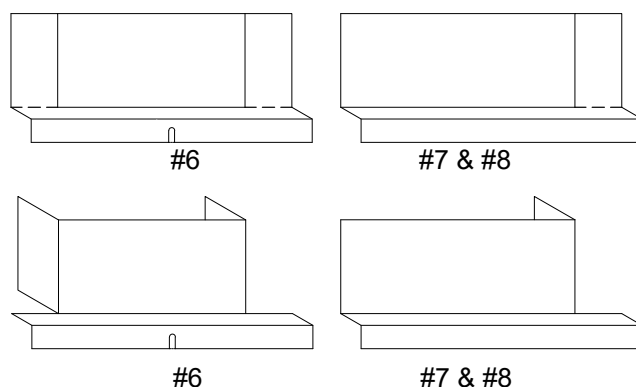

Parts shown after they have been cut and bent.

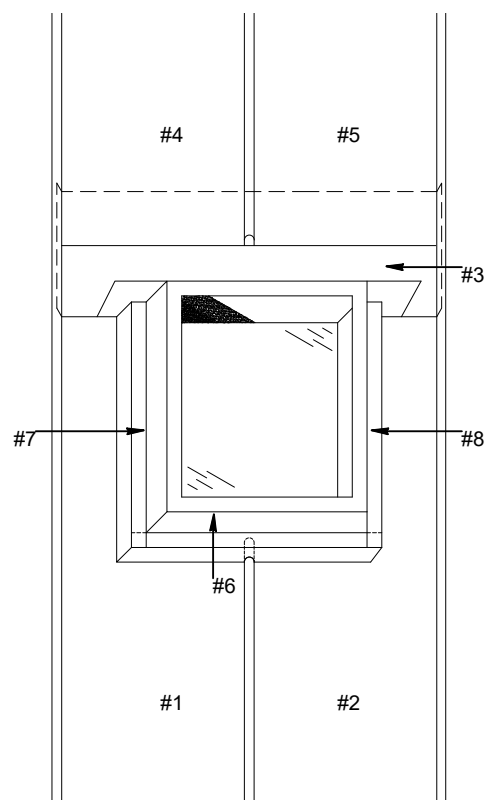


Diagram of part placement around the skylight.

Note: Skinning butyl sealant should be used at all joints and where the metal is to be overlapped.



Note: The care and attention to detail that is used when installing the flashings determines the overall finished appearance.

Note: The preceding information is designed as a general guideline to be used and is not the only acceptable method to flash a skylight.


Pipe Penetration - on Plate

FOR PIPES LOCATED 20' OR GREATER FROM PIN POINT

Allows panel and pipe flashing to move with temperature change.

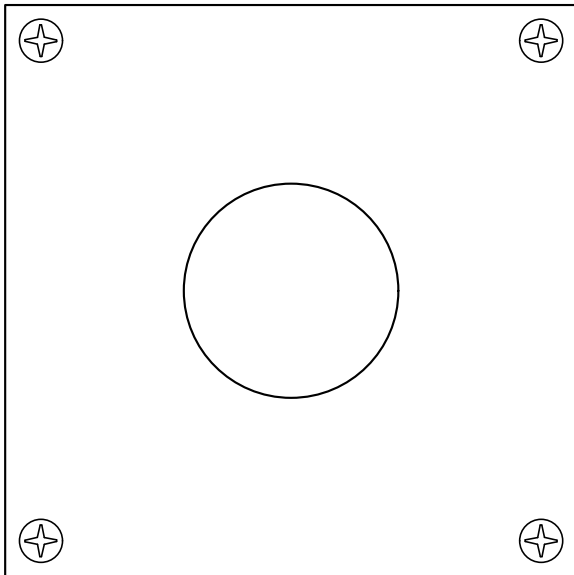
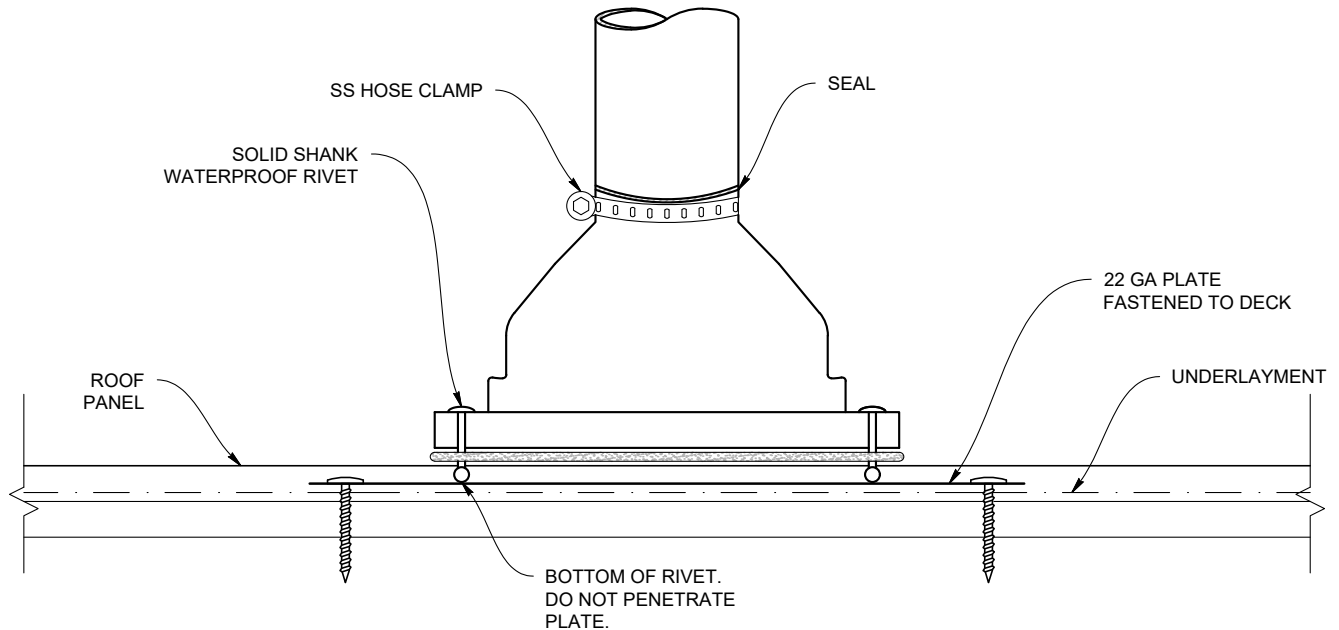


SINGLE 22 GAUGE PLATE


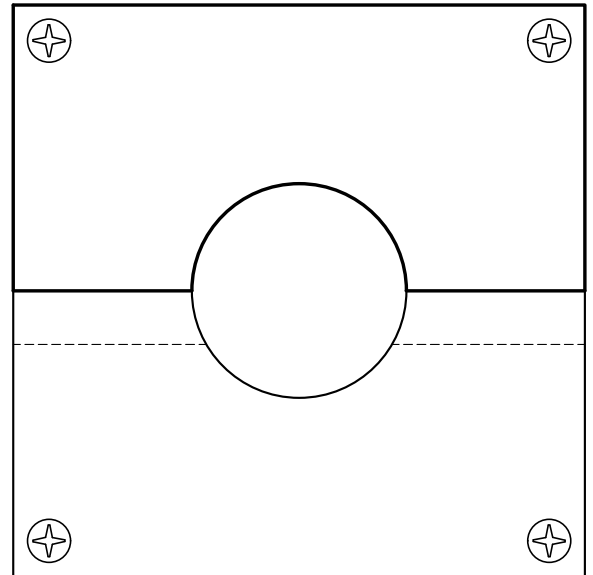


TWO OVERLAPPING 22 GAUGE PLATES



Pipe Penetration - on Rib

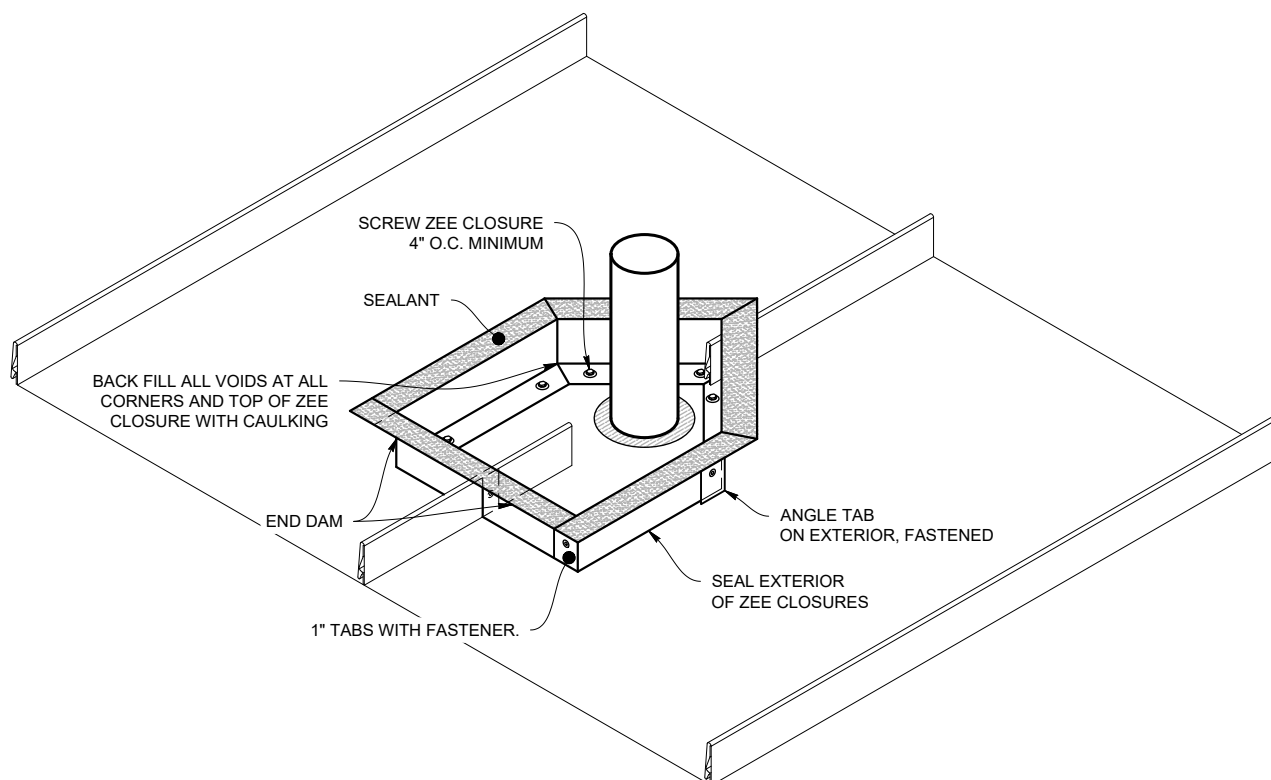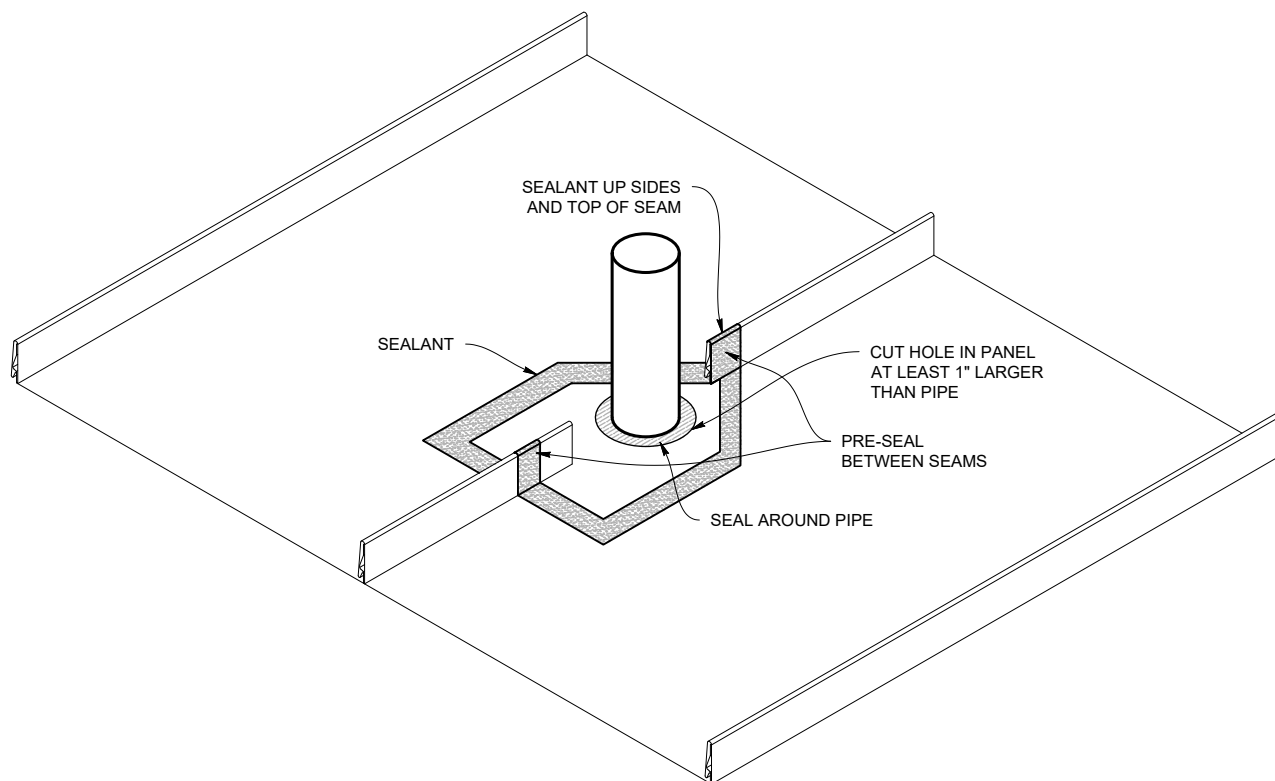


Pipe Penetration - on Rib

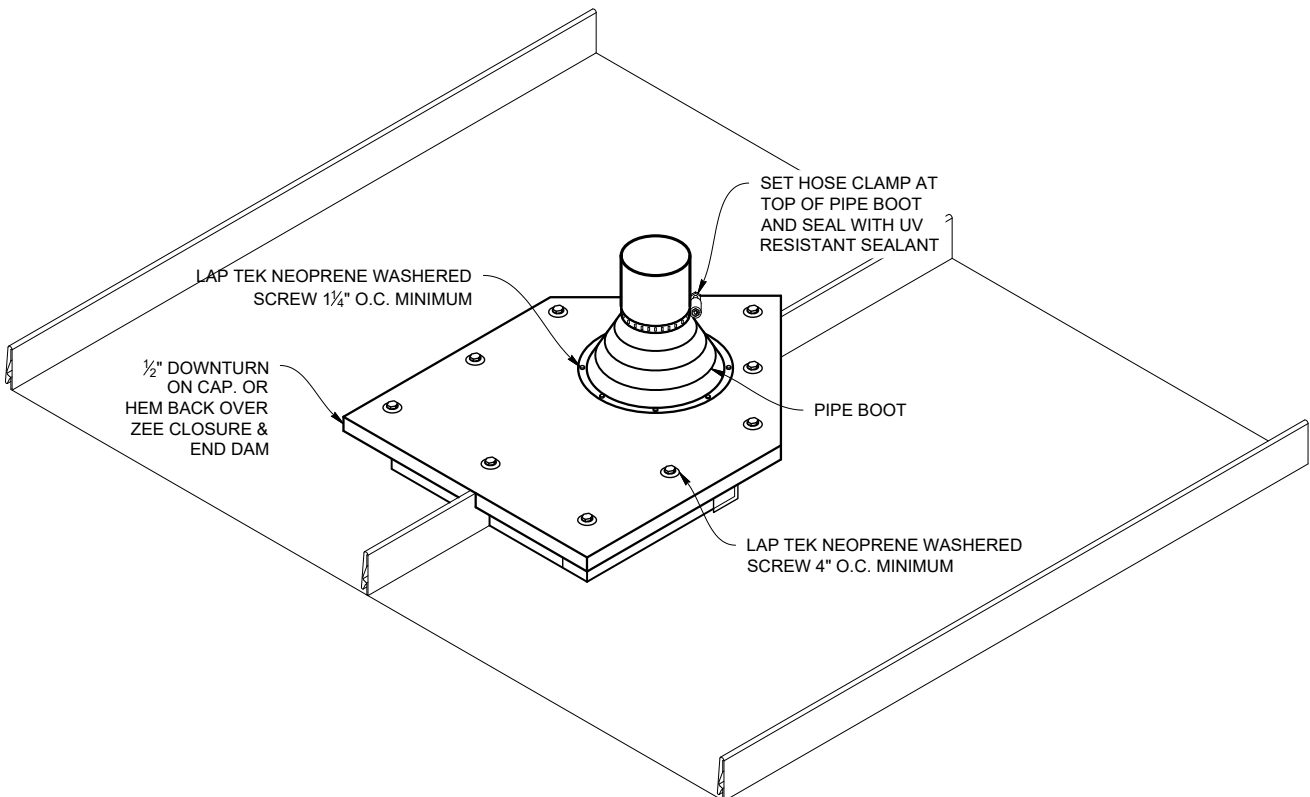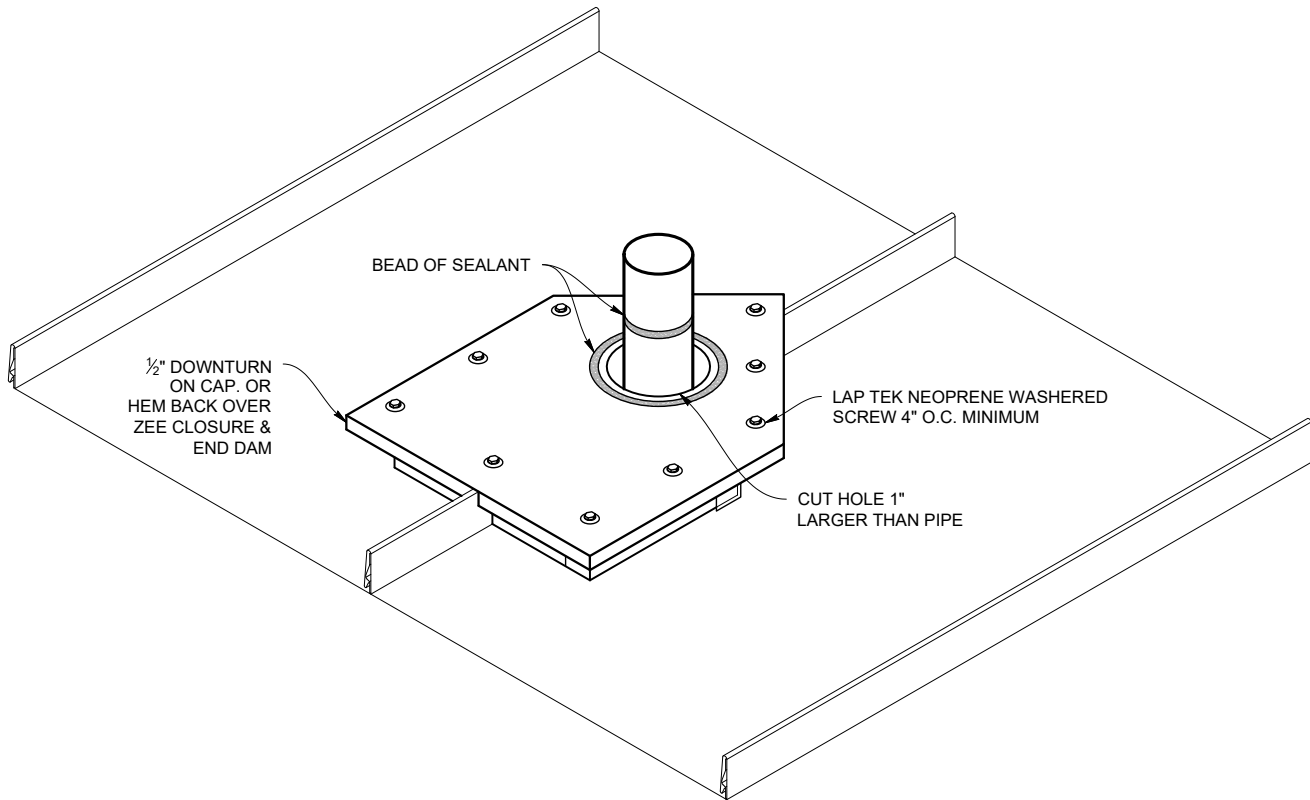

Pipe Penetration - on Plate

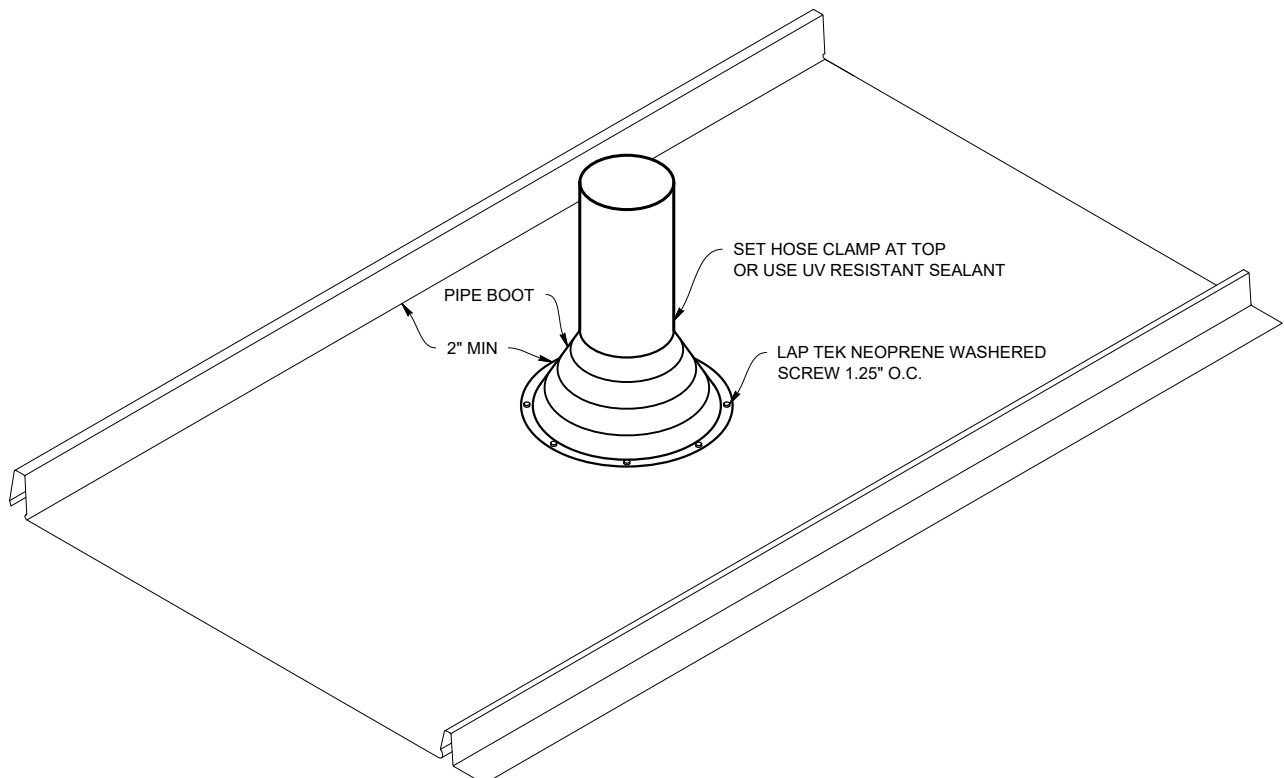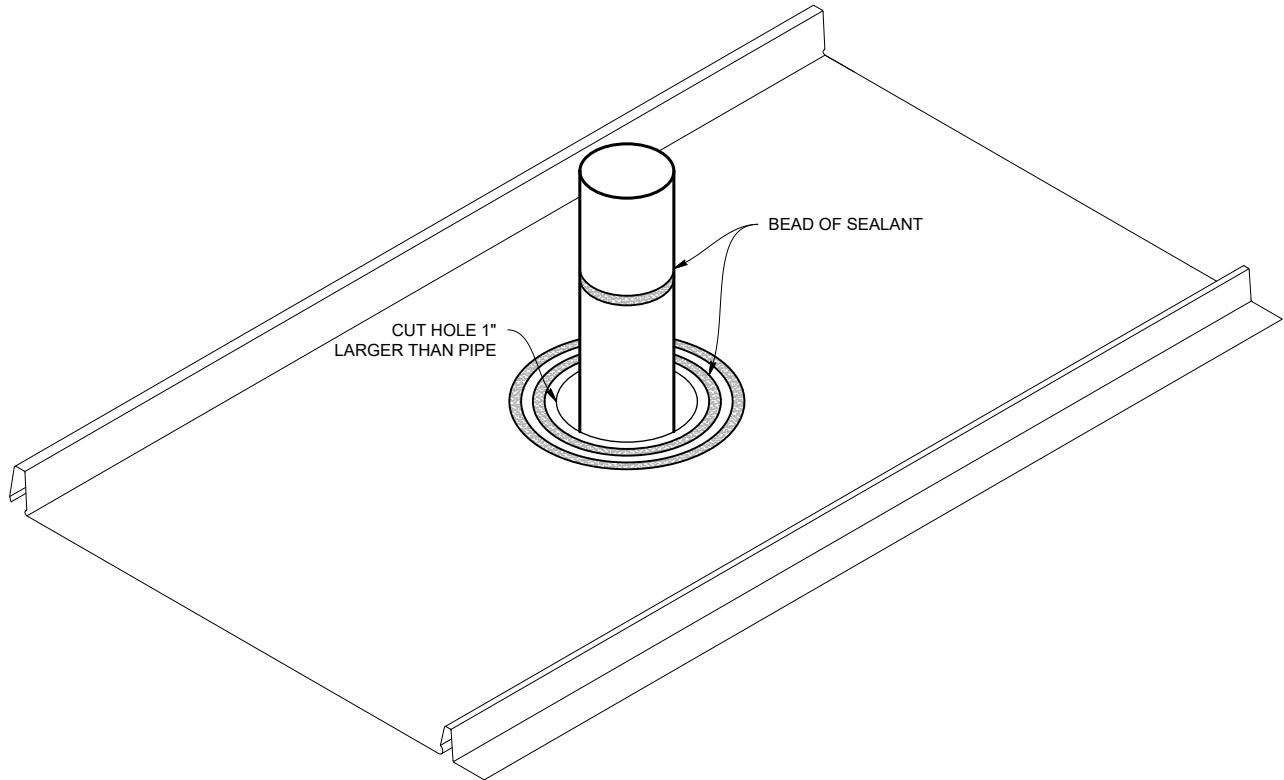


EAVE LOW (ELELP)

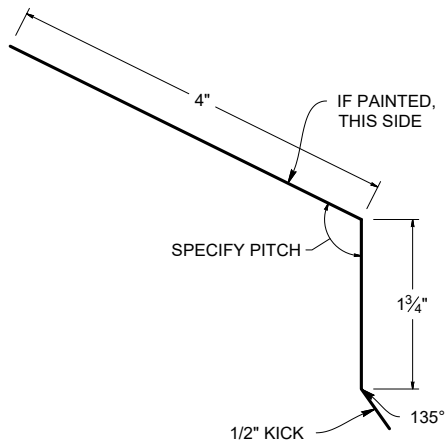


SCALE 1:2 S.O. 6.25" WEIGHT: 5.0 LBS.

1 1/2" EAVE (ELE1.5)

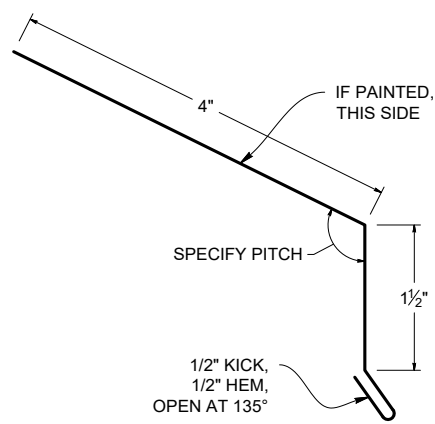


SCALE 1:2 S.O. 6.5" WEIGHT: 5.8 LBS.

HOOK EAVE (ELEH)

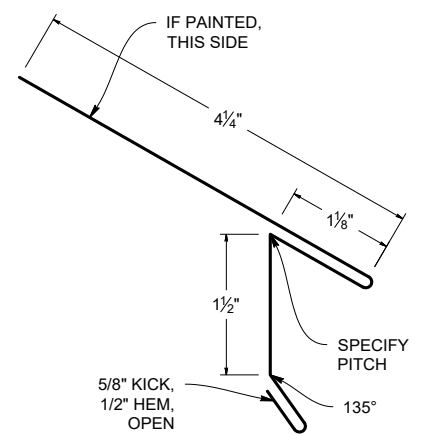

SCALE 1:2 S.O. 8" WEIGHT: 6.5 LBS.


EL 1"X3" EAVE FLASHING (ELE13)

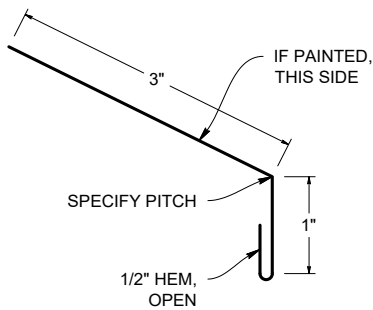

SCALE 1:2 S.O. 4.5" WEIGHT: 3.7 LBS.


OFFSET CLEAT (10') (ELOC)

 NON-VISIBLE / SUB-FLASHING ARE NOT PROVIDE
IN SPECIFIC COLORS UNLESS SPECIFIED




SCALE 1:2 S.O. 3" WEIGHT: 2.5 LBS.

BOX GUTTER (EL65BG)

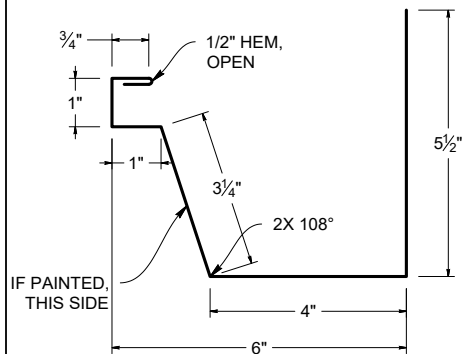


SCALE 1:4 S.O. 16" WEIGHT 13.1 LBS

NARROW GABLE (ELGN)

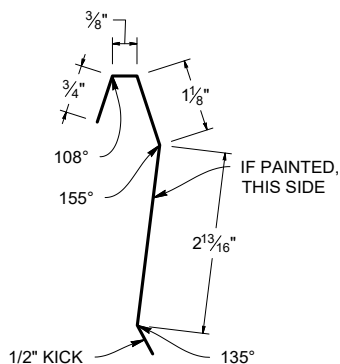


SCALE 1:3 S.O. 5.5625" WEIGHT: 4.7 LBS.

COMPENSATING GABLE (ELGC)

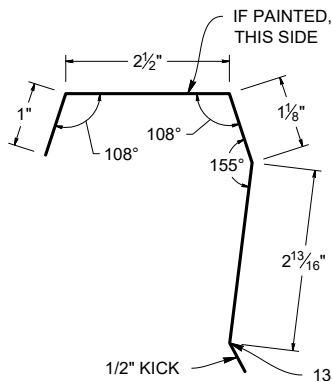


SCALE 1:3 S.O. 7.9375" WEIGHT: 6.6 LBS.

COMPENSATING GABLE HEMMED (ELGCH)

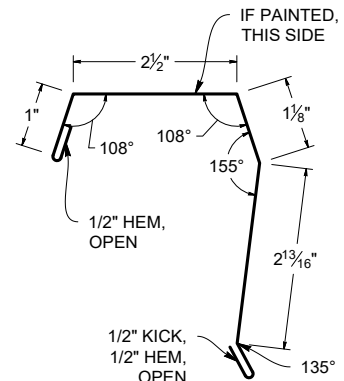


SCALE 1:3 S.O. 8.9375" WEIGHT: 7.9 LBS.

GABLE G-17
(ELGG17)

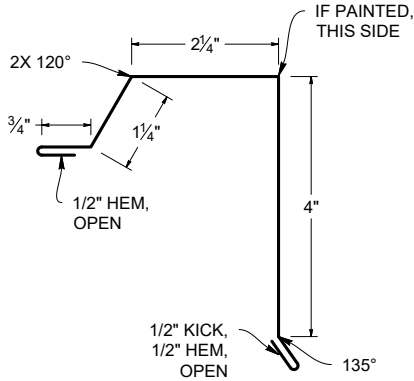


SCALE 1:3 S.O. 9.75" WEIGHT: 8 LBS.

BOX GABLE
(ELGB)

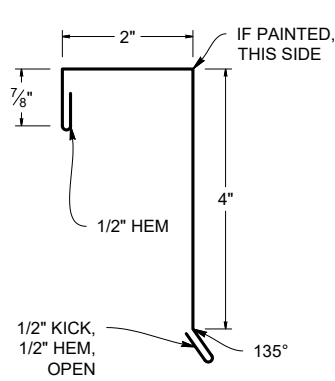

SCALE 1:3 S.O. 8.375" WEIGHT: 6.9 LBS.


BOX GABLE NO HEM
(ELGBNH)

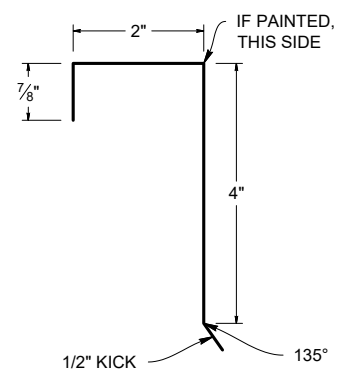

SCALE 1:3 S.O. 7.375" WEIGHT: 6.1 LBS.


GABLE CLEAT (10')
(ELBGC)

NON-VISIBLE /
SUB-FLASHING ARE
NOT PROVIDE IN
SPECIFIC COLORS
UNLESS SPECIFIED

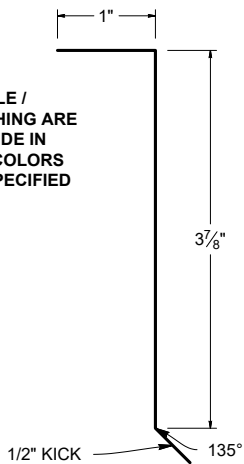


SCALE 1:2 S.O. 5.375" WEIGHT: 4.4 LBS.

ALTERNATE GABLE
(ELAG)

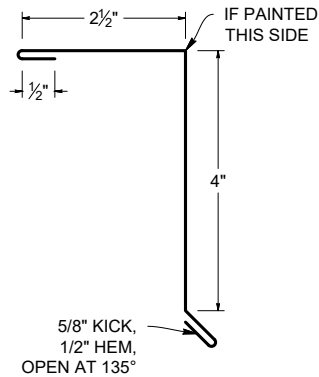

SCALE 1:2 S.O. 8.125" WEIGHT: 6.1 LBS.


ALTERNATE GABLE CLEAT
(ELAGC)

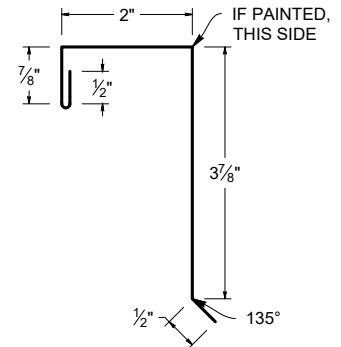

SCALE 1:2 S.O. 7.75" WEIGHT: 6.3 LBS.


SUPPORT FLASHING (10')
(ELSF)

NON-VISIBLE / SUB-FLASHING ARE NOT PROVIDE
IN SPECIFIC COLORS UNLESS SPECIFIED

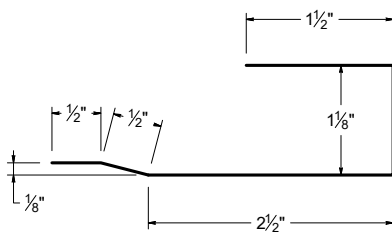


SCALE 1:2 S.O. 6.125" WEIGHT: 5.1 LBS.

PROW
(ELPF)

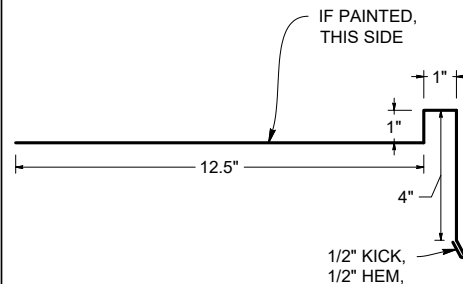

SCALE 1:6 S.O. 20" WEIGHT: 16.3 LBS.

FIELD NOTCHED RIDGE (UNVENTED)
(ELRS)

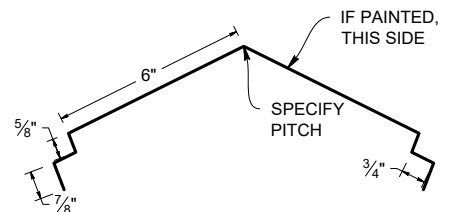

SCALE 1:6 S.O. 16.5" WEIGHT: 13.7 LBS.

Easy-Lock™


Flashing and Details Selection

Flashing: 10' Standard



R-17 RIDGE (ELR17) SCALE 1:8 S.O. 20" WEIGHT: 16.1 LBS.	RIDGE FULL VENTED (ELRFV) SCALE 1:7 S.O. 16.75" WEIGHT: 13.7 LBS.	WT RIDGE FULL VENTED (WTRFV) SCALE 1:8 S.O. 22.25" WEIGHT: 18.10 LBS.
VENTED PEAK FLASHING (ELRECV) SCALE 1:5 S.O. 14.625" WEIGHT: 11.9 LBS.	PEAK CLEAT (ELRECC) NON-VISIBLE SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED SCALE 1:4 S.O. 5.625" WEIGHT: 4.5 LBS.	WT VENTED PEAK FLASHING (WTRECV) SCALE 1:8 S.O. 18.25" WEIGHT: 14.85 LBS.
HEMMED PEAK FLASHING (ELRECH) SCALE 1:4 S.O. 11.75" WEIGHT: 9.6 LBS.	FIELD NOTCHED PEAK FLASHING (ELREC) SCALE 1:4 S.O. 11.875" WEIGHT: 9.8 LBS.	FIELD NOTCHED HIP (ELHS) SCALE 1:6 S.O. 14.5" WEIGHT: 12.1 LBS.
HIP/RIDGE (SPECIFY) (ELHR5.625) SCALE 1:4 S.O. 13.25" WEIGHT: 10.1 LBS.		HIP/RIDGE (SPECIFY) (ELHR7) SCALE 1:4 S.O. 16" WEIGHT: 13.1 LBS.

VALLEY FLASHING 24" HEMMED
(ELVF24H)

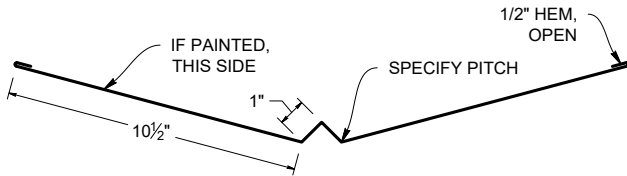


SCALE 1:7

S.O. 24"

WEIGHT: 19.6 LBS.

VALLEY FLASHING 24"
(ELVF24)

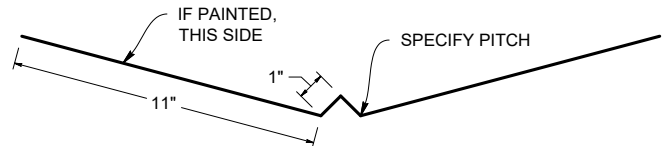


SCALE 1:7

S.O. 24"

WEIGHT: 19.6 LBS.

VALLEY WIDE FLASHING
(ELVFW)

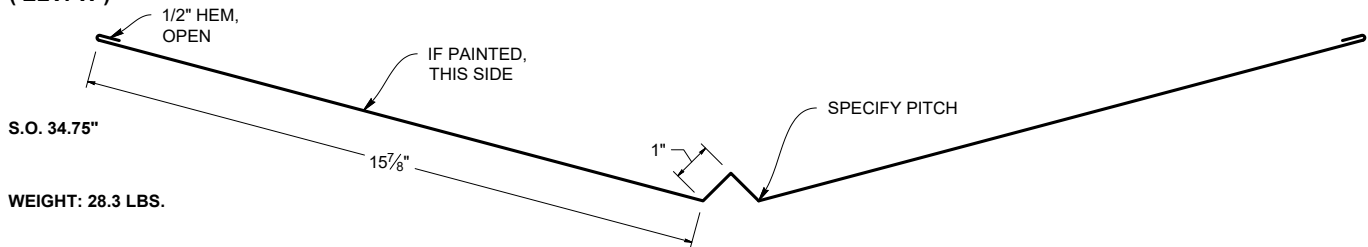


S.O. 34.75"

WEIGHT: 28.3 LBS.

SCALE 1:5

FIELD NOTCHED INSIDE PITCH CHANGE
(ELPCIN)

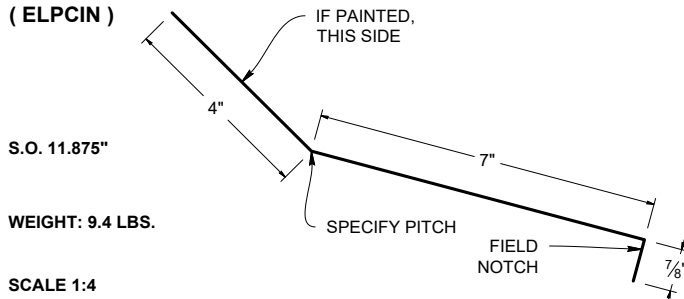


S.O. 11.875"

WEIGHT: 9.4 LBS.

SCALE 1:4

FIELD NOTCHED OUTSIDE PITCH CHANGE
(ELPCON)

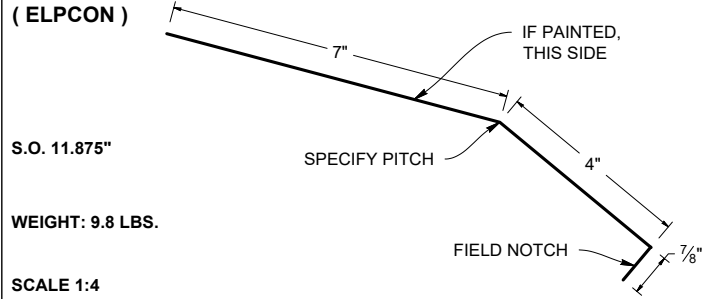


S.O. 11.875"

WEIGHT: 9.8 LBS.

SCALE 1:4

OUTSIDE PITCH CHANGE HEMMED
(ELPCOH)

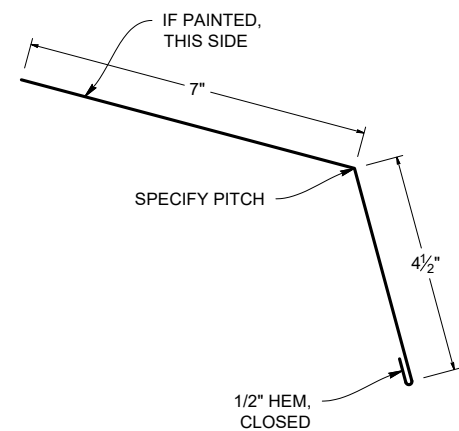


SCALE 1:4

S.O. 12"

WEIGHT: 9.8 LBS.

INSIDE PITCH CHANGE HEMMED
(ELPCIH)

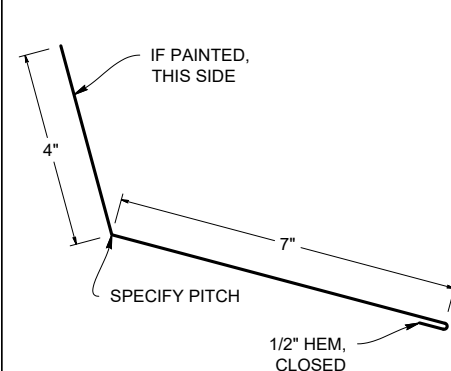

SCALE 1:4

S.O. 11.5"

WEIGHT: 8.6 LBS.


Easy-Lock™

Flashing and Details Selection

Flashing: 10' Standard




HEMMED ENDWALL (ELEWH)

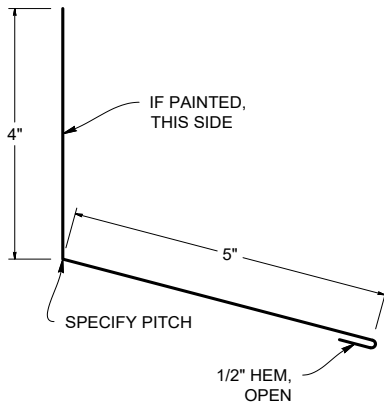


SCALE 1:3 S.O. 9.5" WEIGHT: 7.9 LBS.

FIELD NOTCHED ENDWALL (ELEWN)

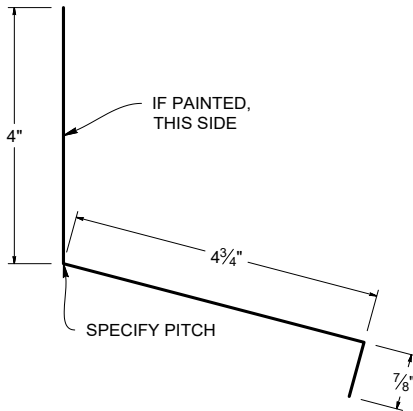


SCALE 1:3 S.O. 9.625" WEIGHT: 7.4 LBS.

EW-17 VENTED ENDWALL (ELEW17)

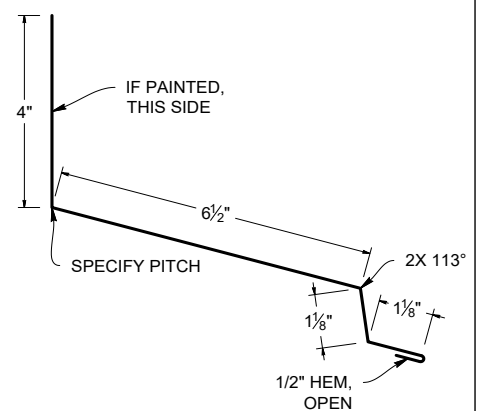


SCALE 1:4 S.O. 13.25" WEIGHT: 10.8 LBS.

SIDEWALL (ELSW)

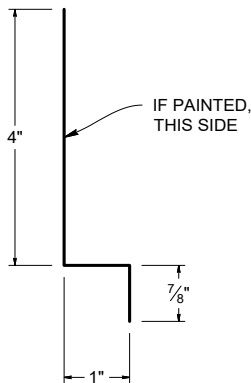


SCALE 1:3 S.O. 5.875" WEIGHT: 4.9 LBS.

COMPENSATING SIDEWALL (ELSWC)

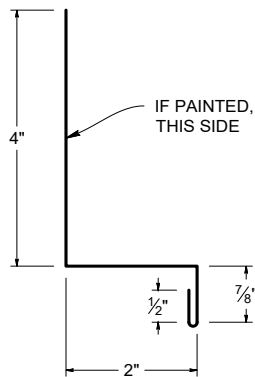


SCALE 1:3 S.O. 7.375" WEIGHT: 5.7 LBS.

WT VENTED ENDWALL FLASHING (WTEWV)

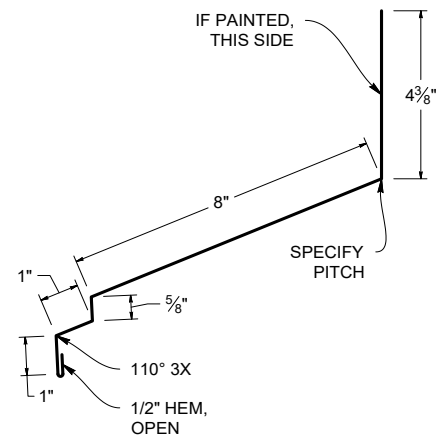

SCALE 1:5 S.O. 15.5" WEIGHT: 12.61 LBS.


5.5" PAN FLASHING (ELP5)

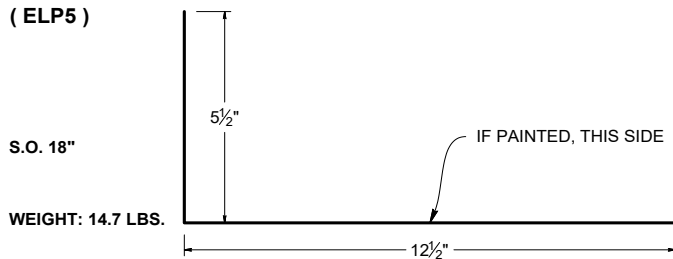

SCALE 1:5

WEIGHT: 14.7 LBS.

3.5" PAN FLASHING (ELP3)

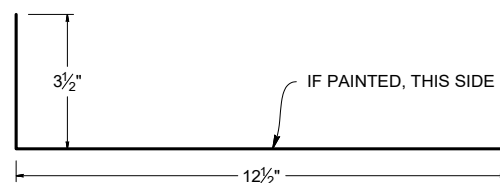

SCALE 1:5

S.O. 16"

WEIGHT: 13.1 LBS.

GUTTER HANGER (AGH6)

NON-VISIBLE / SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED



WEIGHT: 6.6 LBS.


SCALE 1:2

PAN (ELPAN)


S.O. 18"

WEIGHT: 14.6 LBS.

SCALE 1:3

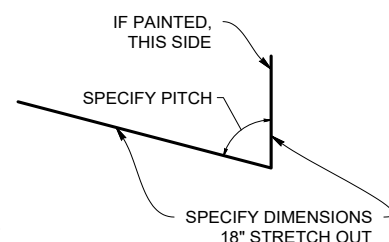


C-FLASHING (ELCF)

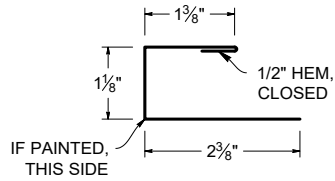


SCALE 1:3 S.O. 5.375" WEIGHT: 4.5 LBS.

ZEE CLOSURE (ELZC)

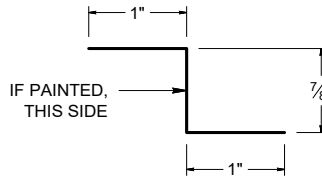

SCALE 1:2 S.O. 2.875" WEIGHT: 2.64 LBS.


ZEE CLOSURE ONLY IN 24 GA ZINCALUME (ELPZ)

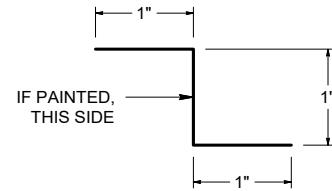

SCALE 1:2 S.O. 3" WEIGHT: 2.64 LBS.


4" PERF STRIP ONLY IN 24 GA ZINCALUME (ELPS)

 NON-VISIBLE SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED



SCALE 1:2 S.O. 4" WEIGHT: 2.5 LBS.


REVERSING STRIP (ELSR)

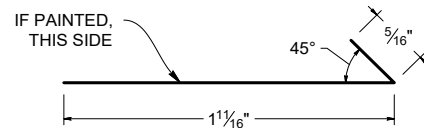

SCALE 1:1 S.O. 2" WEIGHT: 1.7 LBS.

OFFSET CLEAT (10') (ELOC)

 
NON-VISIBLE SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED



SCALE 1:2 S.O. 3" WEIGHT: 2.5 LBS.

GABLE CLEAT (10') (ELBGC)


NON-VISIBLE SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED

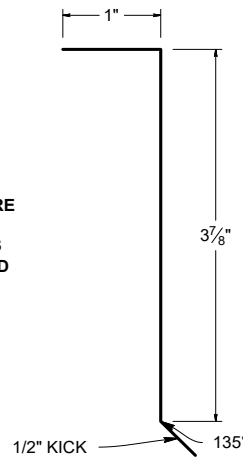

SCALE 1:2 S.O. 5.375" WEIGHT: 4.4 LBS.

PEAK CLEAT (10') (ELRECC)

NON-VISIBLE SUB-FLASHING ARE NOT PROVIDE IN SPECIFIC COLORS UNLESS SPECIFIED

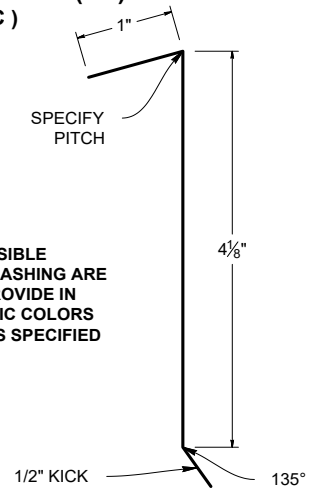


SCALE 1:2 S.O. 5.625" WEIGHT: 4.7 LBS.


EASY-LOCK END DAM

S.O. 8"

WEIGHT: 6.5 LBS.

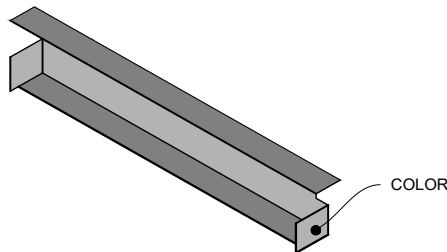


EASY LOCK OUTSIDE CORNER (ELCOA)

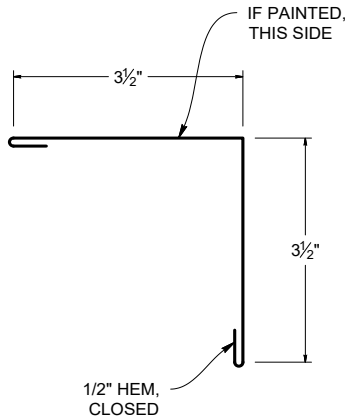


SCALE 1:3 S.O. 8" WEIGHT: 6.6 LBS

EASY LOCK INSIDE CORNER (ELCIA)

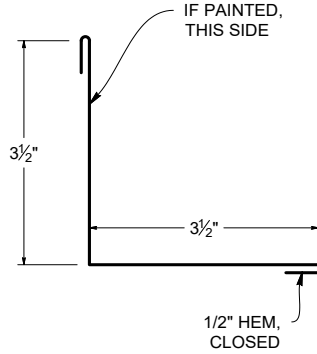


SCALE 1:3 S.O. 8" WEIGHT: 6.6 LBS

EASY LOCK BASE FLASHING (ELBF)

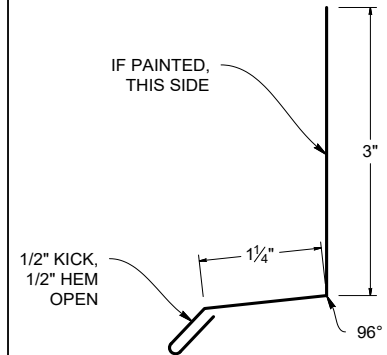


SCALE 1:2 S.O. 5.25" WEIGHT: 4.3 LBS

EASY LOCK OUTSIDE CORNER POST (ELCPO)

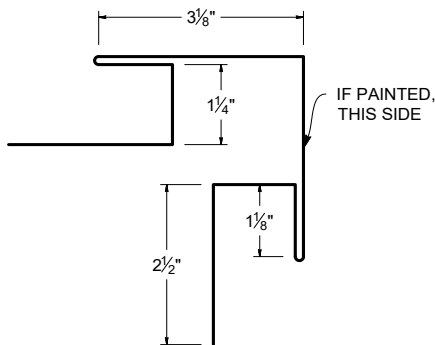


SCALE 1:3 S.O. 16" WEIGHT: 13.1 LBS

EASY LOCK INSIDE CORNER POST (ELCPI)

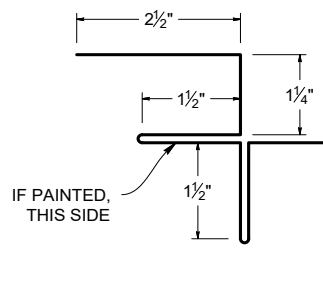


SCALE 1:3 S.O. 13.5" WEIGHT: 10.9 LBS

EASY LOCK ZEE FLASHING HEMMED (ELZFH)

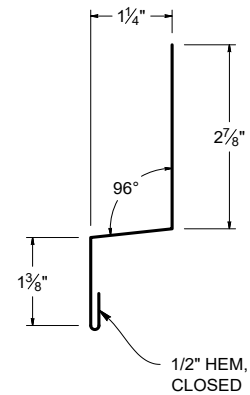


SCALE 1:3 S.O. 6" WEIGHT: 4.5 LBS

2 1/2 SIDE AND BOTTOM FLASHING (ELSB3)

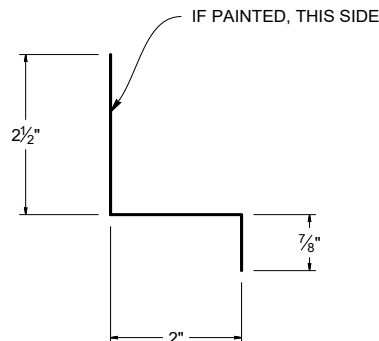

SCALE 1:3 S.O. 5.5" WEIGHT:

4 1/2 SIDE AND BOTTOM FLASHING (ELSB5)

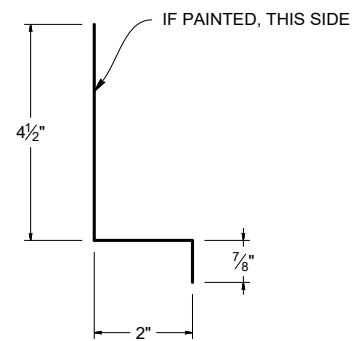

SCALE 1:4 S.O. 7.5" WEIGHT:

Custom Trim Order



Customer Name: _____ Job Name: _____

Gauge: _____ Color: _____ Status: ☐ Original ☐ Updated

Specify: ☐ Angles ☐ Color Side ☐ Dimensions ☐ Stretchout _____ Customer Initials

SO _____

A large grid area for drawing the custom trim, consisting of 20 columns and 30 rows of small squares.

Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

A large grid area for drawing the custom trim, consisting of 20 columns and 30 rows of small squares.

Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

A large grid area for drawing the custom trim, consisting of 20 columns and 30 rows of small squares.

Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

A large grid area for drawing the custom trim, consisting of 20 columns and 30 rows of small squares.

Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open


Custom Trim Order

Customer Name: _____ Job Name: _____

Gauge: _____ Color: _____ Status: ☐ Original ☐ Updated

Specify: ☐ Angles ☐ Color Side ☐ Dimensions ☐ Stretchout _____ Customer Initials

SO _____

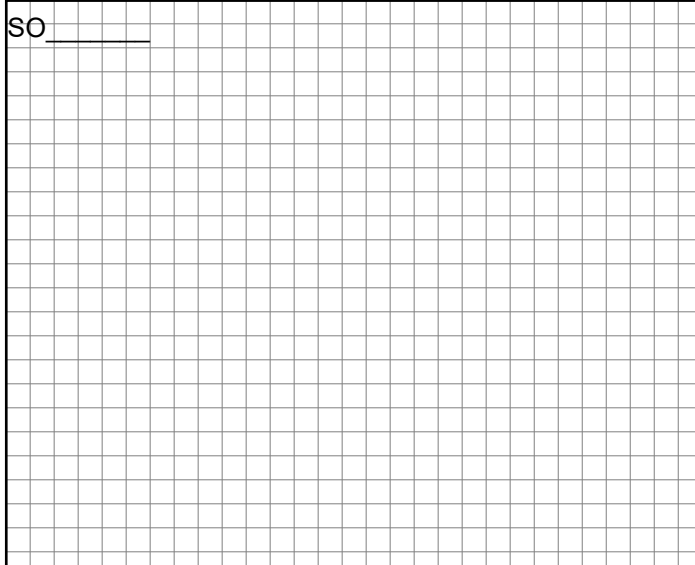


Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

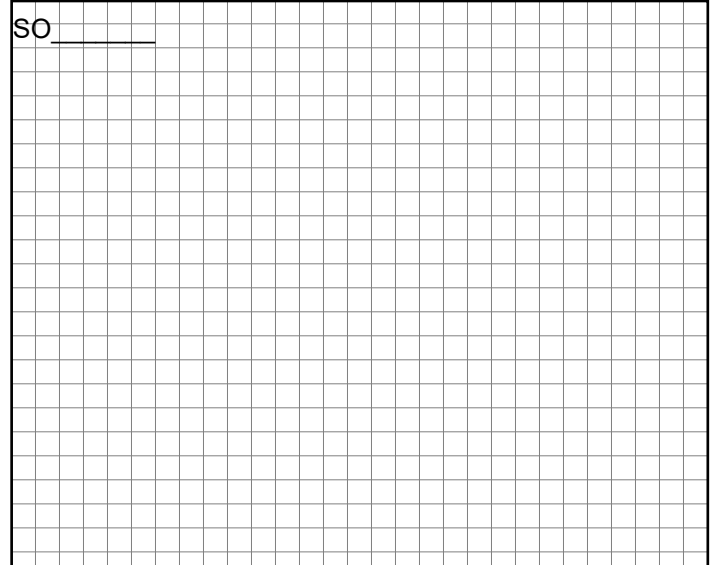


Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

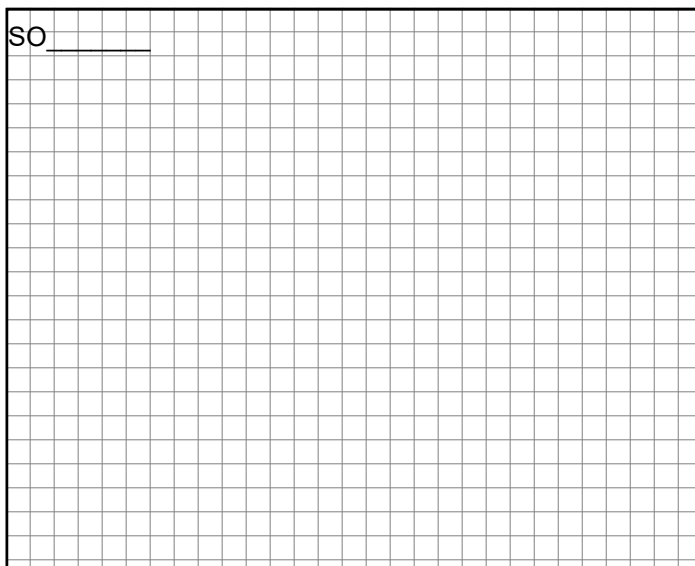


Dwg #: _____ Pitch: _____ # of Pieces: _____

Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

SO _____

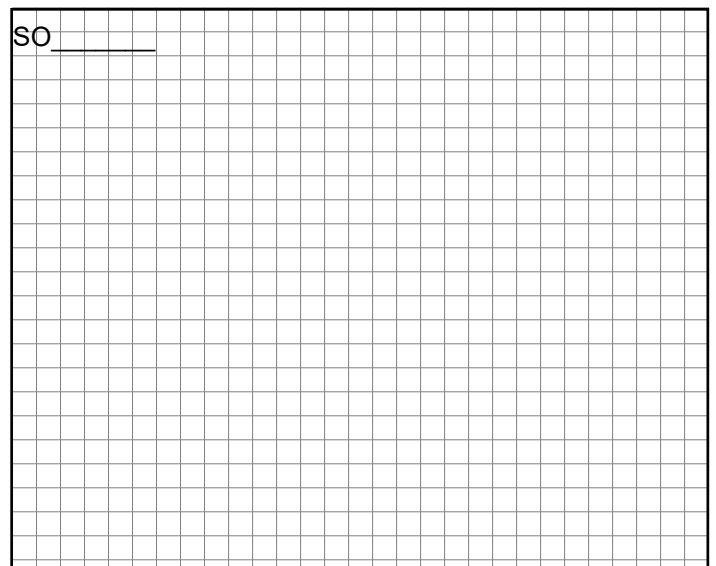


Dwg #: _____ Pitch: _____ # of Pieces: _____


Description: _____

Hems: ☐ Open ☐ Closed ☐ Slightly Open

Please provide a drawing for each flashing with precise measurements and angles

Fax to: 503-581-6877

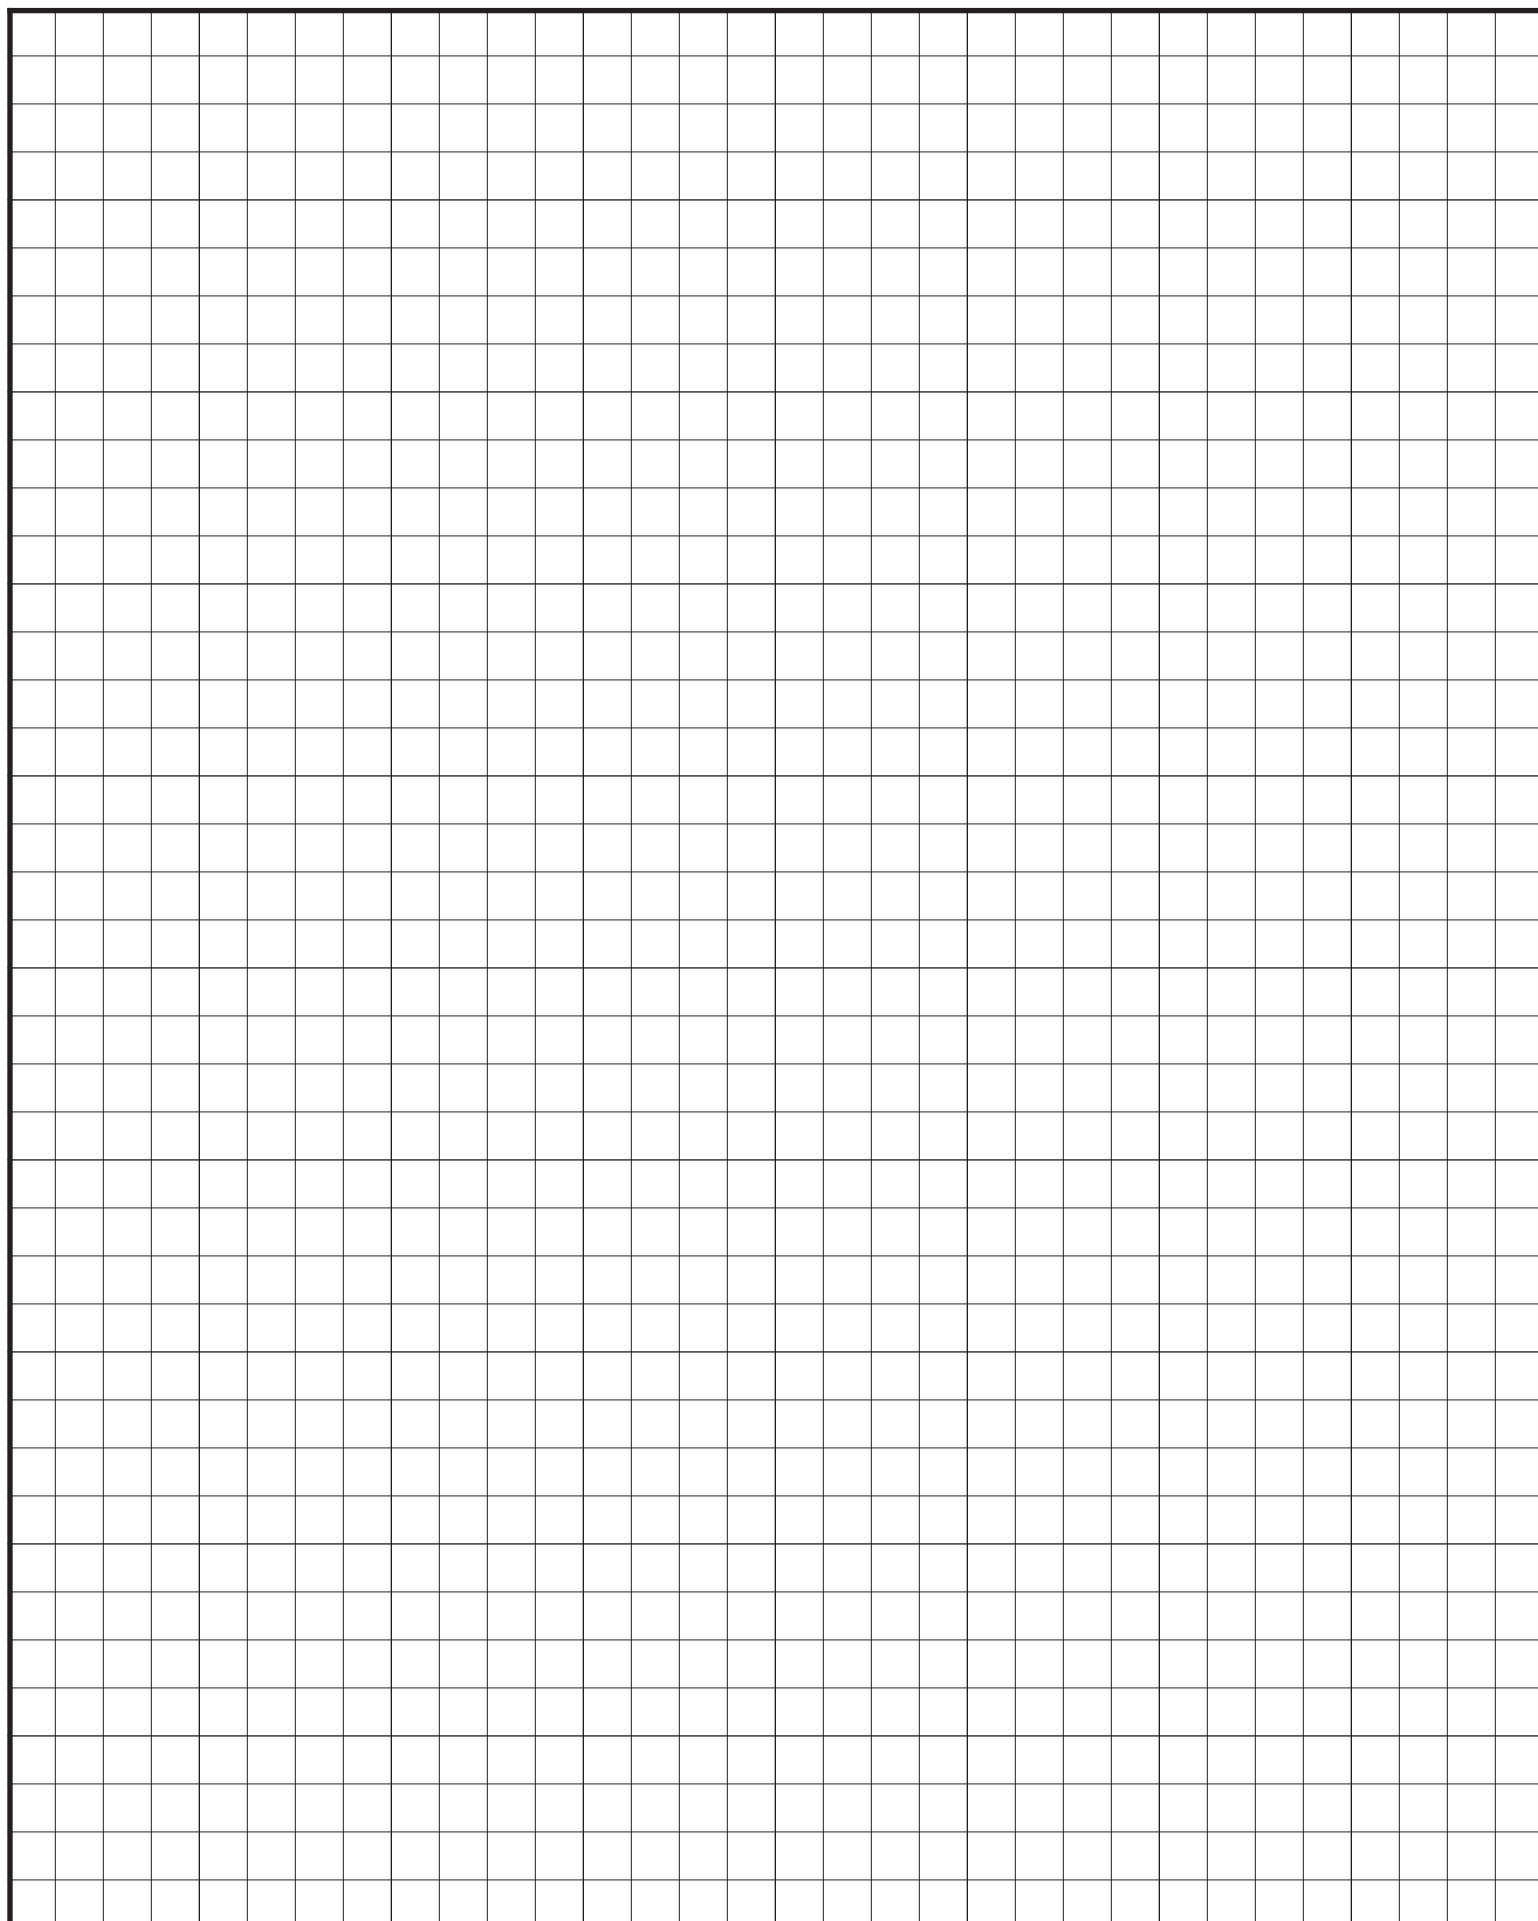

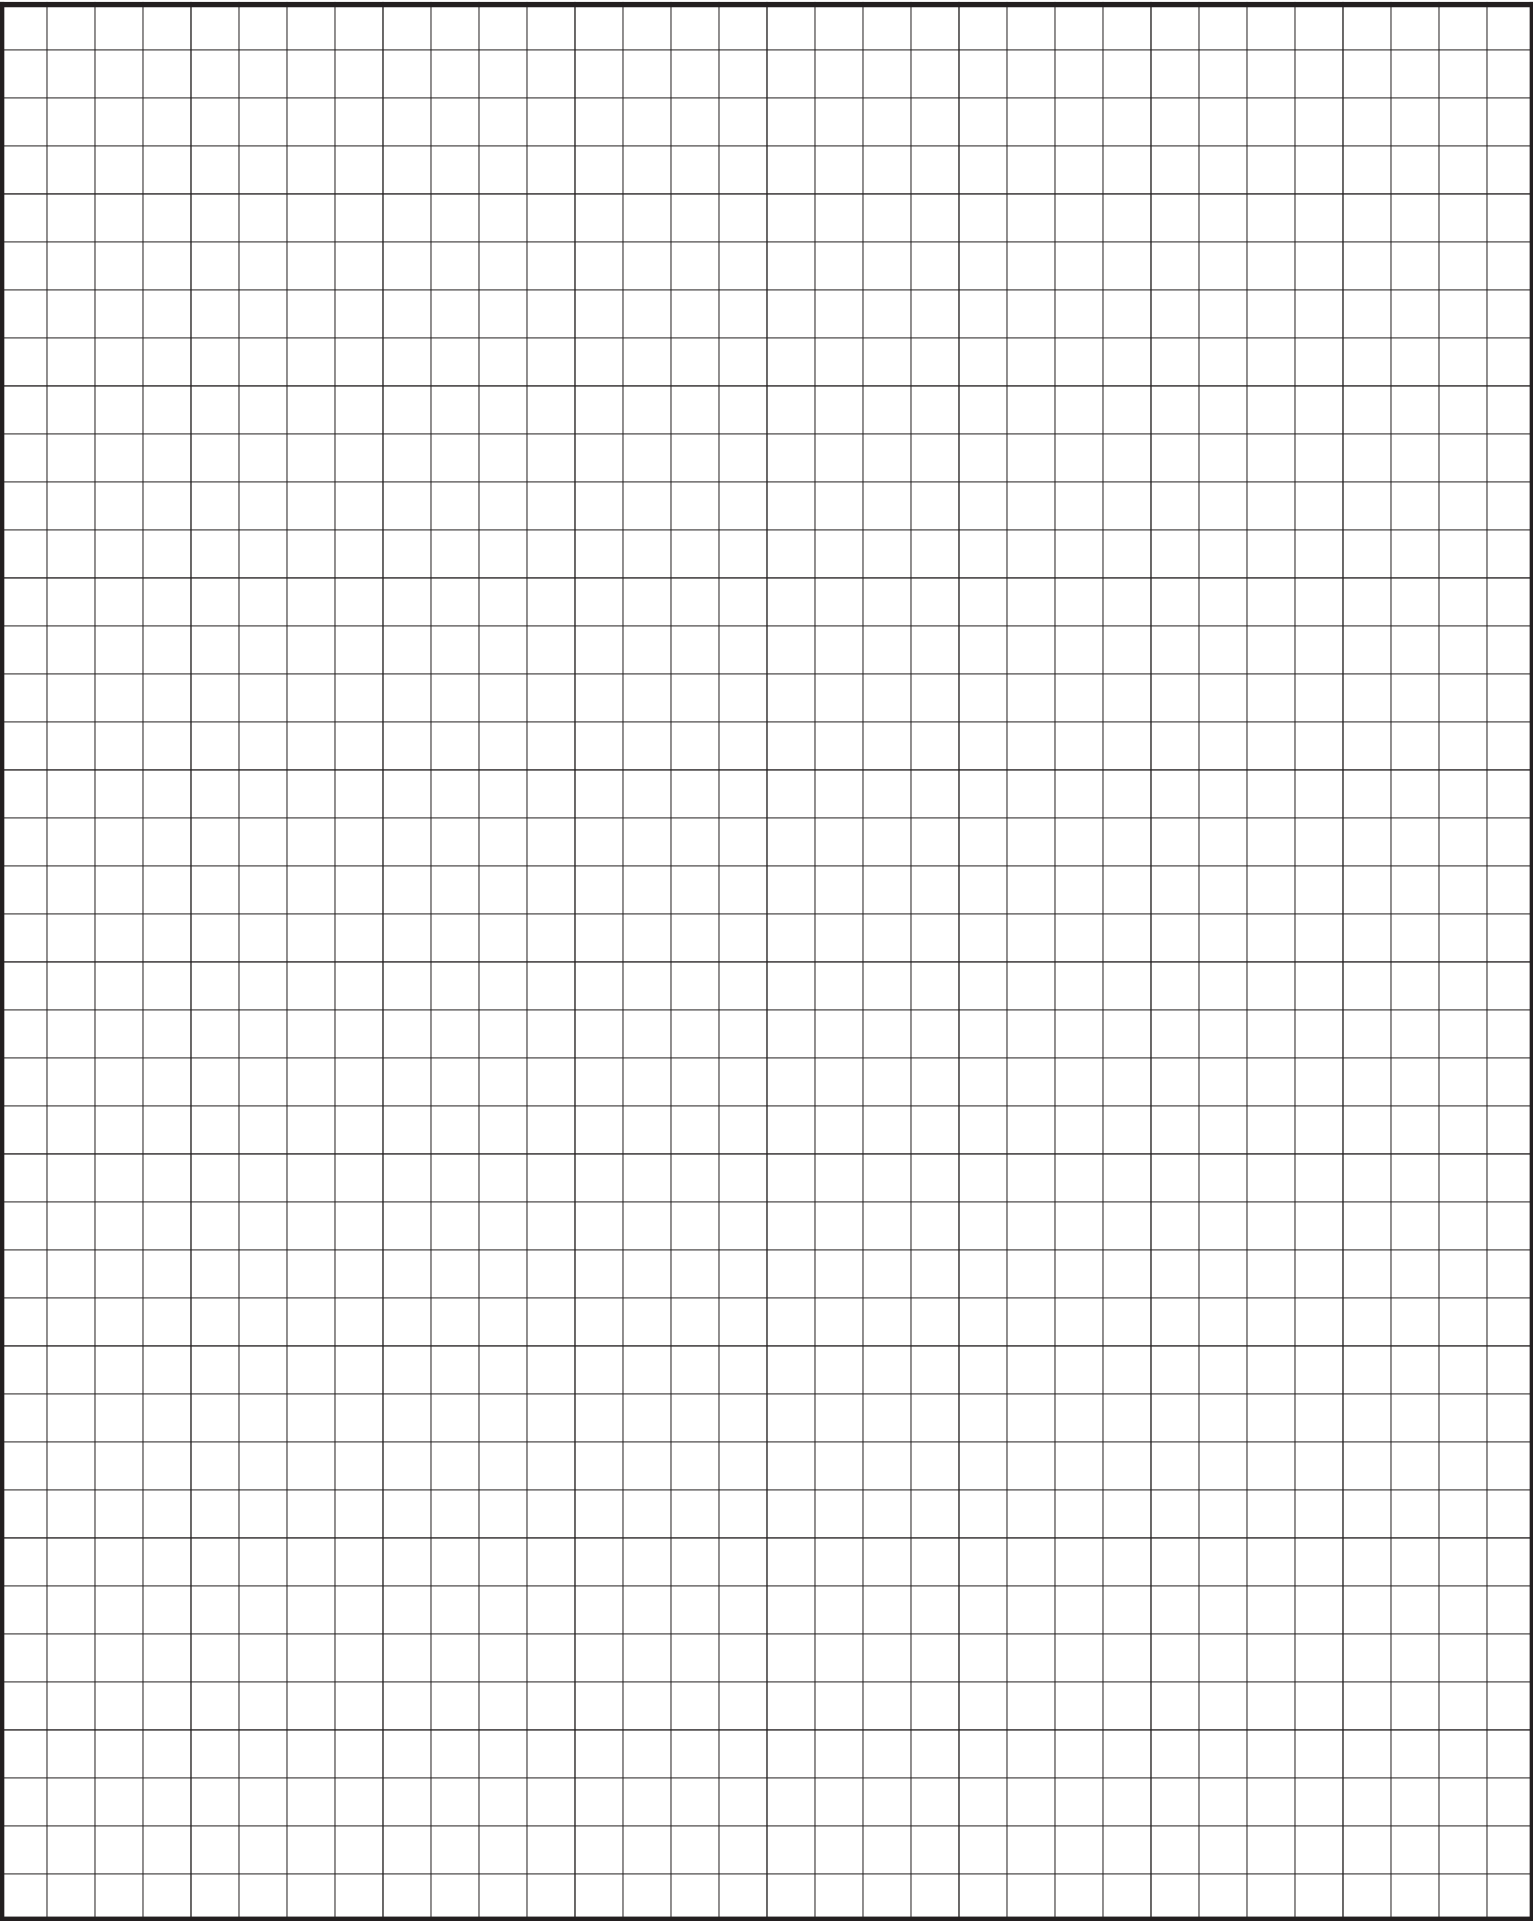



SALEM BRANCH

4566 Ridge Dr. NE
Salem, OR 97301

Office: 503-581-8338
Toll Free: 1-800-574-1388
Fax: 503-581-6877

SACRAMENTO BRANCH

3443 Airport Rd,
Sacramento, CA 95834

Office: 916-318-8844
Toll Free: 1-800-574-1388
Fax: 916-993-4123

SPOKANE BRANCH

1010 N Nelson St.,
Spokane, WA 99202
www.go-rsp.com

Office: 509-535-8667
Toll Free: 800-238-4057
Fax: 509-535-8682

AUBURN BRANCH

2601 C St SW,
Auburn, WA 98001

Office: 206-900-9923
Toll Free: 1-800-574-1388
Fax: 253-804-3545

RIVERSIDE BRANCH

4880 Felspar St.
Riverside, CA 92509

Office: 323-407-7457
Toll Free: 1-877-504-1594