


Exposed Fastener Install


Fastener Spacing and Placement Instructions




Installation Direction \longrightarrow \longleftarrow Prevailing Weather

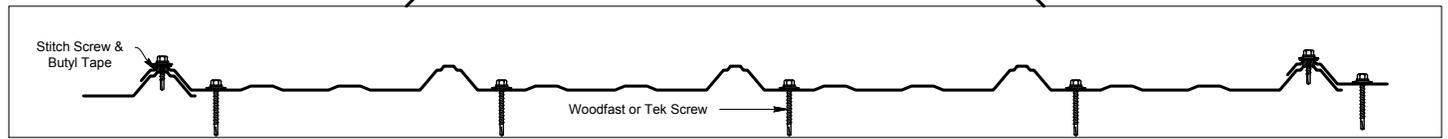


Tuff Rib

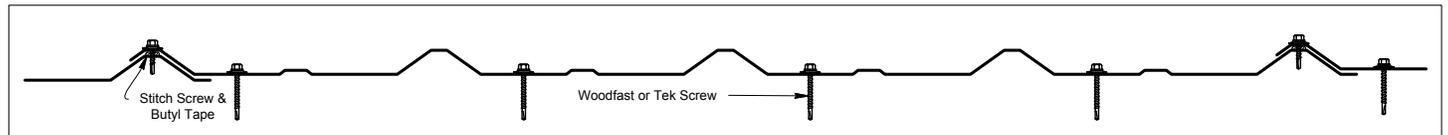


T-3™

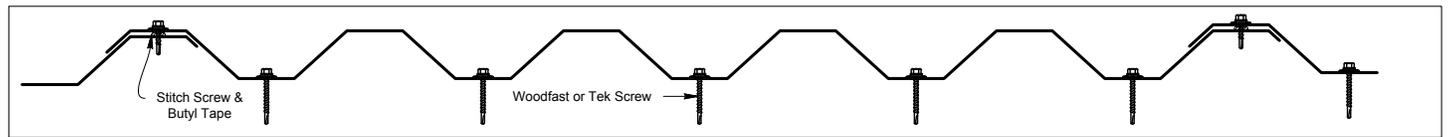


HR-34™

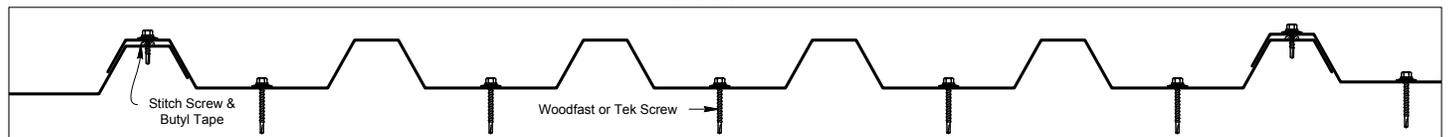


BR-36

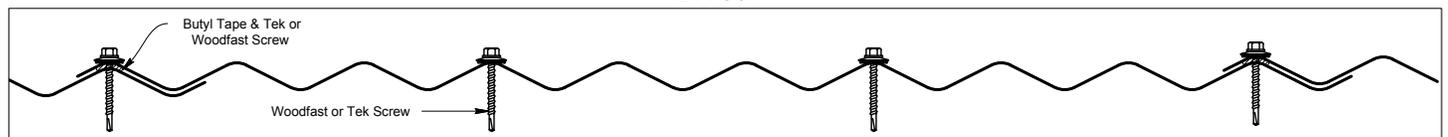


2.5 Corrugated

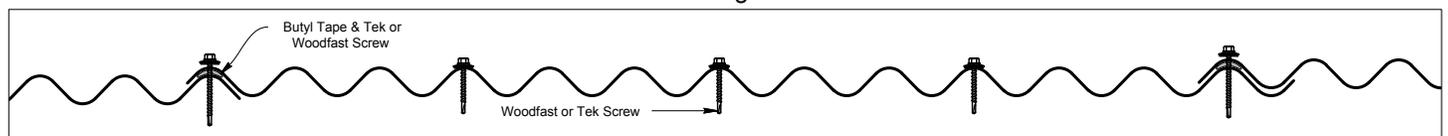


Classic $\frac{7}{8}$ Corrugated™ Roof Installation

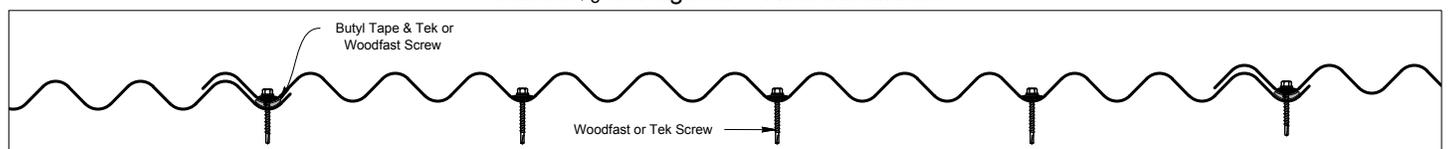


Classic $\frac{7}{8}$ Corrugated™ Wall Installation

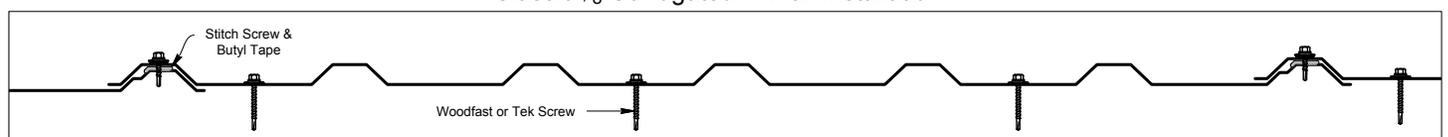

GR7™ / GR5™

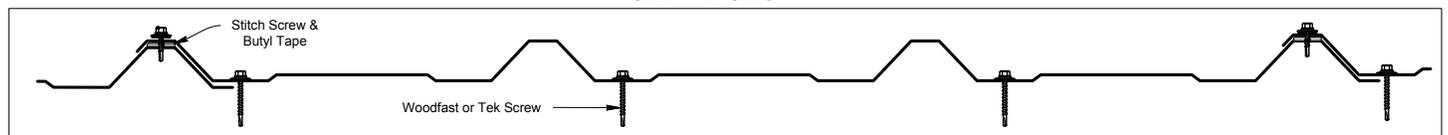

PBR / Marion R

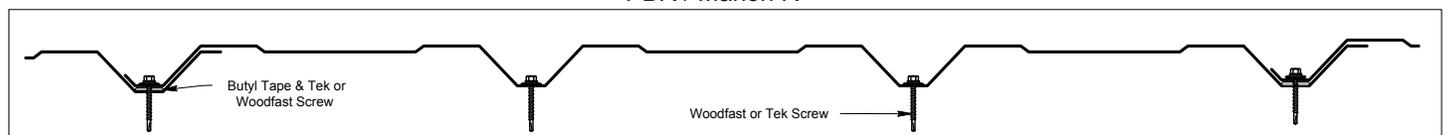

PBR / Marion R Reverse Roll